



ASSEMBLY / OPERATOR'S MANUAL



GMD 400 - 500 GMD 400 HD - 500 HD MULTIDISC MOWER



PLEASE READ CAREFULLY
BEFORE USING THE MACHINE

N° 95001 C.GB - 03.2003

DEAR OWNER,

In buying a **KUHN** machine you have chosen wisely. Into it have gone years of thought, research and improvements. You will find, as have thousands of owners all over the world, that you have the best that engineering skill and actual field testing can produce. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into it.



This manual contains all the necessary information for you to receive full efficiency from your machine. The performance you get from this machine is largely dependant upon how well you read and understand this manual and apply this knowledge. Please **DO NOT ASSUME THAT YOU KNOW HOW TO OPERATE AND MAINTAIN YOUR MACHINE** before reading this manual carefully. **KEEP THIS MANUAL AVAILABLE FOR REFERENCE.**

Your **KUHN** dealer will instruct you on the general operation of your machine. He is interested that you get the best performance possible and will be glad to answer any special questions that may arise regarding the operation of the **KUHN** machine.

Your **KUHN** dealer can offer a complete line of genuine **KUHN** service parts. These parts are manufactured and carefully inspected in the same factory that builds the machine to assure high quality and accurate fitting of any necessary replacements.

When ordering service parts it is important that you indicate the type of machine concerned and its serial number.

For this reason please complete the model identification plate diagram below with the required information. This will provide you with an easy reference for future service parts orders.

	KUHN S.A.
	67700 SAVERNE - FRANCE
TYPE _____	N° _____
MASSE XXXX kg	
	
*XXXXXXXX XXXXX *	MADE IN FRANCE

ABOUT IMPROVEMENTS

KUHN is continually striving to improve its products and, therefore, reserves the right to make improvements or changes when it becomes practical to do so, without incurring any obligations to make changes or additions to the equipment sold previously.

CONTENTS

Safety	2
Safety decals	9
Assembly instructions	11
Technical specifications	12
General information	17
Fitting to the tractor	18
P.T.O. shaft	20
Working position and adjustments	21
Transport and parking the machine	24
Operating the mower	25
Lubrication	26
Adjustments and maintenance	28
Optional equipment	33
Trouble shooting guide	35
Storing the mower	36
Limited warranty	38

SAFETY



The symbol above is used throughout this manual every time recommendations are made concerning your safety, the safety of others, or the good operation of the machine. These recommendations must be made known to all machine operators.

DESIGNATED USE OF THE MACHINE

The **GMD 400 - 500 - 400 HD - 500 HD** Disc Mowers must only be used for the work which they have been designed: mowing on the ground of hay fields, grass silage fields and improved pastures for the purpose of harvesting fodder for feeding livestock.

The manufacturer is not held liable for any damage resulting from machine applications other than those specified by the manufacturer.

Any use other than the designated operation is at the risk and responsibility of the operator.

Designated use of the machine also means :

- following operation, maintenance and repair recommendations given by the manufacturer ;
- using only genuine spare parts, equipment and accessories as designated by the manufacturer.

The **GMD 400 - 500 - 400 HD - 500 HD** Disc Mowers must only be operated, maintained and repaired by competent persons who are familiar with machine specifications and operation and are aware of any danger involved.

The operator must imperatively respect current legislation concerning :

- accident prevention,
- work safety,
- public traffic circulation.

All safety advice indicated on the machine must be strictly observed.

The manufacturer is not held liable for any damage resulting from machine modifications carried out by the operator himself or by a third party without previous written agreement from the manufacturer.

GENERAL SAFETY RECOMMENDATIONS

Before operating the machine, always ensure that tractor and machine are in accordance with work safety and road traffic regulations.

BASIC PRINCIPLES

1. In addition to the recommendations given in this manual, legislation on work safety and accident prevention must also be respected.
2. Advice is indicated on the machine, specifying safety recommendations in order to prevent accidents.
3. Before travelling on public roads, the operator must ensure that the machine conforms to road traffic regulations.
4. Before starting work, the operator must be familiar with all machine controls, handling devices and their functions. Once at work, it is too late to do so !
5. Use a tractor equipped with a safety cab. Keep windows and roof hatch closed for reduced sound level while operating the PTO driven implement.
6. Before starting up the machine and beginning work, check the surrounding area (beware of children !). Make sure there is sufficient visibility. Keep all people and animals away from the danger zone of the machine (risk of projection!).
7. Carrying people or animals on the machine when working or in transport is strictly forbidden.
8. Machine must only be attached to tractor using means provided and in accordance with current safety standards.
9. When attaching or removing the machine, place the parking stand into the corresponding position.
10. Special care should be taken when attaching or removing the machine from the tractor.
11. Before attaching the machine, ensure that the front tractor axle is sufficiently ballasted. Ballast is to be placed on the supports provided in accordance with instructions of the tractor manufacturer.
12. Do not surpass the maximum axle load or the overall transport weight as prescribed by the tractor manufacturer.
13. Do not surpass the maximum transport width authorized by road traffic regulations.
14. Before transporting the machine on public roads, ensure that all legally required guards and indicators (lights, reflectors ...) are in place and in good operation.
15. All operating controls (cords, cables, rods ...) must be positioned so that they cannot be set off accidentally, risking accident or damage.
16. Before transport on public roads, locate the machine into its transport position as instructed in this operator's manual.
17. Never leave the tractor seat while the machine is operating.

18. Drive speed must be adapted to ground conditions as well as roads and paths.
Always avoid abrupt changes of direction.
19. Precision steering, tractor adherence, road holding and efficient braking are influenced by the type of implement, weight, ballast of front axle, ground or road conditions. It is therefore of utmost importance to be cautious in every given situation.
20. Be particularly cautious when turning corners, paying attention to machine overhang, length, height and weight.
21. Keep clear of the machine operating area.
22. **WARNING !** Danger of crushing and shearing can exist when components are operated by hydraulic or pneumatic controls.
23. Before leaving the tractor or before adjusting, maintaining or repairing the machine, turn off the engine, remove ignition key and wait until all moving parts have come to a complete stop.
24. Do not stand between the tractor and the machine unless the hand brake is tight and/or stops have been placed under the wheels.
25. Before any adjustments, maintenance or repairs are carried out, ensure that the machine cannot be started up accidentally.

PRECAUTIONS TO BE TAKEN BEFORE OPERATING THE MACHINE

1. Do not wear loose clothing which could be caught up in moving parts.
2. Wear the individual protection equipment corresponding to the work which is planned (gloves, shoes, eye protection, helmet, ear protectors...).
3. All operating controls (cords, cables, rods ...) must be positioned so that they cannot be set off accidentally, causing accident or damage.
4. Before operating the machine, check the tightness of all nuts and bolts, particularly on rotating parts (blades, tines, knives, spades ...)
5. Before operating the machine, ensure that all safety guards are firmly in place and in good condition. If worn or damaged, replace immediately.

ATTACHMENT

1. When attaching or removing the machine from the tractor, position hydraulic lift control lever in such a way that it cannot be set off accidentally.
2. When attaching the machine to tractor 3-point linkage, ensure that diameter of link pins corresponds to diameter of ball joints.
3. **WARNING !** Danger of crushing and shearing can exist in the lifting zone of the 3-point linkage !
4. Do not stand between the tractor and the machine when operating the outer control lever of the lift mechanism.
5. In transport, the machine lift mechanism should be stabilized by tractor tie rods to avoid floatation and side shifting.
6. When transporting the machine in the raised position, lock the lift control lever in place.
7. Do not operate the machine with narrow wheeltrack tractors when working or transporting on uneven or sloping terrain.

POWER TAKE-OFF

1. Only use PTO shaft supplied with the machine or recommended by the manufacturer.
2. PTO guards must always be in place and in good condition.
3. Check for correct PTO overlap when at work and in transport.
4. Before attaching or removing the PTO shaft, disengage PTO shaft, turn off engine and remove ignition key.
5. If a primary PTO shaft is equipped with a slip clutch or a free wheel, these must be fitted on the machine PTO.
6. Ensure that PTO shaft is always correctly fitted and locked into place.
7. Make sure guards are correctly in place and secured with the safety chains provided.
8. Before engaging PTO, ensure that PTO frequency and direction are in accordance with manufacturer's recommendations.
9. Before engaging PTO, keep all people and animals clear from the machine.
10. Never engage PTO shaft when tractor motor is turned off.

11. Never surpass PTO angle recommended by the manufacturer.
12. WARNING ! Rotating elements can continue turning momentarily after PTO is disengaged. Keep clear until all rotating elements are at a standstill.
13. When removing the machine, locate PTO shaft on the supports provided.
14. Fit safety cap on tractor PTO.
15. Replace any worn or damaged PTO guards immediately.

HYDRAULIC SYSTEM

1. WARNING ! Hydraulic system is under pressure (maximum working pressure : 200 bars/2900 psi).
2. When fitting hydraulic motors or cylinders, ensure that connections have been made correctly, as per manufacturer's instructions.
3. Before connecting hoses to the tractor hydraulics, ensure that tractor and machine circuits are not under pressure.
4. It is strongly recommended that the operator marks the hydraulic connections between tractor and machine to avoid making a wrong connection. WARNING ! Functions could be reversed (for example : lift/lower).
5. Regularly check the hydraulic hoses ! Replace the hydraulic hoses every 5 years. Damaged or worn hoses must immediately be replaced .
When replacing the hydraulic hoses, make sure to use hoses with the specifications and quality recommended by the manufacturer of the machine.
6. Should a leak be found, take all necessary precautions to avoid accidents.
7. Any liquid under pressure (particularly oil from hydraulics) can penetrate the skin and cause severe injury. If injured, see a doctor immediately, there could be danger of infection.
8. Before any adjustments, maintenance or repairs are carried out, lower the machine, depressurize the circuit, turn off the engine and remove ignition key.

MAINTENANCE

1. Before checking any machine malfunction and before adjusting, maintaining or repairing the machine, disengage PTO, turn off engine and remove ignition key.
2. Check tightness of nuts and bolts regularly. Retighten if necessary.
3. If the machine is raised, prop it up in a stable position before carrying out any maintenance work.
4. When replacing a working part, wear protection gloves and only use standardized tools.
5. It is forbidden to discard any oil, grease or filters. These must be given to waste disposal organisations to protect the environment.
6. Disconnect power source before any work is done on the electric system.
7. Check safety guards regularly, particularly those that are subject to wear. Replace immediately if damaged.
8. Spare parts used must be in accordance with specifications and standards as defined by the manufacturer. Use only genuine KUHN parts !
9. Before any electric welding is carried out on tractor or attached machine, disconnect generator and battery terminals.
10. Repairs on elements under pressure or tension (springs, accumulators etc.) must only be carried out by competent persons with standardized equipment.


SPECIAL SAFETY RECOMMENDATIONS

1. Use a tractor equipped with an enclosed cab with windows made of safety glass and kept closed. It is recommended to fit polycarbonate screens inside the tractor safety cab's side and rear windows or to install mesh guards on the exterior of them.
2. Stay a safe distance away from the mower when discs are rotating.
3. For safe machine operation, it is imperative that cutting tools be fitted in accordance with the manufacturer's recommendations. Use only the tool outfit supplied with the machine.
4. Each time before using the mower, inspect condition of cutting elements (knives, discs). Replace any missing, worn or damaged cutting elements immediately. Use only genuine KUHN spare parts.
5. To avoid creating dangerous out of balance forces, always replace missing, damaged or worn knives in pairs.


6. When replacing knives or discs, systematically inspect their securing elements as per the manufacturer's recommendations.
7. Regularly inspect the disc mower's protection cover. Worn or damaged protection covers must be replaced immediately.
8. Protection devices (such as guards, shields etc.) are intended to prevent stones, rocks or other foreign objects from being projected. They also prevent access to the machine's danger zones. Therefore, it is imperative that protection devices are put in place and properly secured each time before using the machine.
9. Crushing and shearing zones which could cause serious bodily injury when changing the machine from transport to work position and vice versa may exist. To prevent possible injury, be extra careful when maneuvering and ensure that everyone is at a safe distance away from the machine.
10. PTO drive to the mower must never be engaged unless the cutterbar skid shoes are in contact with the ground and the protective cover is folded down.
11. Ground of the pastures to be mown must be free of foreign objects.
12. Even when the machine is used in accordance with its purpose, objects may be projected. It is therefore imperative that everyone be kept away from the danger zone, that extra care is taken and that extra precaution (such as safety indicators) be taken when mowing pastures alongside roads or near public areas (parks, schools etc.).
13. Never mow in reverse.
14. When disengaging the PTO drive, moving parts continue to rotate for some time. Wait for all moving parts to come to a complete stop before approaching the machine.
15. If an obstruction is hit, stop the tractor immediately, disengage PTO drive, turn off engine, remove ignition key and wait for all moving parts to come to a complete stop.
Check the entire machine for any damage before resuming work.
16. It is strongly recommended to have your machine checked by your dealer after each season, especially blades and discs and their fixing devices (nuts, bolts etc.).

SAFETY DECALS

THE FOLLOWING SAFETY PICTORIALS HAVE BEEN PLACED ON YOUR MACHINE IN THE AREAS INDICATED. THEY ARE INTENDED FOR YOUR PERSONAL SAFETY AND FOR THE SAFETY OF THE PEOPLE WORKING WITH YOU. THE TEXT SHOWN ON THEM GIVES THEIR PRECISE MEANING. KEEP THE PICTORIALS LEGIBLE. IF THEY ARE NOT, REPLACE THEM.

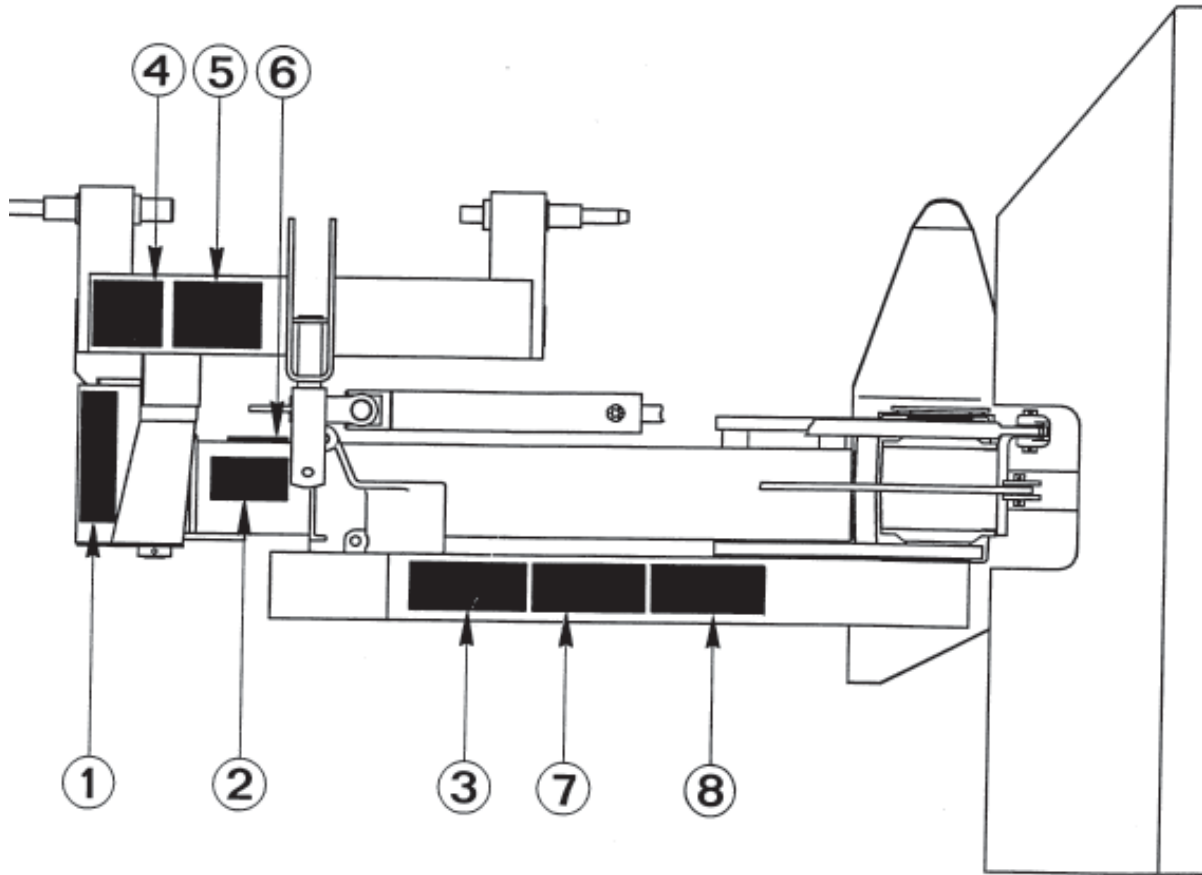


①

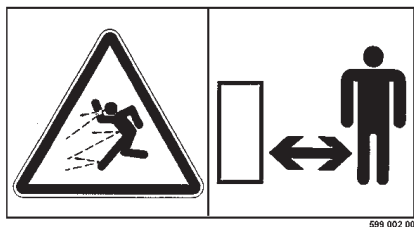


ROTATING TOOLS !
Objects and debris can be thrown a long distance.
Keep a safe distance from the machine.




②

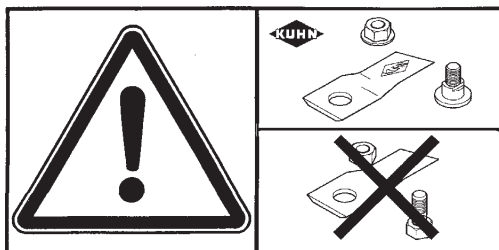

Use only genuine KUHN service parts

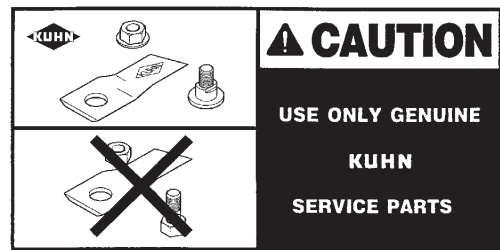

③

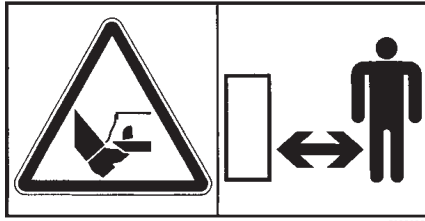

ROTATING TOOLS !
Stay clear of mower knives as long as engine is running with PTO connected.

59900800




! WARNING

ROTATING TOOLS
STAY CLEAR OF MOWER KNIVES AS LONG AS TRACTOR ENGINE IS RUNNING WITH PTO CONNECTED


59900820

④

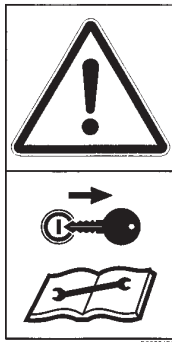

Before adjusting, maintaining or repairing the machine, turn off the engine, remove ignition key and wait until all moving parts have come to a complete stop.


! CAUTION

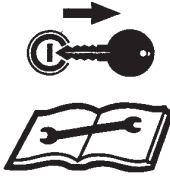

BEFORE ADJUSTING, MAINTAINING OR REPAIRING THE MACHINE, TURN OFF THE ENGINE, REMOVE IGNITION KEY AND WAIT UNTIL ALL MOVING PARTS HAVE COME TO A COMPLETE STOP

59900470


⑤

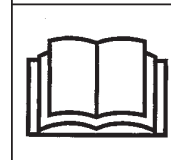

Before starting the machine, read operator's manual and safety instructions.

59900070

! CAUTION

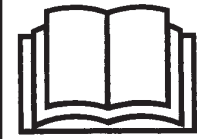

BEFORE STARTING THE MACHINE READ OPERATOR'S MANUAL AND SAFETY INSTRUCTIONS. REQUEST COPY IF NOT SUPPLIED.


59900070

⑥




09915001

⑦

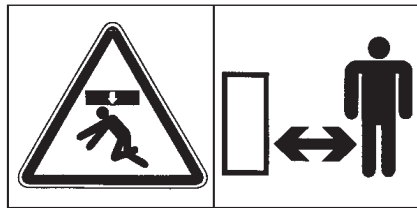

Crushing hazard! Stay a safe distance from the machine.

599 005 00

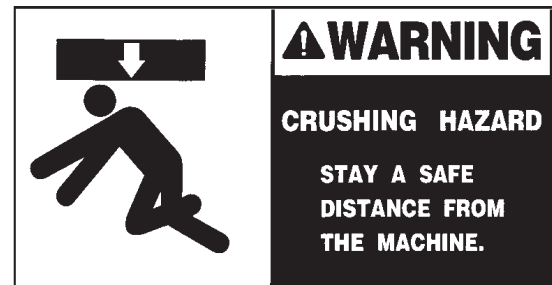


! WARNING

CRUSHING HAZARD

STAY A SAFE DISTANCE FROM THE MACHINE.


599 005 20

⑧

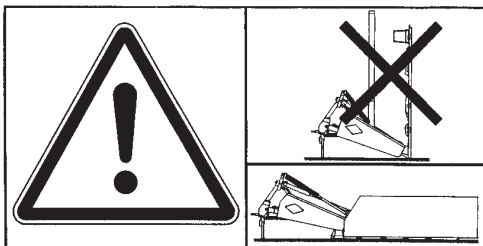

MACHINE MUST ALWAYS BE PARKED WITH THE CUTTERBAR IN HORIZONTAL POSITION.

59910400

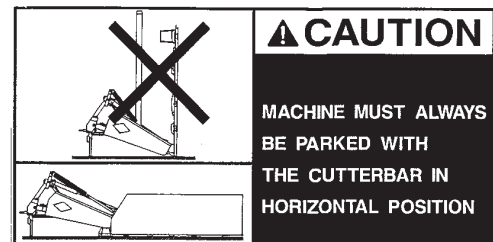

! CAUTION

MACHINE MUST ALWAYS BE PARKED WITH THE CUTTERBAR IN HORIZONTAL POSITION

59910420

TECHNICAL SPECIFICATIONS

TYPE	GMD 400 - 400 HD	GMD 500 - 500 HD
Number of discs	4	5
Width of cut	1.60 m (5' 3")	2.00 m (6'7")
PTO power requirement	21 kW (28 hp)	25 kW (35 hp)
Disc frequency (at 540 min ⁻¹)	2986 min ⁻¹	
Width in transport position	0.23m (9") wider than tractor width *	
Lift system	hydraulic	
Weight: - GMD 400 - 500	380 kg (836 lbs)	427 kg (939 lbs)
- GMD 400 HD - 500 HD	386 kg (849 lbs)	434 kg (955 lbs)
Bevel gearbox oil capacity	0.25 litre	
Oil quality : SAE 80 W EP (GL4)	0.53 US Pint / 0.43 Imp Pint	
Cutterbar oil capacity	1.4 litre	1.7 litre
Oil quality : SAE 80 W EP (GL4)	3.0 US Pint / 2.5 Imp Pint	3.6 US Pint / 3.0 Imp Pint

* Applicable if machine is attached in such a way that a 5 cm / 2" distance «A» is respected (see page 18).

ASSEMBLY



To facilitate shipping of the **GMD 400 - 500 - 400 HD - 500 HD** disc mowers, certain parts or assemblies are partially disassembled to reduce bulk. To assemble these parts proceed as follows :

1. Mounting chassis to cutterbar

Make sure that the bore of nylon bushings is clean and well greased. Remove protective paint from the front cover of bevel gearbox where bushings make contact. Chock chassis. Pull parking stand (C) outwards and swing it down. Attach chassis to cutterbar with 2 self-locking screws (B) (M 16 x 50) and 2 washers (A) (dia. 16.5 x 60) as shown in photo 1 and figure 1. Torque : 30 daNm/220 ft.lbs.




For your safety be sure to chock chassis correctly.

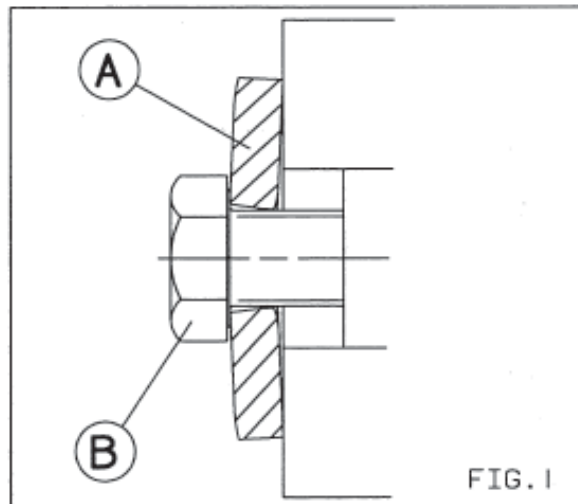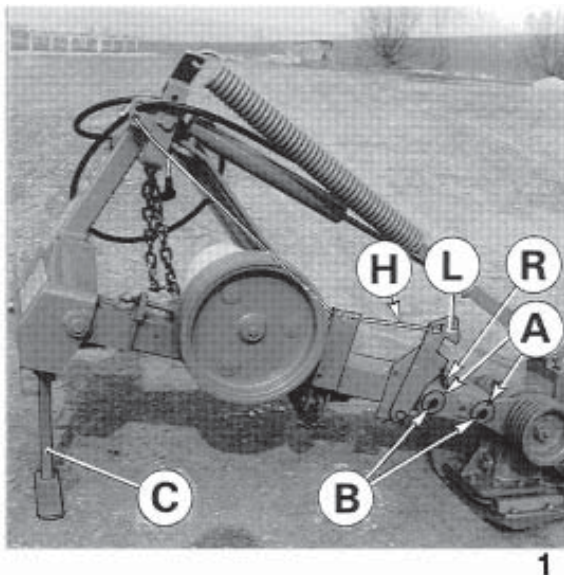


2. Assembly of belt shield, belts and hydraulic hose

- Install pawl (L) and manoeuvring cord (H) as shown on photo 1.
- Install the inner belt shield (D) (photo 2) in place and secure with the 3 spacer bolts (E) taped on the stop chain Torque to **5 daNm / 40 ft.lbs.**
- Install closing plate (F) equipped with elastic nut as shown in photo 2.
- Attach the latch (L) tension spring (R) (photo 1) to the inner belt shield at (O) (photo 2) using a split pin (dia. 4 x 22 mm) provided.
- Fix hose (Z) to cylinder using a hollow screw and a copper washer on each side of the banjo joint (photo 2).

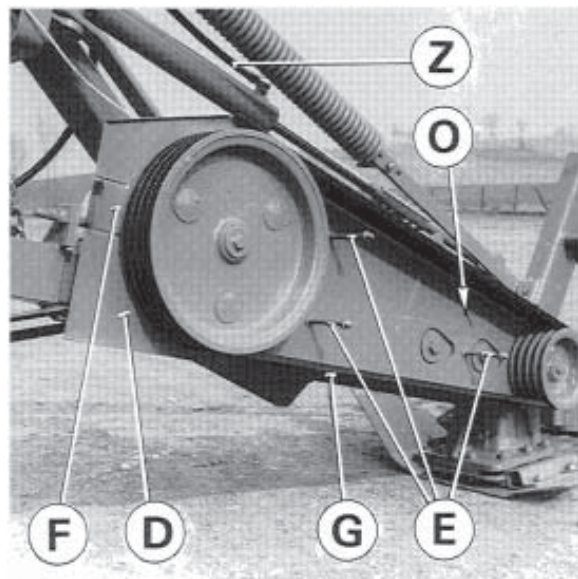


- Install belts (G) (photo 2) on pulleys and tension them by loosening the 2 nuts (N) and tightening nut (S) (photo 3).
- Belt tension is correct if deflection does not exceed 10 mm (2/5") when belt is pressed upon with a force of 3.5 daNm (8 ft.lbs) at mid distance between pulleys.
- When correct tension has been obtained, tighten the 2 nuts (N) (photo 3).

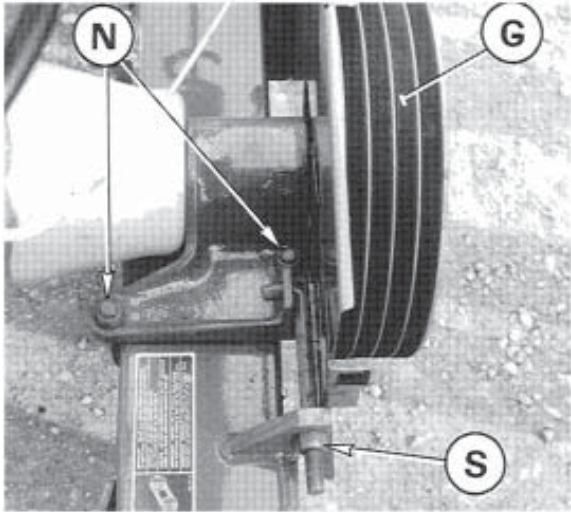

3. Frame pipe and lift bracket assembly


- Attach frame pipe (A) (photo 5) to bevel gearbox using 4 (M12x35) bolts (B). Tighten to 14 daNm/100 ft.lbs.

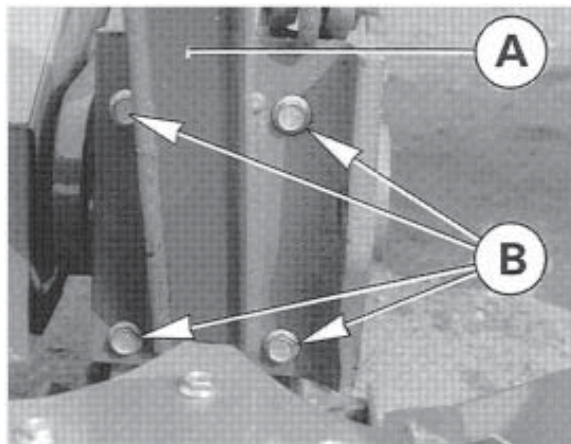


inner swath board assembly


- Place the cutterbar in the vertical position. Connect compensating spring rod (F) (photo 7) to frame pipe using axle and 2 split pins provided.

- Attach outer belt shield (E) with 3 washers and 3 cap nuts (I) (photo 4). Torque to 5 daNm / 40 ft.lbs.
- Assemble closing plate (F) (photo 2) and outer belt shield with one self-locking screw (K) (M 8 x 16) (photo 4).

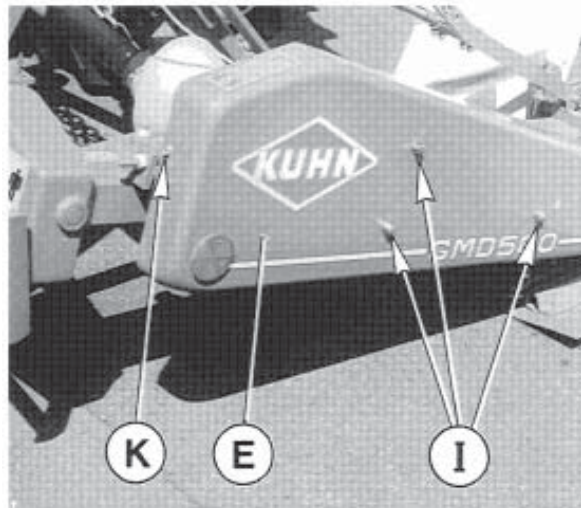


- Attach lift bracket (C) (photo 6) using axle and split pins provided.

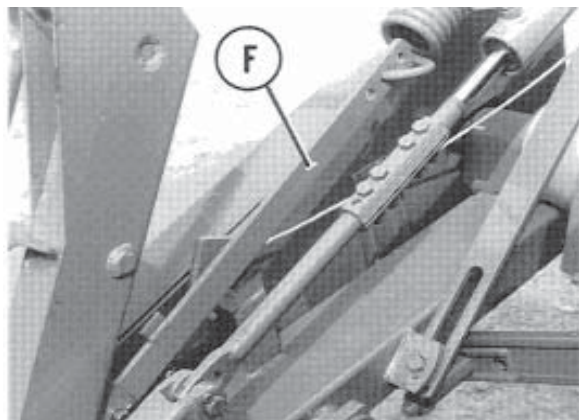

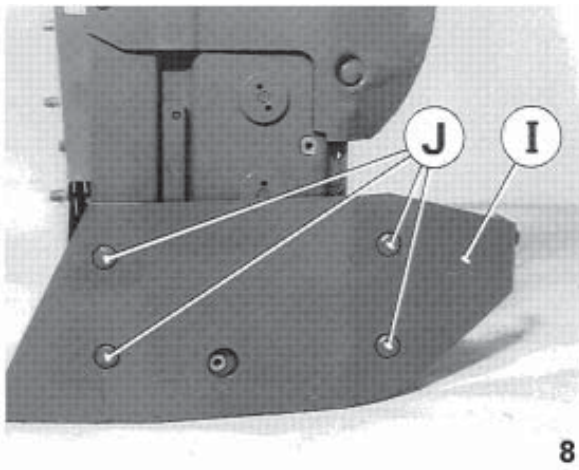

8

- Fit inner shoe (I) by means of 4 cup square bolts (J) (M 10 x 25) and 4 self locking nuts (M 10) (photo 8).


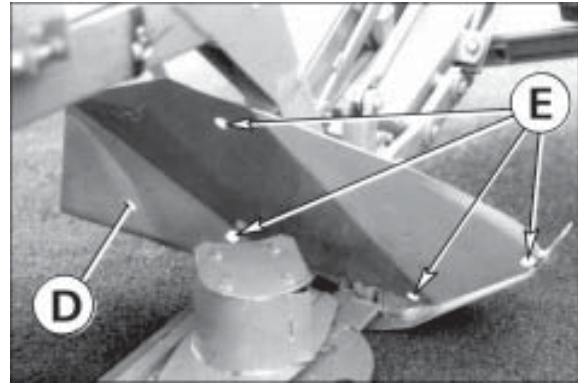


8A


- Attach the inner swathboard (D) (photo 8 A) in place using 4 (M10 x 20) round head bolts (E), 4 plain washers and 4 self-locking nuts. Tighten all inner swathboard bolts (T).

5. Installing outer disc with cone and outer swath wheel

- On the **GMD 500 - 500 HD** attach the outer disc with cone using 4 hexagon screws (M 12 x 20) and 4 conical spring washers (position the conical centre at the top) so that its largest diameter is positioned at a right angle in relation to the adjacent disc (see pictorial opposite). **Tighten at 12 daNm (90 ft.lbs).**
 - Attach swath wheel assembly (U) to outer skid shoe (photo 9) with 2 cup square bolts (V) (M 12 x 35), 2 conical washers (dia. 13 mm) and 2 self-locking nuts (M 12). Torque : 8.5 daNm/65 ft.lbs.
- Before tightening screws (V), make sure that disc does not come into contact with cone cover or knives.
- Keep to a distance of **X = 15 to 25 mm / 5/8" - 1"**.

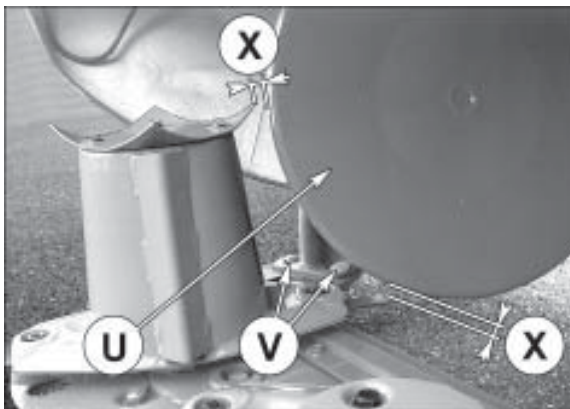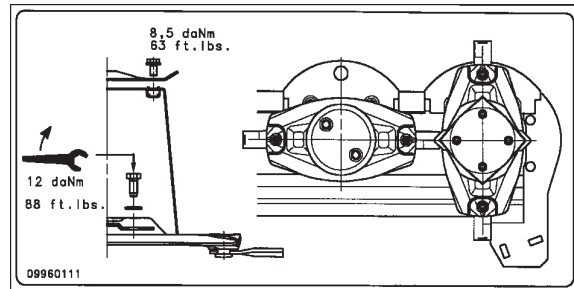

9

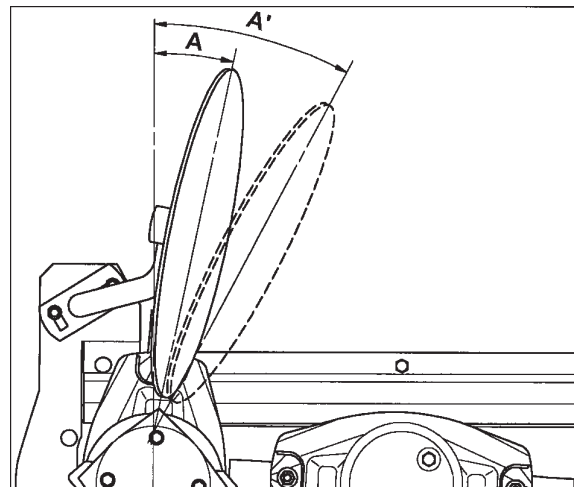


9A




The angular position of the swath wheel compared to the cutterbar can be adapted to working conditions enabling a regular flow of the cut crop towards the rear.

Position the swath wheel so that **maximum angle (A')** (fig. 9 A) is obtained. In difficult working conditions (long, dense, bent over crops) position it towards **minimum angle (A)** (fig. 9 A).

6. Safety guard and locking device assembly

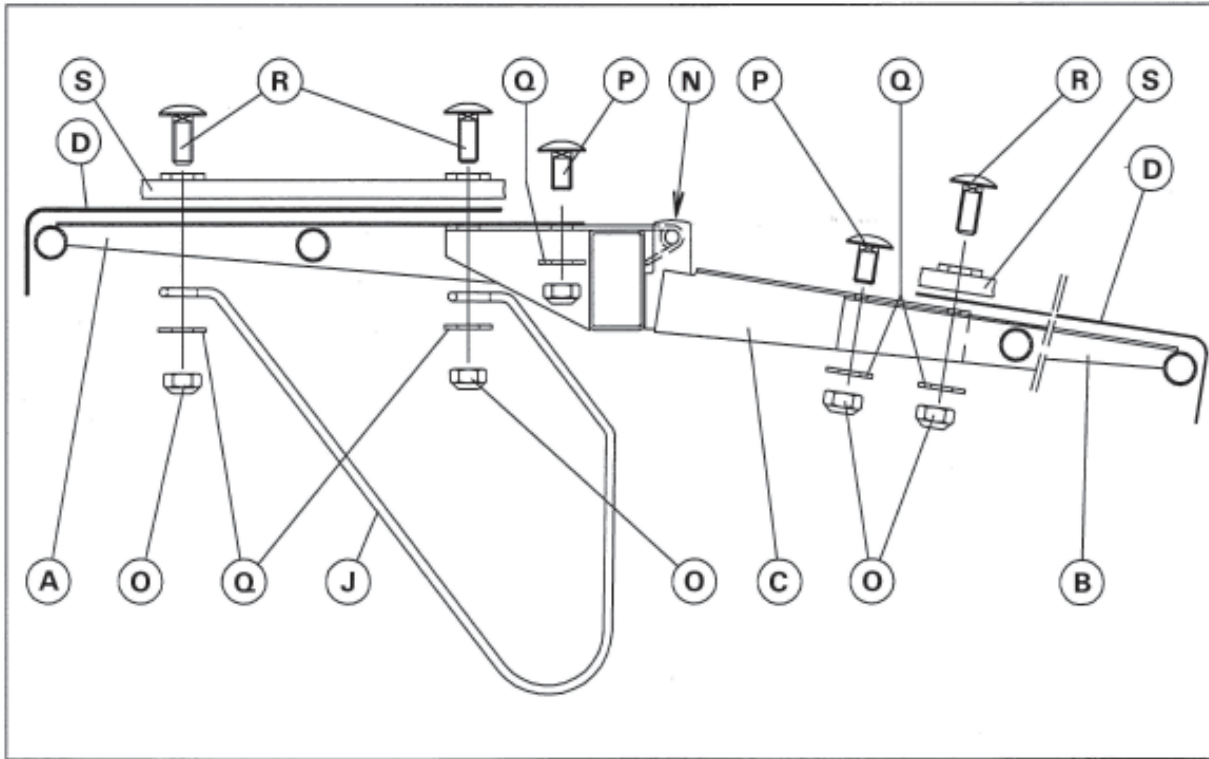


10

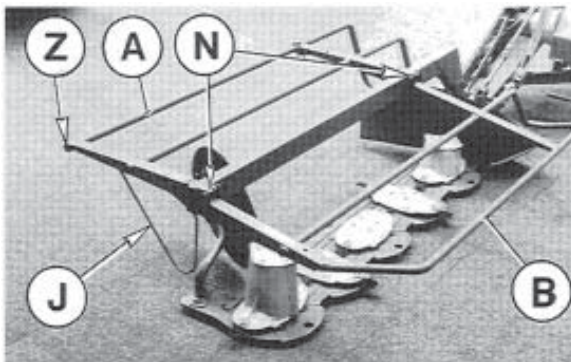


11

- Attach the front safety bar (B) to its 2 hinges (C) with the 3 cup square bolts (P) (M 10 x 25), 3 self-locking nuts (O) (M 10) and 3 flat washers (Q) (diameter 11 x 24 x 2) (fig. 10).
- Then attach the pre-assembled front safety bar (B) at (N) with 2 hexagonal screws (M 12 x 75) and self-locking nuts (M 12) (photo 11). Do not tighten these 2 screws completely, so that the front safety bar can still pivot.
- Next attach rear safety bar (A) with 3 round head bolts (P) (M 10 x 25), 3 self-locking nuts (O) (M 10) and 3 flat washers (Q) (diameter 11 x 24 x 2) (fig. 10 and photo 11). **Fit end-plug (Z) on rear safety bar (A) (photo 11).**

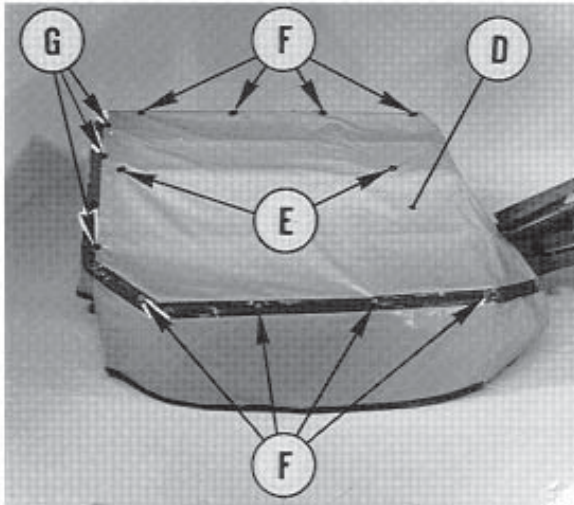

12

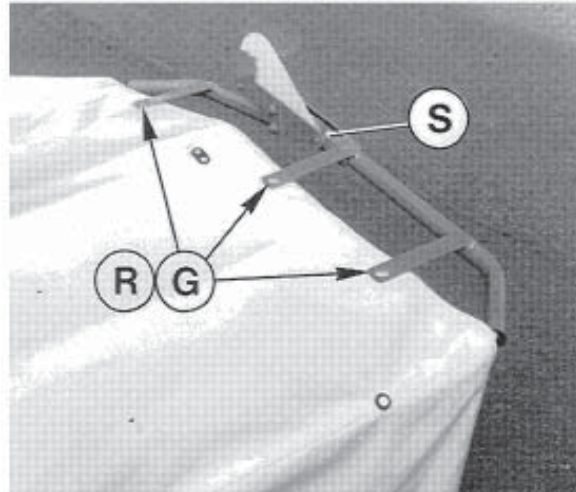

13


- Install cover (D) as shown in photo 12. Buckle straps around the pipe frame at E. Buckle straps (F) around front and rear safety bar. All these straps are attached to the underneath of the safety cover.
- Punch 3 holes in the safety cover at (G) and use 3 cup square bolts (R) (M 10 x 35) with self-locking nuts (O) (M 10) (fig. 10) and plain washers (Q) (dia. 11 x 24 x 2) to attach the following components on the outside arms of the safety bars : safety guard locking device (S) ; safety cover (D) ; stop rod (J) (see fig. 10 and also refer to photos 11, 12 and 13).

Note : Make sure that the pivot axis of the safety guard locking device (S) is lined up with the pivot axis (N) of the front safety bar before tightening self-locking nuts (O).



DANGER

Never operate the mower without the protection cover in place and the pivoting front protector lowered. Do not lean against or stand on the guard cover.

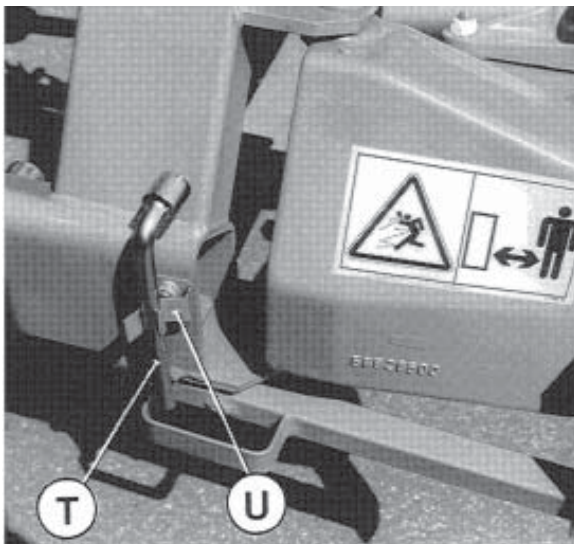


14

The safety guard locking device is operated with an 18mm box spanner (T) to be stored in holder (U) (photo 14).


GENERAL INFORMATION

1. Minimum tractor PTO power requirement should be 21 kW (28 hp) for the **GMD 400 - 400 HD** and 25 kW (35 hp) for the **GMD 500 - 500 HD**.
If the tractor engine rating is insufficient, quality of work will not be satisfactory.
2. **GMD 400 - 500 - 400 HD - 500 HD** Disc Mowers can only be operated on tractors equipped with a standard 540 min^{-1} PTO frequency and a standard category 1 or category 2 3-point attachment. Category 2 lower link bushes (590 010 00) are supplied with the machine for attachment to tractors with category 2 linkages.

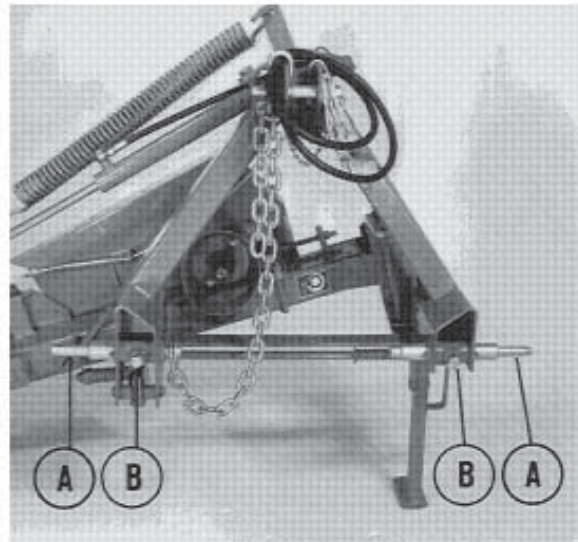

15

3. The **GMD 400 - 500 - 400 HD - 500 HD** are equipped with adjustable lower link pins allowing the machines to be offset 50 mm (2") to the left and to the right when mounted to a category 2 linkage and 114 mm (4.5") to the left when mounted to a category 1 linkage. To adjust lower link pins A, unscrew counter nut (C) and hexagon screw (B) (photo 15 and fig. 15 A). Displace pins as shown in the following drawing and retighten screws and nuts.

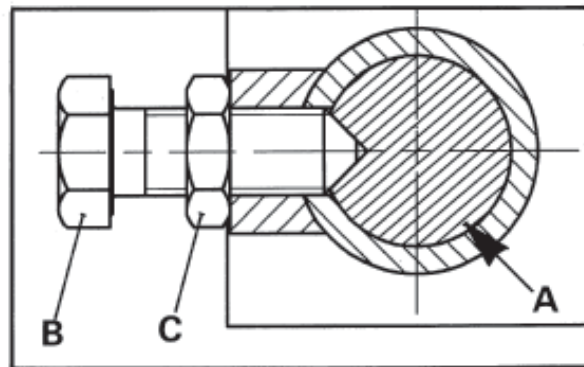

15A




DANGER

Never mow in stony or rocky grounds.


ATTACHING THE MOWER TO THE TRACTOR

ATTACHMENT OF LOWER LINKS AND POSITIONING OF LINK PINS :


Follow fig. 1 for category 1 tractors with narrow wheel track.

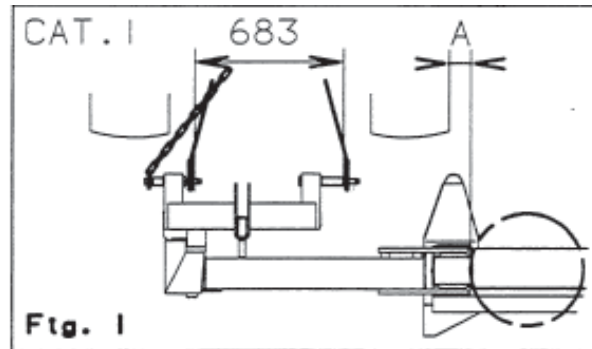


Follow fig. 2 for category 1 tractors with wider wheel track.

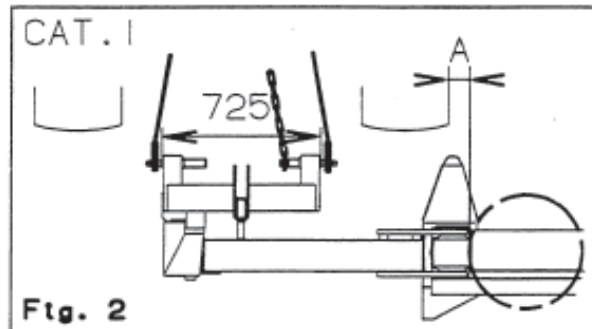


Follow fig. 3 for category 2 tractors with narrow wheel track.

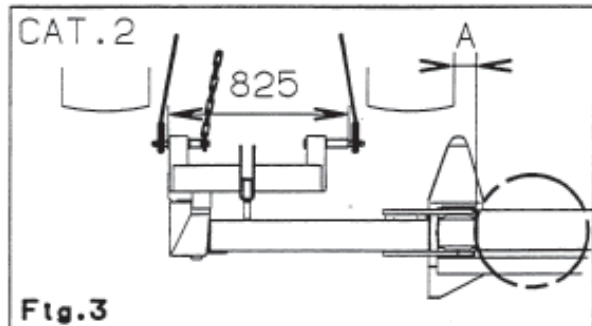


Follow fig. 4 for category 2 tractors with standard wheel track.

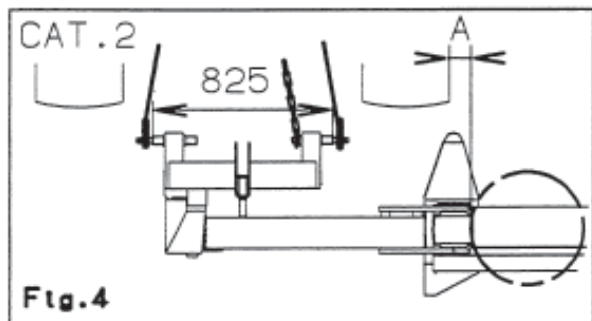

Follow fig. 5 for category 2 tractors with wide wheel track.

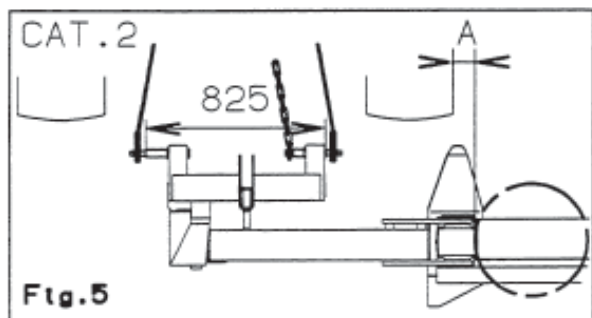


NOTE : Always attach machine in such a way that distance A is approximately 5 cm (2") and make sure that check chain (C) (photo 21, page 22) is always correctly attached.

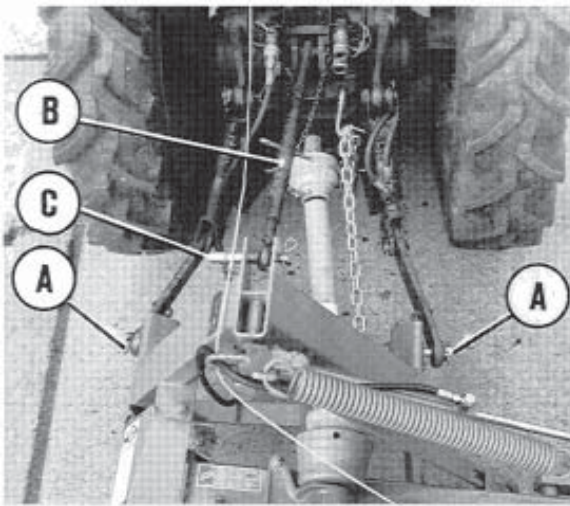

16

1. Attach the lower links to the hitch pins and secure with lynch pins shown at A (photo 16).
2. Attach the top link (B) using pin (C). Two positions are available on the pin, depending on the diameter of the ball joint, to secure the link to the mower .
3. Connect the hydraulic hose to the tractor.

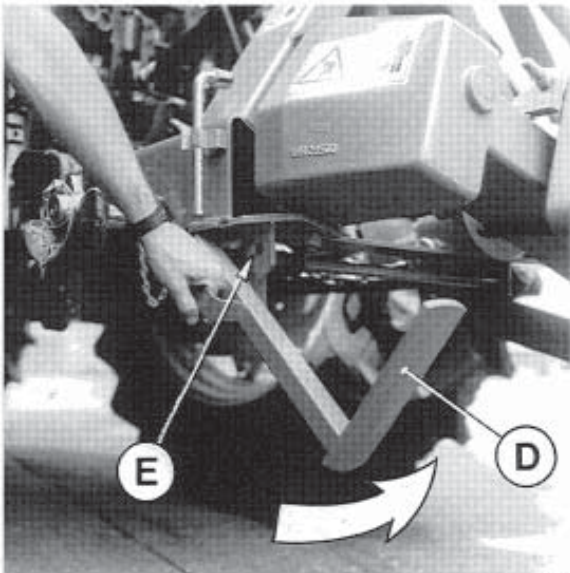

17

4. Pressurize hydraulic cylinder to raise cutterbar until it is automatically locked in the full vertical position. Then release hydraulic pressure.
5. Raise the mower with the tractor hydraulics, pull out parking stand (D) (photo 17) and pivot it 90° in the direction of the arrow indicated in photo 17. Lock stand in hole (E) during transport and field operation.


Note : Parking stand is pulled out easily after releasing hydraulic pressure as described in point 4°.

P.T.O. SHAFT


Connect the PTO shaft to the **540 min⁻¹ tractor drive** (with the free wheel fitted on the machine side).

Make sure PTO length is correct :


1. When the PTO is in its maximum extended position, a minimum tube overlap of 150 mm (6") must be maintained.
2. When the PTO is in its maximum overlap position (retracted), tubes should not butt against the yokes. As a safety measure a clearance of at least 1 cm (0.4") must be maintained. If this is not the case, shorten the two transmission tubes and the two guard tubes by the same length (photos A and B). Bevel and clean the tubes (photo C) and grease the inside of the outer tube (photo D).
3. Never operate the PTO at too great an angle (30° maximum) (photo 18).

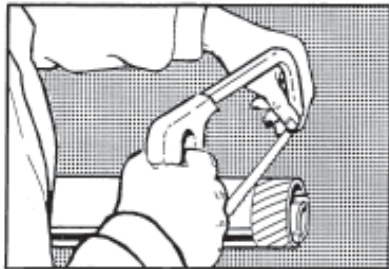


A

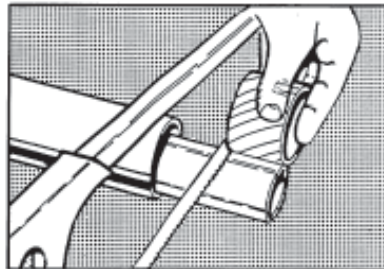


B

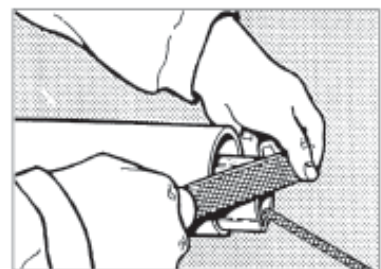

C

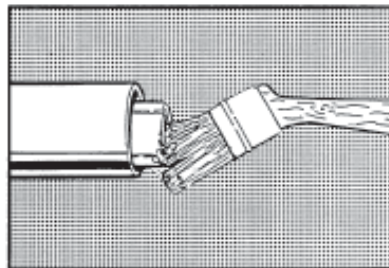

D

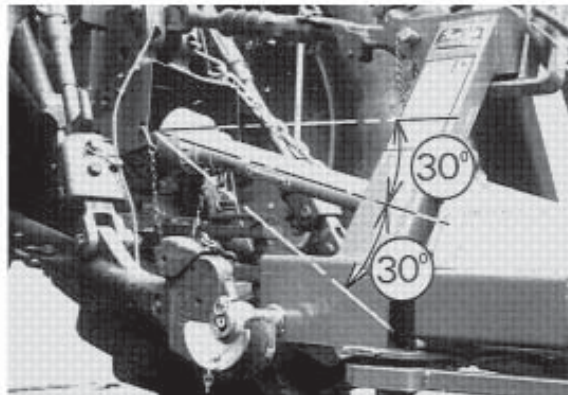

18




These recommendations and adjustments must be respected to avoid damage or premature wear of the PTO.

Never connect the PTO to the 1000 min⁻¹ tractor drive.



DANGER


To avoid accidents which could be serious, make sure that the guards are always correctly in place and secured with the safety chains (photos 18 and 19). Damaged guards should be replaced immediately.

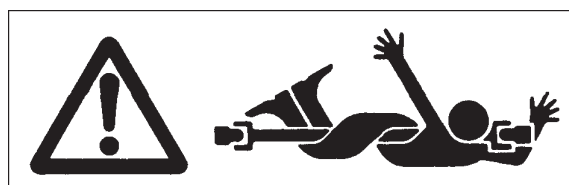

WORKING POSITION AND ADJUSTMENTS




Before putting the machine in work or transport position, ensure all persons are well clear of the cutterbar pivoting area.

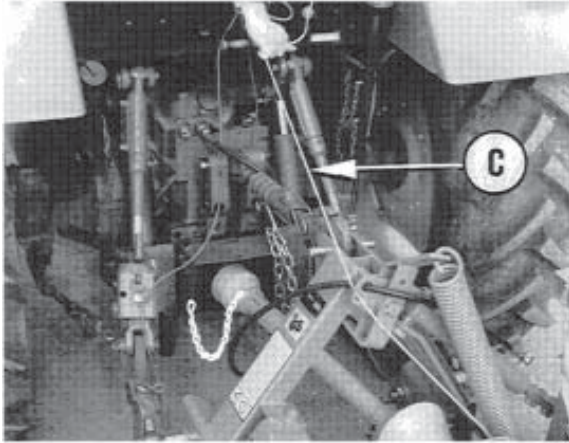

19

1. Pressurise the lift cylinder so that the cutterbar closes up against its stop.
2. Pull cord (C) (photo 19) in order to free latch.
3. Lower the cutterbar down to the horizontal position by releasing hydraulic pressure.

Release lock by applying pressure with the hand palm (arrow 1) and fold front safety bar (V) downwards (arrow 2) (photo 20) till it is automatically locked in working position.

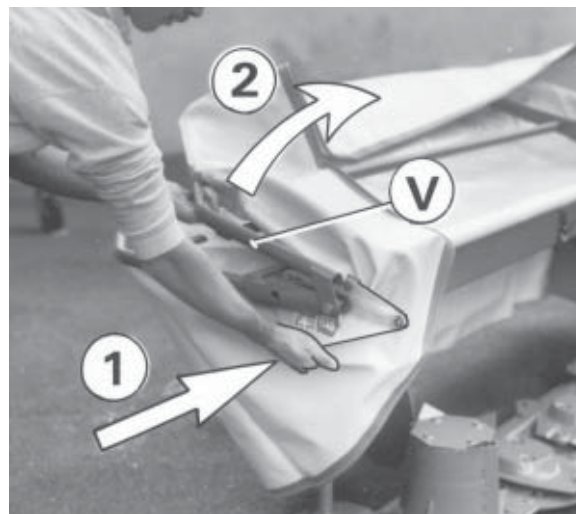

20

Adjustment of chassis height from the ground :

1. Tractors equipped with 3-point linkage with position control function :


Set position control so that lower hitch pins are 400 mm (16") from the ground.

2. Tractors equipped with 3-point linkage without position control function (photo 21) :

- Lower machine until the left lower hitch pin (A) is 400 mm (16"), or slightly more, from the ground.
- Connect stop chain (C) with its hook supplied in the hardware kit of the machine to one of the free holes at the tractor's top link attachment clevis. Make sure the hook is free to pivot in line with the chain when tension is applied.
- Lower the machine into working position. Chassis height is correct when :

- . The cutterbar is resting on the ground ;
- . Stop chain (C) is tight ;
- . E = 400 mm (16") (distance of lower hitch pins from the ground).

- To keep this adjustment permanently, close hook eyelet with roll pin ($\varnothing 5 \times 45$ mm).

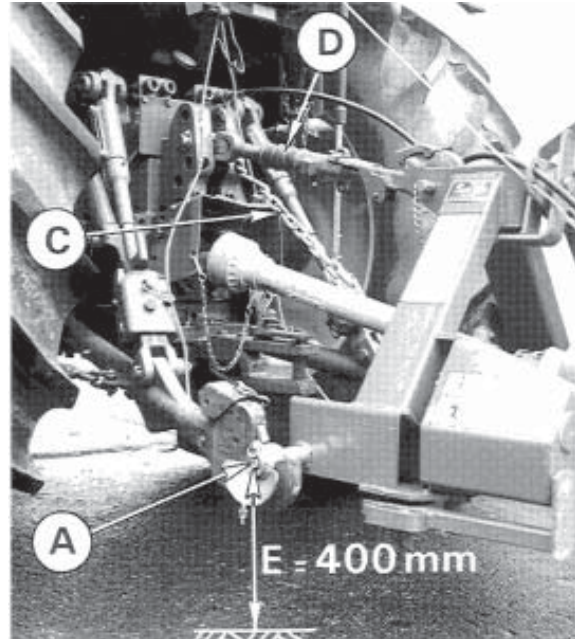

21

CUTTING HEIGHT

Maximum cutting height (50 mm / 2") (fig. 1) is achieved when the discs are parallel to the ground. Adjustment of cutting height is achieved by altering the cutterbar tilt angle. This is effected by varying top link length (D) (photo 21) until desired cutting height is achieved. To minimize blade and disc wear, improve grass regrowth and get maximum nutritive value from the crop, minimum cutting height should never be adjusted less than 30 mm / 1 1/4" (fig. 2).

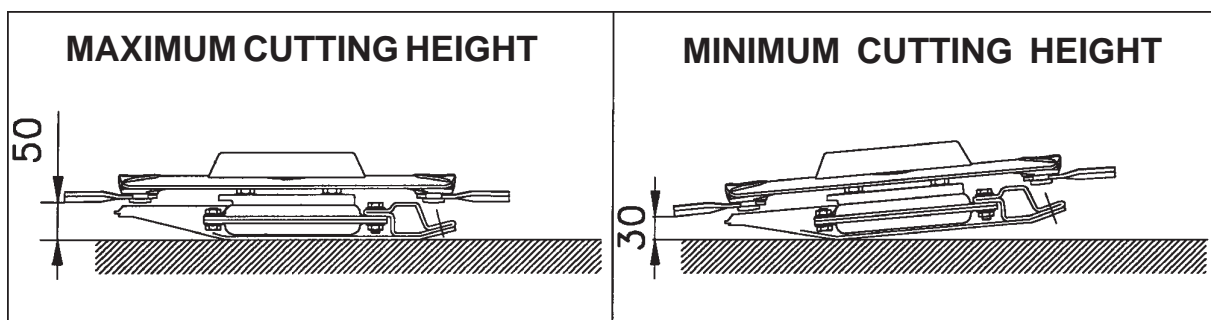


Fig.1

Fig.2

SAFETY BREAKAWAY

In rough field conditions the ground speed should be reduced. A breakaway latch allows the cutterbar to swing back if an obstruction is hit (photo 22).



IF THE LATCH RELEASES, STOP THE TRACTOR IMMEDIATELY AND DISENGAGE THE PTO.

To reset the cutterbar, back the mower until the cutterbar is in its normal position. Do not raise the cutterbar to re-latch the breakaway. The factory setting of the latch is adapted to most working conditions.

Note : Before using the mower, the break-away linkage must be checked for good operation making sure all components slide correctly and are well greased. Check for any cutterbar damage if an obstruction is encountered.



22

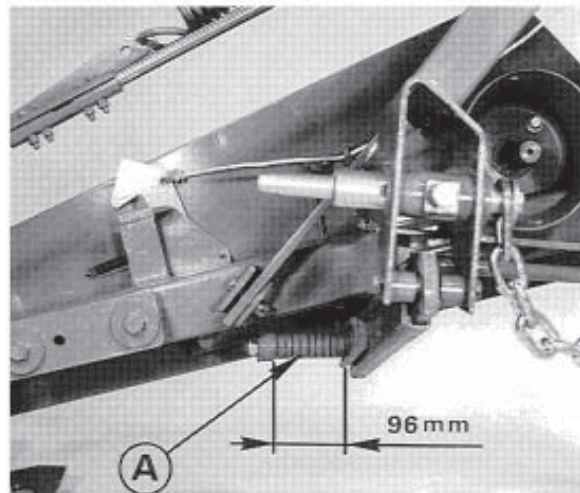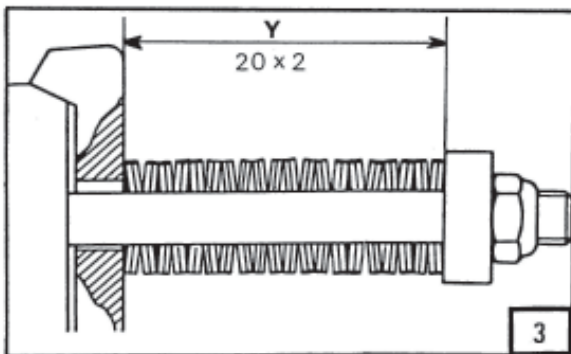


23

The stack of spring washers should be compressed to 96 mm (3 3/4") (photo 23). Observe carefully spring washer arrangement as shown in fig. 3.

If after resetting, the cutterbar continues to break away, the pressure of spring assembly (A) (photo 23) can be increased, but in all cases stacking must not be less than 91 mm (3 1/2"), as otherwise safety disengagement cannot function.

TRANSPORT AND PARKING THE MACHINE

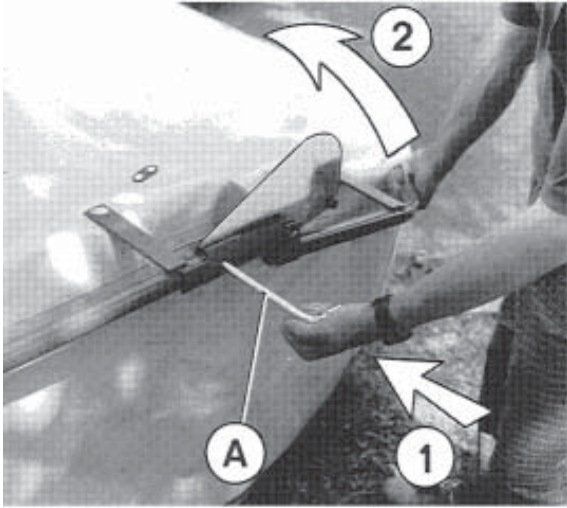

Before transporting the machine on the public highway, the operator should make sure that the machine conforms to the highway code.


1° To transport the machine on public highways or from one field to another, proceed as follows :

- Disengage the PTO drive and wait for all movement to stop.
- Raise the machine with the tractor 3 point linkage.
- Release lock by applying pressure with the box spanner (A - arrow 1) supplied with the machine and fold the front safety bar upwards (arrow 2) (photo 24) till it is automatically locked in transport position.
- Raise cutterbar in the vertical position. It will automatically be locked in place when it reaches the transport position (photo 24 A).

Note : It is normal that the vent plug may seep lubricating fluid during the first activations of the hydraulic cylinder.



24A

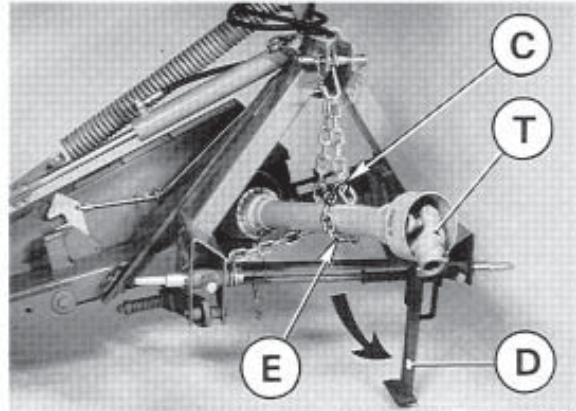

24B

2° To park the machine proceed as follows :

- Be sure the cutterbar is in its vertical transport position.
- Pull out the stand (D) and bring it down (see arrow) until it automatically clicks into place (photo 24 B)
- Disconnect stop chain on tractor side.
- Pressurise the lift cylinder so that the cutterbar closes up against its stop.
- Pull cord in order to free latch of the cutterbar.
- Lower the cutterbar down to the horizontal position by releasing hydraulic pressure.
- With the hydraulic 3 point lift, lower the machine to the ground and disconnect the top link, the lower links and then the hydraulic hose.
- Disconnect the PTO shaft (T) and support it with the stop chain (E) using hook (C) as shown in photo 24 B.



For your safety only park the machine with the cutterbar in the horizontal position.

OPERATING THE MOWER

Release lock by applying pressure with the hand palm (arrow 1) and fold front safety bar (V) downwards (arrow 2) (photo 25) till it is automatically locked in working position.



DANGER

Ensure that the safety curtain is completely in place around the cutterbar.

Safety curtain will avoid projection of most foreign objects.

Always allow a few minutes for oil to spread in the cutterbar before engaging PTO when changing cutterbar from transport to operating position.


Before cutting, engage tractor PTO and slowly increase frequency up to 540 min⁻¹.

Do not be disturbed by the high pitched whine of the discs. This will be reduced to some extent when cutting.

Forward speed must be adapted to working conditions and should be reduced when mowing dense crops.

Check correct fixation of plugs (C) (photo 25) on the outer and inner disc cone.

Replace immediately lost or worn plugs.

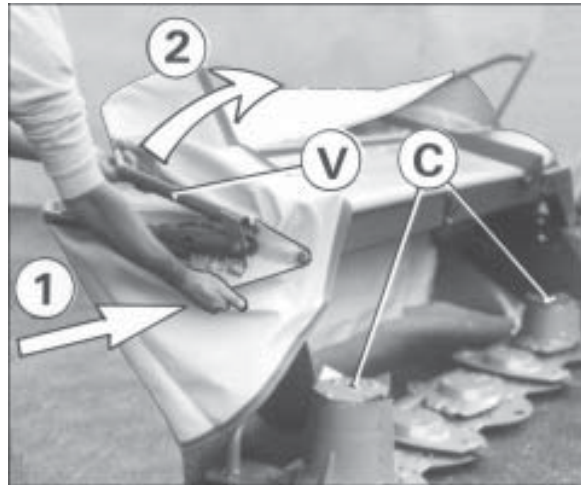

25



DANGER

Never mow in stony or rocky grounds.



Never operate the mower without the protection cover in place. Do not lean against or stand on the guard cover.

LUBRICATION

It is forbidden to discard oil, grease or filters of any type. These must be given to specialised waste disposal organisations to protect the environment.

IMPORTANT

Imperatively change oil in : - cutterbar bevel gearbox
- cutterbar

after the first 10 hours of use [SAE 80 W EP (GL4)].

Thereafter, oil must be changed **every 200 hours of work** and at least once per year.

NOTE : Before draining oil, operate the cutterbar for a few minutes so that oil warms up.

	GMD 400 - 400 HD	GMD 500 - 500 HD
Quantity of oil in the bevel gearbox [SAE 80 W EP (GL4)]	0.25 litre / 0.53 US pint 0.43 Imp. pint	0.25 litre / 0.53 US pint 0.43 Imp. pint
Quantity of oil in the cutterbar [SAE 80 W EP (GL4)]	1.4 litres / 3 US pints 2.5 Imp.pints	1.7 litres/3.6 US pints 3.0 Imp.pints

1. BEVEL GEARBOX


Plug (C) (photo 26) serves as a **check plug** when the **bar is horizontal**. Remove plug (C). When oil level is at its maximum, it will just begin to flow out of the hole.

Check oil level once a day. Add oil through filler plug (B) (photo 26) if required.

The pressure relief valve (A) (photo 26) must be checked and cleaned regularly. The ball detent must be free to relieve pressure.

The maximum oil capacity of this gearbox is as shown in the table below and **it is important not to exceed this quantity**.

Plug (C) is also used as a **drain plug** when the cutterbar is in the **vertical transport position**.

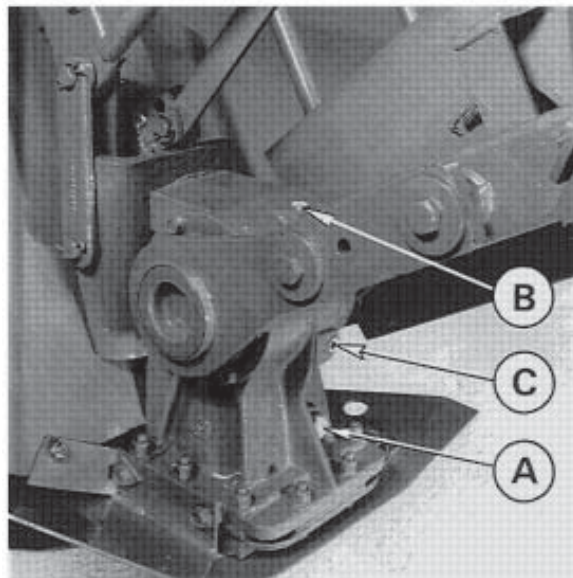

26

2. CUTTERBAR

Note : Make sure the cutterbar is in the vertical position when checking, adding or changing oil. The oil level is at its maximum when oil flows out of the filler plug hole.


Check oil level once a day. Add SAE 80 W EP (GL4) oil to the cutterbar at filler plug (D) (photo 27).

To drain oil, remove magnetic drain plug (E) (photo 27) located underneath the cutterbar below the bevel gearbox.

Clean all metal particles off the magnetic drain plug before refitting.


NOTE : Provided above instructions are strictly observed, there is no cause for alarm if it is found that the transmission case is very hot to touch, provided that the discs turn freely by hand. .

Attention : Before carrying out this check, turn off the tractor engine, remove ignition key and disconnect the PTO shaft.

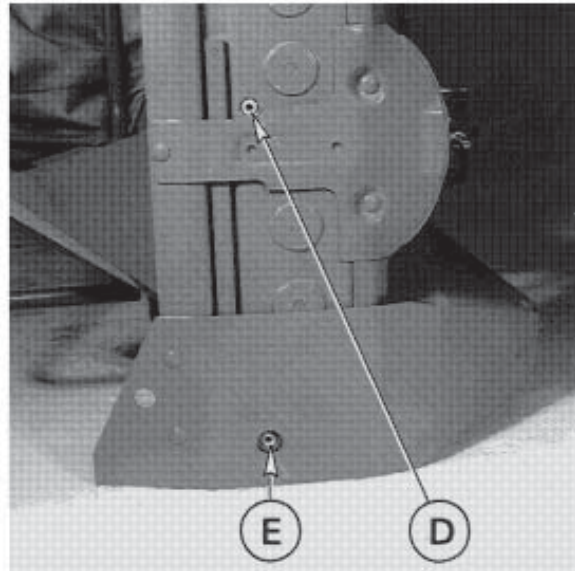

3. PTO SHAFT

Lubricate the PTO shaft at the hourly intervals indicated in figure 1 with SHELL Multi-Purpose grease NLGI grade 2.

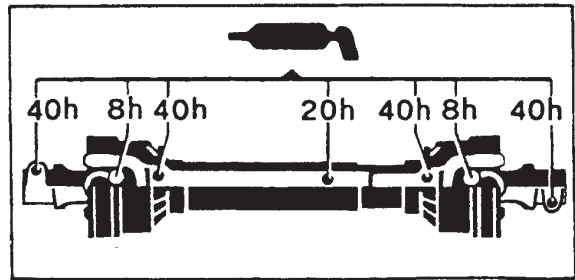

4. GREASE FITTINGS

Clean fittings before applying grease. Oil all pivot and linkage points every fifty hours. Grease breakaway sliding components as required.



The recommended grease and oil change periods are based on normal field and work conditions. Severe or unusual conditions may require more frequent lubrication or oil changes.



RESPECT SPECIFIED OIL QUANTITIES AND GRADES : SAE 80 W EP (GL4) OIL ONLY.

[In certain countries SAE 80 W EP (GL4) oil may not be available. In this case a GL4 or GL5 grade SAE 80 W 90 oil may be used as a replacement. Never use a straight EP 90 oil].

ADJUSTMENTS AND MAINTENANCE




CAUTION : Before carrying out service or adjustments to the machine, turn off the tractor engine, remove ignition key and disconnect the PTO shaft.



Adjust machine to clear obstructions and debris. Foreign objects and other debris can be deflected toward the operator and bystanders.

1. INSPECTION OF KNIVES AND SECURING ELEMENTS

Discs, knives and securing elements are manufactured from high quality steel and have been subjected to a heat-treatment to assure a high resistance to wear. **Worn or damaged items must immediately be replaced with genuine KUHN parts as otherwise warranty will be withdrawn.**

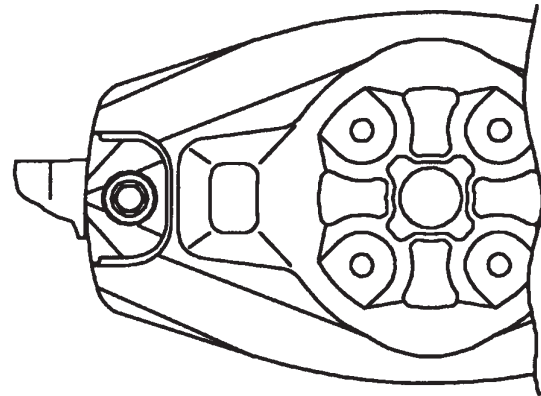


A) KNIVES : should be inspected systematically each time before the machine is operated.

Cutting quality as well as safe operation depend on the regular inspection and care given to the knives. Knives should be replaced in the following cases :

a) Damaged knives

Very rough conditions can cause knives to crack and become deformed leading to :


- increased risk of accidents ;
- deterioration of cutting quality ;
- risk of damage to the cutterbar.

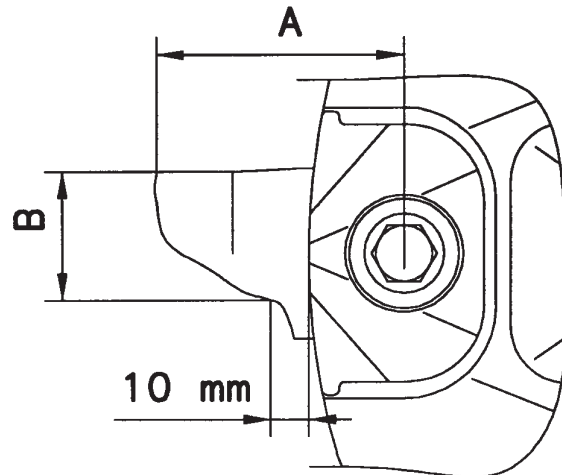

b) Worn knives

Length (A) of a knife should be greater than 65 mm. The width (B) of a knife, measured at a distance of 10 mm away from the edge of the disc should be greater than 34 mm.


The hole (L) for the securing bolt must not become oval by more than 20 mm for an 18 mm hole.

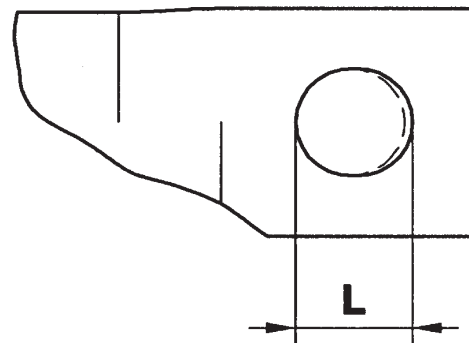

B) SECURING ELEMENTS : To be inspected regularly !

(particularly the tightening torque of the nut:
12 daNm / 90 ft.lbs).

- Inspect immediately after hitting an obstruction.
- Inspect when replacing knives.
- Check at the beginning of each season.


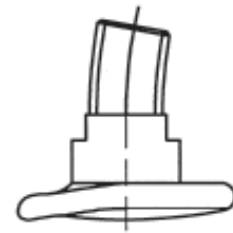


a) The securing bolt must be replaced :

- When a visible deformation is found.
- When the locking compound on the threads has worn away or if the locking compound has become inoperational due to inclusion of water, oil or dirt.



- When wear on the head reaches the contact area of the knife.

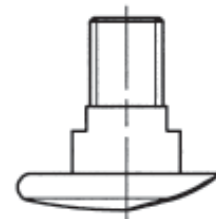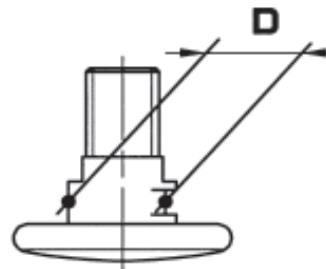

- When the diameter (**D**) of the bolt shoulder is less than 15 mm (5/8 ").



b) The nuts must be replaced :

- When the contact washer has lost its elasticity or when it becomes loose from the nut.



- When wear on the nut reaches $a = 5$ mm.




**FOR THE CORRECT OPERATION OF YOUR MACHINE,
ALWAYS USE GENUINE KUHN SPARE PARTS.**

2. KNIFE REPLACEMENT


To replace knives, first clean the area around nut (A) (photo 28) and remove nut with the box spanner (T) supplied with the machine. To facilitate the removal of the nut, we recommend to place a block of wood (Z) between 2 discs to stop them from rotating (photo 28). Remove the bolt (W) through the hole located at the front of the disc guard (photo 29).

Ensure securing elements are in good condition and fit knives so that the arrow on their upper face is pointing in the direction of rotation of the disc (fig. A) it is fitted to.

Torque locknut to 12 daNm / 90 ft.lbs.

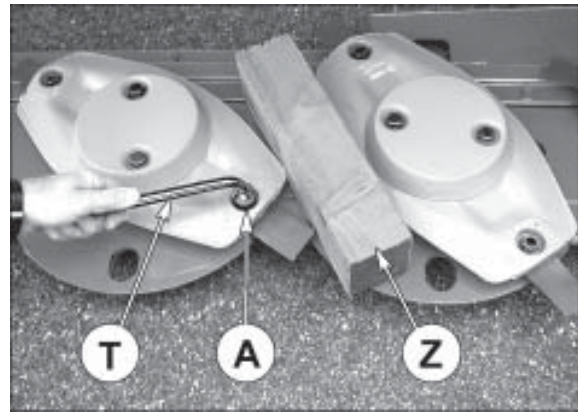


28

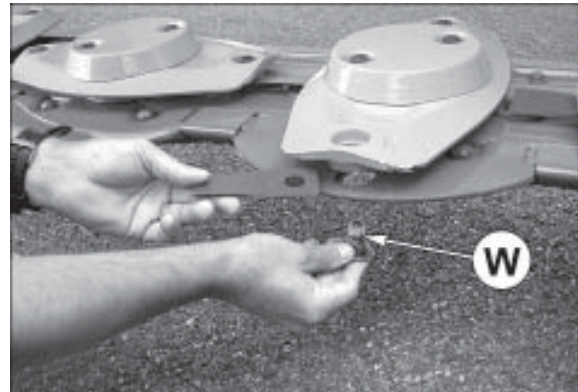

29

GMD 400
GMD 400 HD

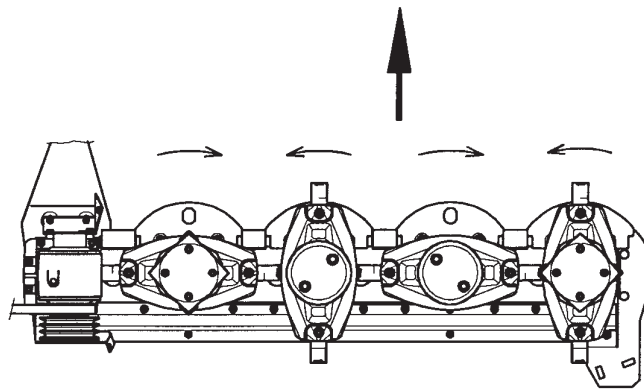

GMD 500
GMD 500 HD

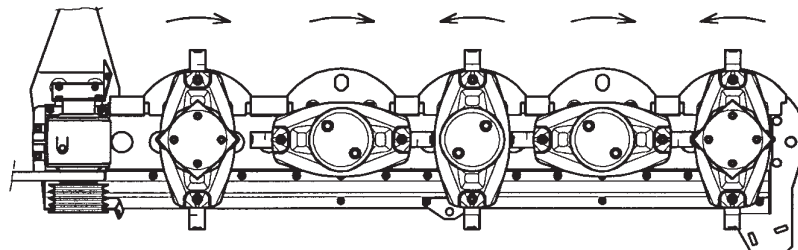


Fig. A

Dull knives require more horse power to cut the crop and will leave an uneven stubble.
Worn knives should either be turned over on the same disc to use the other cutting edge, or replaced. When turning or replacing the knives, make sure there is a 1 mm minimum gap between the knives or their mounting bolts and the cutterbar wear plates. If otherwise, insert one (**maximum two**) distance spacer(s) (code 568 071 00) between the discs and the disc bearing stations (fig. B) (**only for GMD 400 - 500**).

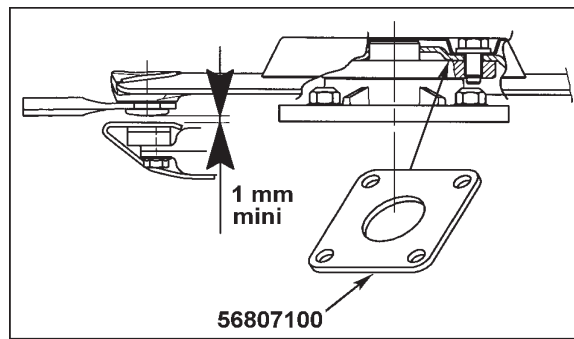


Fig. B



Important : Always replace securing elements (lock-nuts and bolts) when they have been removed 5 times.



Caution : Always replace damaged knives, never straighten a bent knife.

Never replace one knife only per disc, always replace both of them to avoid creating an out-of-balance force.


3. DISCS REPLACEMENT

To replace a disc, place a block of wood (Z) between two discs to stop them from rotating. Unscrew the 4 nipple-screws (B) with the box spanner (T) supplied with the machine and take the 4 conical spring washers (C) off (photo 30 and fig. C).

Two of these diametrically opposite bolts are also used to secure the conical covers on top of the discs. When remounting must the discs have their largest diameters positioned at right angles to each other. This positioning must be scrupulously respected so as to avoid interference between the knives.

Take extra care when fitting the conical spring washers (C) (fig. C), which must be positioned with the conical centre at the top.

Tighten bolts to a torque of 12 daNm (90 ft.lbs).

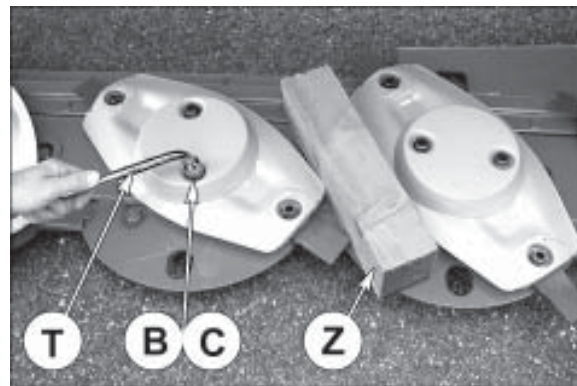

30



THE GMD400/500 DISCS SUPPLIED THROUGH OUR SPARE PARTS DEPARTMENT COME WITH A 1 MM SPACER (PART no. 568 071 00) (fig. B) ATTACHED TO THEM. WHEN INSTALLING A NEW DISC CHECK IF THE GAP BETWEEN THE BLADES OR THEIR MOUNTING BOLTS AND THE CUTTERBAR PROTECTION SHIELDS IS AT LEAST 1 MM. IF THIS IS NOT THE CASE FIT THE 1 MM SPACER BETWEEN THE DISC AND ITS MOUNTING HUB FOR INCREASED CLEARANCE (fig. B). THIS SPACER IS NOT REQUIRED ON DISCS FOR GMD 400 HD - 500 HD.

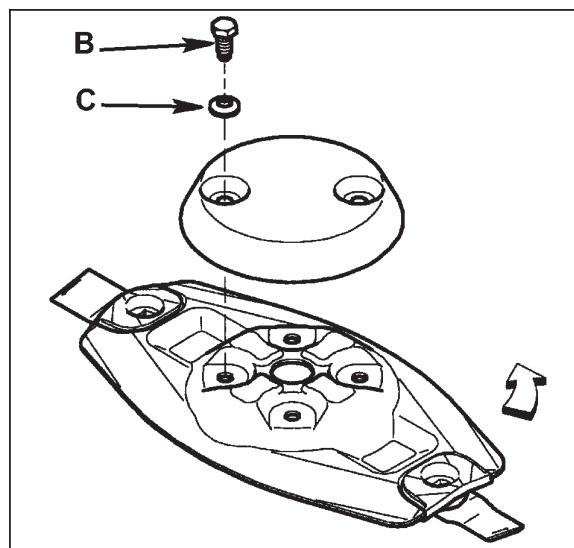


Fig. C




Regularly check all nuts and bolts for correct tightness, particularly those securing discs and blades.

2. BELTS


The belts must be properly tensioned at all times to prevent excessive slipping and flopping. Loose belts will also cause poor cutting and premature failures. To tension the belts, loosen the 2 nuts (A) and tighten nut (B) (photo 31). When belts have been tensioned correctly, retighten nuts.

Belt tension is correct if deflection does not exceed 10 mm (2/5") when belts are pressed upon with a force of 3,5 daN (8 lbs). This must be checked regularly and particularly during the first hours of work. Access to the belts is provided through the cut-out (C) located underneath the safety guard (photo 31A).

Note : Only replace belts as a complete set
- No. 831 016 72 (GMD 400 - 400 HD)
- No. 831 016 73 (GMD 500 - 500 HD).

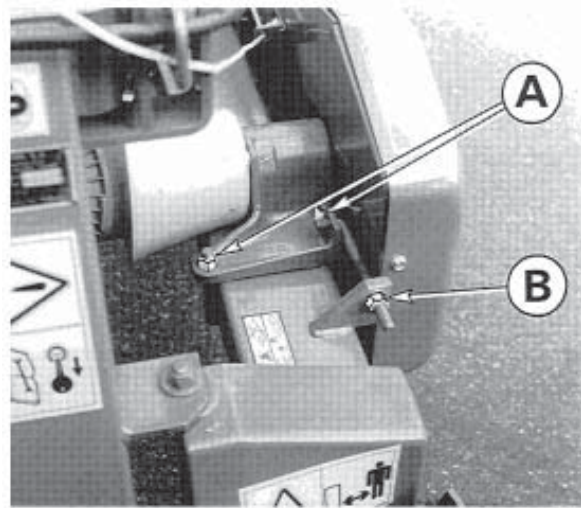

31

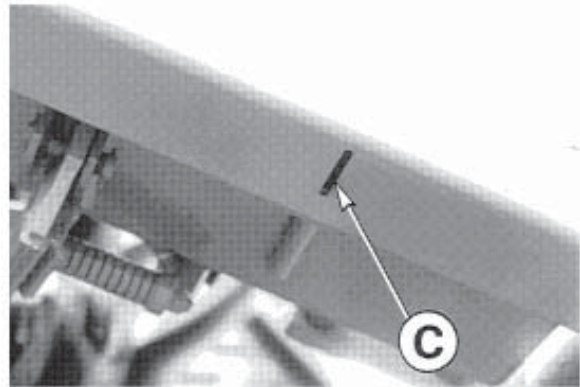

31A

OPTIONAL EQUIPMENT


1. Hydraulic adaptators (photo 32)

For fitting to different types of hydraulic connectors, three adaptators are available :

M16 x 1,5 / 1/2 GAZ - CON 22 (82301205)

M16 x 1,5 / 1/2 NPT - 24 (82301206)

M16 x 1,5 / 3/4 UNF - JIC (82301902)

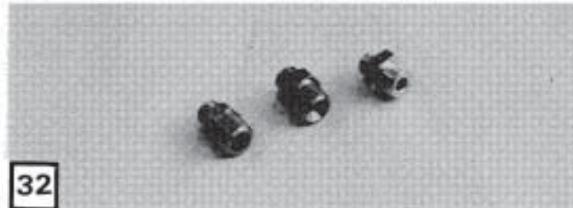

2. Special PTO shaft (photo 33)

A reinforced PTO shaft including a free-wheel (No. 4500 560) is available for the following cases :


- When the standard PTO shaft is too short.
- When the tractor is equipped with a hydraulic PTO break.
- When the angle of the PTO shaft is in excess of 25° when working.



3. Kit for mowing at 40° below horizontal (photo 34)

The kit (No. 102 6050) consists of a longer hydraulic cylinder (V) and a shorter attachment rod to be mounted in place of the original hydraulic cylinder and attachment rod.


When installing this kit, be sure to hook the suspension spring (R) into the last hole of the bar (S) in order to avoid too much tension when the slope exceeds minus 30° (see photo 34).

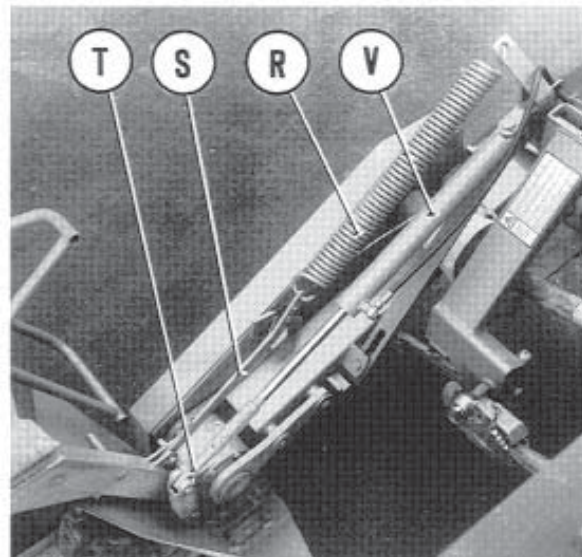

34

4. Wear plate (568 017 00)

To prolong the life of worn disc guards when working in very difficult and abrasive conditions, wear plates are available through our spare parts department for welding to the underside of each individual disc guard (fig. 35).

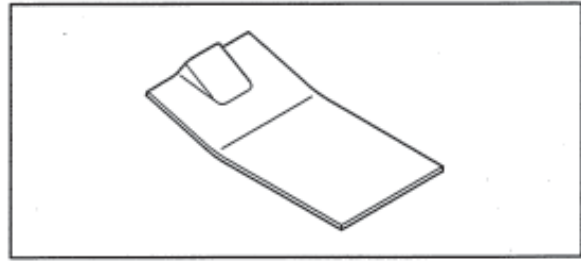

35


5. Raised skids (fig. 36)

Kit No. 103 6230

A raised skid shoe kit comprising 2 raised skids is available as an optional equipment. This kit serves 2 purposes :

- providing a cutting height adjustable between 35 mm and 90 mm (1.5" and 3.5"),
- operating on sticky grounds.

These 2 raised skids are installed instead of the 2 regular end skids.

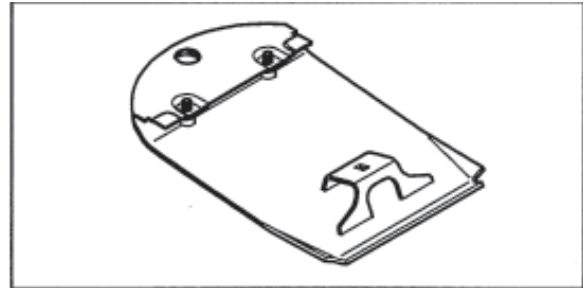

36

6. Signalling elements (photo 37)

Kit No. 102 6100


Signalling elements can be ordered as an optional extra. To install this kit proceed as follows :

- Attach tail lamp (N) to panel (A).
- Bolt panel (A) to support (S) with 3 hexagon screws (E) (M 10 x 20), 3 plain washers (dia. 11 x 24 x 2) and 3 self-locking nuts (M 10).
- Attach guide (H) to the rear guard tube (T) with an U-bolt and 2 self-locking nuts (L) (M 10).
- Plug electric cable (O) into the lamp terminal (N).

In transport position mount the panel (A) with its support (S) in the guide (H) with lock (U) and plug electric cable at the rear of the tractor.



Before putting the machine in work position, don't forget to unbolt the panel.

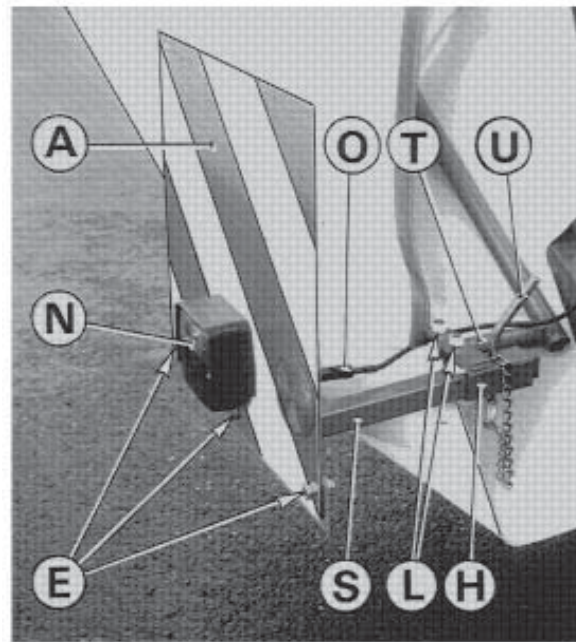

37

SERVICE ADJUSTMENT CHART

PROBLEM	CAUSE	REMEDY
Uneven stubble	Too much tilt on cutterbar	Reduce tilt (see page 22)
	Low PTO frequency	Increase engine frequency to run PTO at 540 min ⁻¹
	Knives not installed correctly	Make sure that the arrow on the knife upper face is pointing in the direction of rotation of the disc - see page 30)
	Low disc frequency	Check belts for correct tension (see page 32)
	Dull or broken knives	Replace knives (see page 30)
Stubble too long	Incorrect angle on cutterbar	Change cutterbar angle using tractor top link (see page 22)
Soil built up in front of cutterbar	Very wet conditions Excessive cutterbar downward pressure	Adjust main frame height by shortening chain as necessary (see page 22)
	Sticky ground	Fit a set of raised skids (see page 34)
Cutterbar not floating	Main frame setting incorrect	Adjust main frame as described on page 22
Machine breaking back too easily	Insufficient tension on breakaway spring washers	Tighten breakaway spring washers (see page 23)

STORING THE MOWER

- . Store the mower in a dry place.
- . Thoroughly clean the mower.
- . Drain oil from gearbox and cutterbar and refill with clean oil to correct level.
- . Inspect and replace worn knives and their fixation hardware.
- . Store cutterbar in operating position.
- . Untighten drive belts.
- . Clean bar and rusted areas and paint all areas from which the paint has worn.

SOUND LEVELS

Sound levels given out by : GMD 400 - GMD 500 - GMD 400 HD - GMD 500 HD Multidisc Mowers

Sound levels have been measured in accordance with the measuring methods as defined in:

EN 1553

<< Agricultural machinery - Agricultural self-propelled, mounted, semi-mounted and trailed machines -
Common safety requirements >>

The tractor used has an engine power of 92 kW.

A-weighted emission sound pressure level L (A) eq inside tractor cab (with closed windows) :

	GMD 400 - 400 HD	GMD 500 - 500 HD
Tractor only	69.8 dB (A)	69.8 dB (A)
Tractor + machine	72.0 dB (A)	72.1 db (A)

LIMITED WARRANTY

KUHN S.A. of 4 Impasse des Fabriques, 67706 SAVERNE CEDEX, France (hereinafter called the «Company») warrants, in accordance with the provisions below, to each original retail purchaser of KUHN new equipment of its own manufacture, from an authorized KUHN dealer, that such equipment is, at the time of delivery to such purchaser, free from defects in material and workmanship and that such equipment will be warranted for a period of one year starting from the date the goods are delivered to the end user and during this period up to a limit of 500 hours use, providing the machine is used and serviced in accordance with the recommendations in the Operator's Manual.

THESE CONDITIONS ARE SUBJECT TO THE FOLLOWING EXCEPTIONS :

1. Parts of machines which are not of our manufacture i.e. tyres, belts, P.T.O. shafts, clutches etc., are not covered by this Limited Warranty but are subject to the warranty of the original manufacturer. Any claim falling into this category will be taken up with the manufacturer concerned.
2. Warranty claims applying to these types of parts must be handled in the same way as if they were parts manufactured by KUHN. However, compensation will be paid in accordance with the warranty agreement of the manufacturer concerned in as much as the latter justifies such a claim.
3. This Limited Warranty will be withdrawn if any equipment has been used for purposes other than for which it was intended or if it has been misused, neglected or damaged by accident or let out on hire. Nor can claims be accepted if parts other than those manufactured by us have been incorporated in any of our equipment. Furthermore, the Company shall not be responsible for damage in transit or handling by any common carrier and under no circumstances within or without the warranty period will the Company be liable for damages for loss of use or damages resulting from delay or any consequential damage.

We cannot be held responsible for loss of earnings caused by a breakdown or for injuries either to the owner or to a third party, nor can we be called upon to be responsible for labor charges, other than originally agreed, incurred in the removal or replacements of components.

THE CUSTOMER WILL BE RESPONSIBLE FOR AND BEAR THE COSTS OF:

1. Normal maintenance such as greasing, maintenance of oil levels, minor adjustments, etc.
2. Transportation of any kind of any KUHN product to and from the place the warranty work is performed.
3. Dealer travel time to and from the machine or to deliver and return the machine from the workshop for repair.
4. Dealer travelling costs.

Parts defined as normal wearing items are listed as follows and are not in any way covered under this Limited Warranty :

V belts, discs, knives, wear plates, disc guards, tires, torque limiters, hydraulic hoses, pitman shafts, swath sticks, blades, tines and tine holders.

KUHN Limited Warranty will not apply to any product which is altered or modified without the expressed permission of the Company and/or repaired by anyone other than Authorized Service Distributors or Authorized Service Dealers.

LIMITED WARRANTY IS DEPENDENT UPON THE STRICT OBSERVANCE BY THE PURCHASER OF THE FOLLOWING PROVISIONS :

- That this Limited Warranty shall not be assigned or transferred to anyone unless the Company's consent in writing has first been obtained.
- The warranty/product registration form has been correctly completed by dealer and purchaser with their names and addresses, dated, signed and returned to the appropriate address as given on the warranty/product registration form.
- The claim form sent to KUHN has been correctly completed stating:
 - * dealer's name and address
 - * owner's name and address
 - * type of machine
 - * machine serial number
 - * delivery date to buyer
 - * date of failure
 - * tractor make and type
 - * description of the failure and its cause
 - * quantity, reference number and name of the damaged parts
 - * reference number, quantity and date of the invoice for the replacement parts.
- The judgement of the Company in all cases of claims under this Limited Warranty shall be final and conclusive and the purchaser agrees to accept its decisions on all questions as to defect and to the exchange of any part or parts.
- That all safety instructions in the Operator's Manual shall be followed and all safety guards regularly inspected and replaced where necessary.

No warranty is given on second-hand products and none is to be implied. Persons dealing in the Company's products are in no way legal agents of the Company and have no right or authority to assume any obligation on their behalf, express implied, or to bind them in any way.

KUHN S.A. reserves the right to incorporate any change in design in its products without obligation to make such changes on units previously manufactured.

Moreover, because of the constant progress in technology, no guarantee is given to the descriptions of equipment published in any document by the company.

DISCLAIMER OF FURTHER WARRANTY

There are no warranties, expressed or implied, except as set forth above. There is no warranty of merchantability. There are no warranties which extend beyond the description of the product contained herein. In no event shall the company be liable for indirect, special or consequential damages (such as loss of anticipated profits) in connection with the retail purchaser's use of the product.

- NOTES -



This machine complies with the safety requirements of the European machinery directive.



The Operator should respect all Health and Safety regulations as well as the Highway Code. For your own safety, use only genuine KUHN spare parts. The manufacturer disclaims all responsibilities due to incorrect use or non-compliance with the recommendations given in this manual.



**For your safety
and to get the best from your machine,
use only genuine KUHN parts**

**KUHN S.A. 4 Impasse des Fabriques F - 67706 SAVERNE CEDEX (FRANCE)
Tél. : + 33 (0) 3 88 01 81 00 - Fax : + 33 (0) 3 88 01 81 03
www.kuhnsa.com - E-mail : info@kuhnsa.com
Société Anonyme au Capital de 19 488 000 Euros**

Printed in France by KUHN