

N catalog	Model	Name manual
DC Reachstacker		
KLM03-01	CC 35000 RS	Reachstacker KALMAR CC 35000 RS Spare parts catalog
KLM03-02	DC 845 RS	Reachstacker KALMAR DC 845 RS Spare parts catalog
KLM03-03	DC 1050 RS	Reachstacker KALMAR DC 1050 RS Spare parts catalog
KLM03-04	DC 4160 RC	Reachstacker KALMAR DC 4160 RC4, RC5 Spare parts catalog
KLM03-05	DC 4160 RC	Reachstacker KALMAR DC 4160 RC4, RC5 Operation manual
KLM03-06	DC 4160 RS	Reachstacker KALMAR DC 4160 RS4, RS5 Spare parts catalog
KLM03-07	DC 4160 RS	Reachstacker KALMAR DC 4160 RS4, RS5 Hand book
KLM03-08	DC 4161 RC	Reachstacker KALMAR DC 4161 RC4, RC5 Spare parts catalog
KLM03-09	DC 4161 RC	Reachstacker KALMAR DC 4161 RC4, RC5 Operation manual
KLM03-10	DC 4161 RS	Reachstacker KALMAR DC 4161 RS4, RS5 Spare parts catalog
KLM03-11	DC 4161 RS	Reachstacker KALMAR DC 4161 RS4, RS5 Hand book
KLM03-12	DC 4170 RC	Reachstacker KALMAR DC 4170 RC4, RC5 Spare parts catalog
KLM03-13	DC 4170 RC	Reachstacker KALMAR DC 4170 RC4, RC5 Operation manual
KLM03-14	DC 4170 RS	Reachstacker KALMAR DC 4170 RS4, RS5 Spare parts catalog
KLM03-15	DC 4170 RS	Reachstacker KALMAR DC 4170 RS4, RS5 Hand book
KLM03-16	DC 4171 RC	Reachstacker KALMAR DC 4171 RC4, RC5 Spare parts catalog

KLM03-17	DC 4171 RC	Reachstacker KALMAR DC 4171 RC4, RC5 Operation manual
KLM03-18	DC 4171 RS	Reachstacker KALMAR DC 4171 RS4, RS5 Spare parts catalog
KLM03-19	DC 4171 RS	Reachstacker KALMAR DC 4171 RS4, RS5 Hand book
KLM03-20	DC 4180 RC	Reachstacker KALMAR DC 4180 RC4 Spare parts catalog
KLM03-21	DC 4180 RC	Reachstacker KALMAR DC 4180 RC4 Operation manual
KLM03-22	DC 4180 RS	Reachstacker KALMAR DC 4180 RS4 Spare parts catalog
KLM03-23	DC 4180 RS	Reachstacker KALMAR DC 4180 RS4 Hand book
KLM03-24	DC 4560 RC	Reachstacker KALMAR DC 4560 RC4, RC5 Spare parts catalog
KLM03-25	DC 4560 RC	Reachstacker KALMAR DC 4560 RC4, RC5 Operation manual
KLM03-26	DC 4560 RC	Reachstacker KALMAR DC 4560 RC4, RC5 Hand book
KLM03-27	DC 4560 RS	Reachstacker KALMAR DC 4560 RS4, RS5 Spare parts catalog
KLM03-28	DC 4561 RC	Reachstacker KALMAR DC 4561 RC4, RC5 Hand book
KLM03-29	DC 4570 RC	Reachstacker KALMAR DC 4570 RC4, RC5 Hand book
KLM03-30	DC 4571 RC	Reachstacker KALMAR DC 4571 RC4 Hand book
KLM03-31	DC 4571 SRS	Reachstacker KALMAR DC 4571 SRC4, 5 Hand book
KLM03-32	DC 4571 SRC	Reachstacker KALMAR DC 4571 SRS5 Hand book
KLM03-33	DC 4580 RC4	Reachstacker KALMAR DC 4580 RC4 Hand book
DRG Reachstacker		

KLM03-35	DRG420-60	Reachstacker KALMAR DRG420-60 S5 Spare parts catalog
KLM03-36	DRG420-60	Reachstacker KALMAR DRG420-60 S5 Operation manual
KLM03-37	DRG420-70	Reachstacker KALMAR DRG420-70 S6 Spare parts catalog
KLM03-38	DRG420-70	Reachstacker KALMAR DRG420-70 S6 Operation manual
KLM03-39	DRG450-60	Reachstacker KALMAR DRG450-60 S5, S5X Spare parts catalog
KLM03-40	DRG450-60	Reachstacker KALMAR DRG450-60 S5, S5X Operation manual
KLM03-41	DRG450-70	Reachstacker KALMAR DRG450-70 S5, S5XS Spare parts catalog
KLM03-42	DRG450-70	Reachstacker KALMAR DRG450-70 S5, S5XS Operation manual
KLM03-43	DRG450-80	Reachstacker KALMAR DRG450-80 S4X Spare parts catalog
KLM03-44	DRG450-80	Reachstacker KALMAR DRG450-80 S4X Operation manual
DRS Reachstacker		
KLM03-46	DRS4527-S5	Reachstacker KALMAR DRS4527-S5 Spare parts catalog
KLM03-47	DRS4527-S5	Reachstacker KALMAR DRS4527-S5 Operation manual
KLM03-48	DRS4527-S5	Reachstacker KALMAR DRS4527-S5 Maintenance manual
KLM03-49	DRS4531-S5	Reachstacker KALMAR DRS4531-S5 Spare parts catalog
KLM03-50	DRS4531-S5	Reachstacker KALMAR DRS4531-S5 Operation manual
KLM03-51	DRS4531-S5	Reachstacker KALMAR DRS4531-S5 Maintenance manual
DRT Reachstacker		

KLM03-53	DRT 450	Reachstacker KALMAR DRT 450 Spare parts catalog
KLM03-54	DRT 450	Reachstacker KALMAR DRT 450 Operation manual
KLM03-55	DRT 450	Reachstacker KALMAR DRT 450 Workshop manual
KLM03-56	DRT 450	Reachstacker KALMAR DRT 450 Maintenance manual