# **EXCAVATOR MH4.6 MHPlusC**

## WORKSHOP MANUAL



#### **IMPORTANT:**

14005

The information contained in this manual are valid at printing time. As the Manufacturer continuously improves his products, some information may not be updated. In case of discrepancies, apply to Sales and Service Department.

### NEW HOLLAND KOBELCO CONSTRUCTION MACHINERY S.p.A. - ENGINEERING **PRINT 604.13.482**

January 2005 issue - Printed in Italy

#### TO THE READER

- This manual has been written for a skilled technician, in order to give him the information necessary to repair this machine.
  - Read this manual carefully for correct information about repair procedures.
  - For any question or comment, or in case you notice a mistake in this manual content, please contact:

NEW HOLLAND KOBELCO CONSTRUCTION MACHINERY S.p.A. Strada di Settimo, 323 San Mauro Torinese (TO) 10099 ITALIA PRODUCT SUPPORT Fax. ++39 011 0077357

#### ADDITIONAL REFERENCE MANUA'.s

- In addition to this Workshop Manual, ref., also to the following:
  - Operation and maintenance in a uction manual
  - Spare parts catalog

#### DESCRIPTION OF THE COMPLETE WORKSR. OP MANUAL

• The complete repair manual consists of two volumes:

MH4.6 - MHPlusC Workshop Manual "Excavator"

MH4.6 - MHPlusC Workshop Manual "Engine"

- "Excavator" and "Engine" Workshop Manuals contain the technical information necessary for machine/engine service and repair, service equipment, information on maintenance standards, remove and install procedures, disassembly and assembly procedures.
- The complete Workshop Manual for the excavator models MH4.6, MHPlusC consists of the following volumes identified by print number as shown herebelow:

VOLUME	MACHINE TYPE	PRINT No.
- Workshop Manual - "Excavator"	MH4.6 - MHPlusC	604.13.482
- Workshop Manual - "Engine"	MH4.6 - MHPlusC	604.13.582

#### AVOID ACCIDENTS

Most accidents, whether they occur in industry, on the farm, at home or on the highway, are caused by the failure of some individuals to follow simple and fundamental safety rules or precautions. For this reason MOST ACCIDENTS CAN BE PREVENTED by recurning the real cause and doing something about it before the accident occurs.

Regardless of the care used in the design an construction of any type of equipment there are conditions that cannot be completely safeguarded against without interfering with resonable accessibility and efficient operation.

Carefully read indications, (2015) s and safety warning quoted in the "SAFETY RULES" section

A careful operator is the vest, surance against an accident.

The complete observation a simple rule would prevent many thousand serious injuries ac. ver 2.

That rule is:

Never attempt, clean, oil or adjust a machine while it is in motion.




In machines having hydraulically, mechanically and/or cable controlled equipment (such as showels, loaders, dozers, scrapers etc.) be certain the equipment is lowered to the ground before servicing, adjusting and/or repairing.

If it is necessary to have the equipment partially or fully raised to gain access to certain items, be sure the equipment is suitably supported by means other than the hydraulic lift cylinders, cable and/or mechanical device used for controlling the equipment.

#### COPYRIGHT BY NEW HOLLAND KOBELCO CONSTRUCTION MACHINERY S.p.A. Product Support - Documentation Centre Strada di Settimo, 323 - 10099 - S. Mauro T.SE (TO) ITALY

All rights reserved. Reproduction of text and illustrations in whole or in part, is strictly prohibited.

# MH4.6 MHPlusC

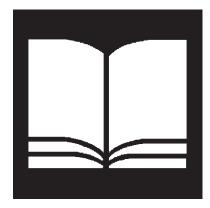

SECTION 1	HOW TO USE
INDEX	
Sections index	1-1
Introduction	
Introduction Manual handling Symbols and indications	
Manual handling	
Symbols and indications	
Features of the m. vu.	
Manual composition	
Brief information to manual consultation	

Buy now

New Holland Kobelco Excavator MH4.6, MHPlusC Workshop Manual PDF

With Instant Download