


Electrical Forklift Truck

(Electric four-wheel Forklift Truck)

CPD10/15/18/20/25/30-A
CPD10/15/18/20/25/30/35-AC3
CPD10/15/18/20/25/30/35-AC3F
CPD10/15/18/20/25/30/35-AC4
CPD10/15/18/20/25/30/35-AC4F
CPD10/15/18/20/25/30/35-AD2
CPD25-ALC3 CPD25-ALC3F
CPD25-ALC4 CPD25-ALC4F
CPD25-ALD2

OPERATION AND MAINTENANCE MANUAL

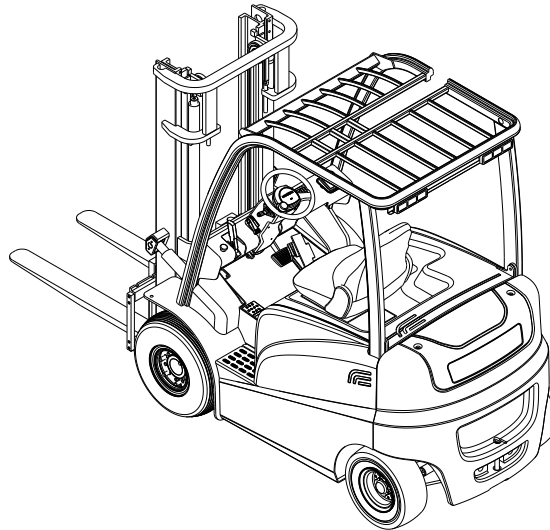

Original Instruction

HANGCHA GROUP CO., LTD.

5 / 2013

FOREWORD

Thanks for you purchasing our A series electric four-wheel forklift truck.

A series electric four-wheel forklift truck is our company's new product. It has the character of small turning radius, beautiful shape, small dimensions, low gravity, good stability, superior performance.

This operation manual is the explanations that how to use 1.0t~3.5t A series electric four-wheel forklift truck correctly. It will instruct you how to operate safety and precautionary maintenance. To ensure safety and exert the truck's potential, all the personnel that in charge of operation, maintenance and management must read this manual thoroughly before starting work with the forklift.

As the improvements of products of our company, maybe there are some differs between this operation manual with your forklift truck.

If you have any questions please keep touches with HANGCHA GROUP CO., LTD.sales department or let the agents know.

Model	Controller (Drive motor)	Controller (Pump motor)	Rated capacity(t) / Load centre(mm)
CPD10-A	Curtis 1244	Curtis 1253	1.0 / 500
CPD15-A	Curtis 1244	Curtis 1253	1.5 / 500
CPD18-A	Curtis 1244	Curtis 1253	1.8 / 500
CPD20-A	Curtis 1244	Curtis 1253	2.0 / 500
CPD25-A	Curtis 1244	Curtis 1253	2.5 / 500
CPD30-A	Curtis 1244	Curtis 1253	3.0 / 500
CPD10-AC3	Curtis 1236	Curtis 1253	1.0 / 500
CPD15-AC3	Curtis 1236	Curtis 1253	1.5 / 500
CPD18-AC3	Curtis 1236	Curtis 1253	1.8 / 500
CPD20-AC3	Curtis 1236	Curtis 1253	2.0 / 500
CPD25-AC3	Curtis 1236	Curtis 1253	2.5 / 500
CPD30-AC3	Curtis 1236	Curtis 1253	3.0 / 500
CPD35-AC3	Curtis 1238	Curtis 1253	3.5 / 500
CPD10-AC4	Curtis 1236	Curtis 1236	1.0 / 500
CPD15-AC4	Curtis 1236	Curtis 1236	1.5 / 500
CPD18-AC4	Curtis 1236	Curtis 1236	1.8 / 500
CPD20-AC4	Curtis 1236	Curtis 1236	2.0 / 500
CPD25-AC4	Curtis 1236	Curtis 1236	2.5 / 500
CPD30-AC4	Curtis 1236	Curtis 1236	3.0 / 500
CPD35-AC4	Curtis 1238	Curtis 1236	3.5 / 500
CPD10-AD2	Danaher ACS48M-35P	Danaher ACS48M-23P	1.0 / 500
CPD15-AD2	Danaher ACS48M-35P	Danaher ACS48M-23P	1.5 / 500
CPD18-AD2	Danaher ACS48M-35P	Danaher ACS48M-23P	1.8 / 500
CPD20-AD2	Danaher ACS48M-35P	Danaher ACS48M-23P	2.0 / 500
CPD25-AD2	Danaher ACS48M-35P	Danaher ACS48M-23P	2.5 / 500
CPD30-AD2	Danaher ACS80M-35P	Danaher ACS80M-23P	3.0 / 500
CPD35-AD2	Danaher ACS80M-35P	Danaher ACS80M-23P	3.5 / 500
CPD10-AC3F	Curtis 1236	Curtis 1253	1.0 / 500
CPD15-AC3F	Curtis 1236	Curtis 1253	1.5 / 500
CPD18-AC3F	Curtis 1236	Curtis 1253	1.8 / 500
CPD20-AC3F	Curtis 1236	Curtis 1253	2.0 / 500

Model	Controller (Drive motor)	Controller (Pump motor)	Rated capacity(t) / Load centre(mm)
CPD25-AC3F	Curtis 1236	Curtis 1253	2.5 / 500
CPD30-AC3F	Curtis 1236	Curtis 1253	3.0 / 500
CPD35-AC3F	Curtis 1238	Curtis 1253	3.5 / 500
CPD10-AC4F	Curtis 1236	Curtis 1236	1.0 / 500
CPD15-AC4F	Curtis 1236	Curtis 1236	1.5 / 500
CPD18-AC4F	Curtis 1236	Curtis 1236	1.8 / 500
CPD20-AC4F	Curtis 1236	Curtis 1236	2.0 / 500
CPD25-AC4F	Curtis 1236	Curtis 1236	2.5 / 500
CPD30-AC4F	Curtis 1236	Curtis 1236	3.0 / 500
CPD35-AC4F	Curtis 1238	Curtis 1236	3.5 / 500
CPD25-ALC3	Curtis 1236	Curtis 1253	2.5 / 500
CPD25-ALC3F	Curtis 1236	Curtis 1253	2.5 / 500
CPD25-ALC4	Curtis 1236	Curtis 1236	2.5 / 500
CPD25-ALC4F	Curtis 1236	Curtis 1236	2.5 / 500
CPD25-ALD2	Danaher ACS80M-35P	Danaher ACS80M-23P	2.5 / 500

CONTENT

Foreword


1. Appearance and the main components	1
2. Displays and Controls	2
Multi-function display	4
Controls	12
Seat	17
Seat Aware System(For CE)	20
3. Nameplate and Safety Labels	22
4. Technical Specifications	24
5. Safety Instructions	29
6. Forklift Transport,Lifting & Towing	35
Transport	35
Lifting.....	35
Towing.....	36
7. The Structure and Stability of Truck	37
8. Running-in of the new truck	40
9. Daily Maintenance	41
10. Driving and Operation	45
Driving	45
Traveling.....	45
Turning	45
Stopping or parking	45
Loading.....	46
Stacking load.....	46
Un-stacking load.....	47
Check after operation	47
11. Deposit	48
12. Battery	49
13. Maintenance summarization	58
Preventive maintenance schedule.....	59
Replace the key safe parts termly	66
Table for bolts tightening torque	67
Table for oil used in the truck	68
14. The use, Install and Safety Rules of attachment	69
15. Battery automatic filling water system(Optional)	71
16. Related Safety Instruction and Standard(For CE)	76

1. Appearance and the main components



Item	Description
1	Fork
2	Load backrest
3	Mast
4	Rearview mirror
5	Overhead guard
6	Driver's seat
7	Counterweight cover
8	Counterweight
9	Towing pin
10	Rear wheel
11	Battery behind cover hood
12	Front wheel

2. Displays and Controls

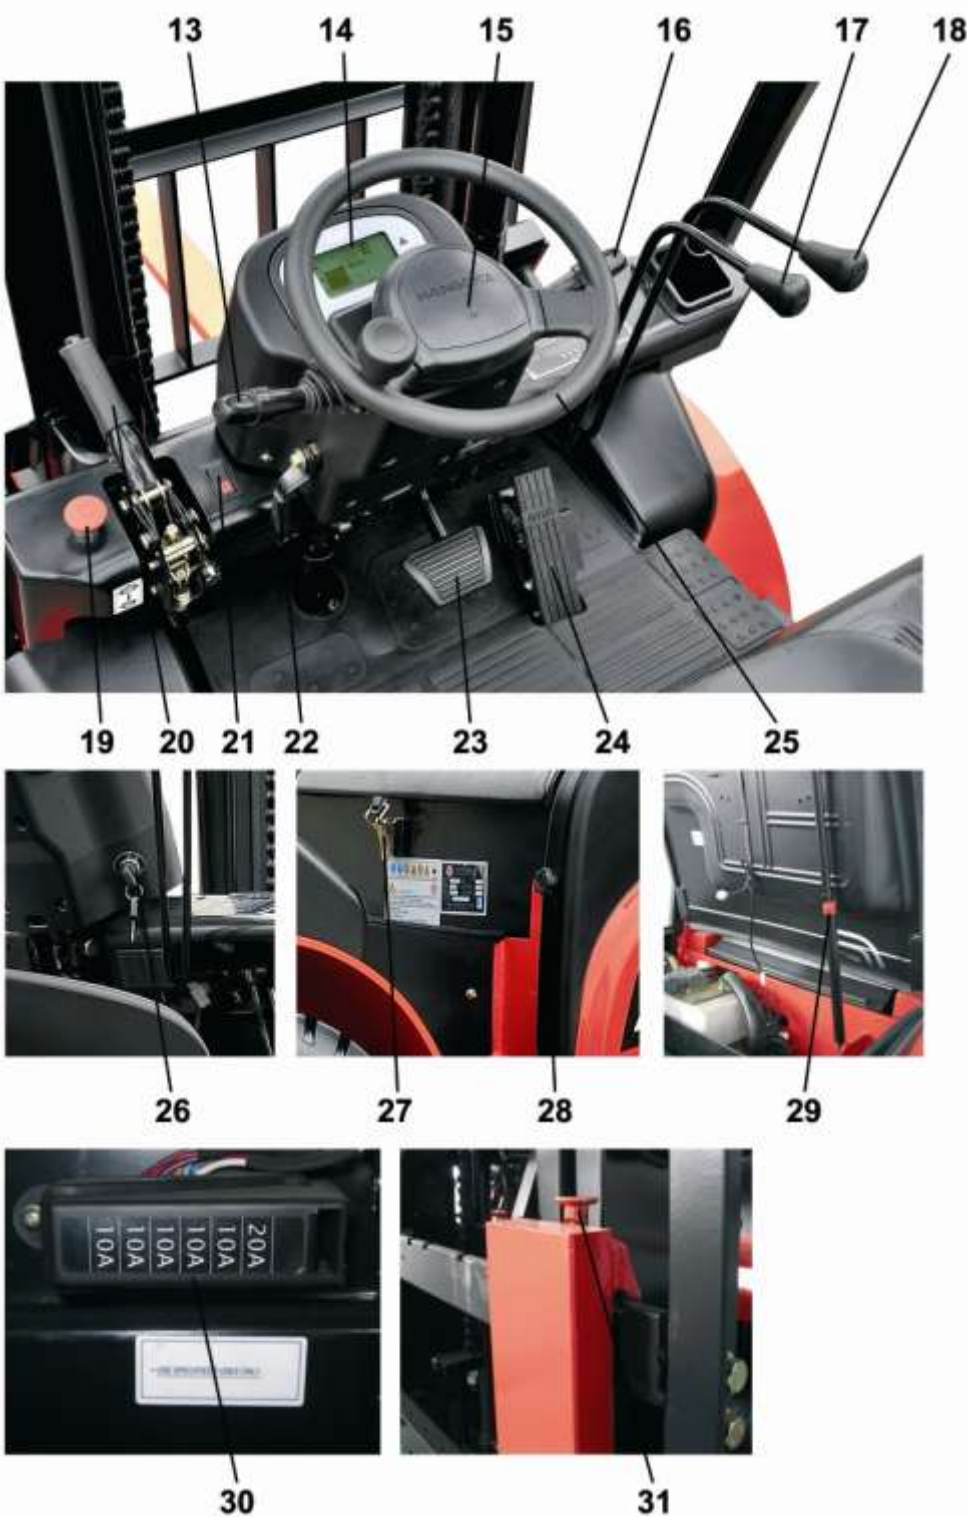


Item	Control / Display
13	Travel direction switch
14	Multi-function display
15	Horn
16	Combination light switch
17	Lifting lever
18	Tilting lever
19	Emergency disconnect switch
20	Parking brake lever
21	Warning light switch
22	Steering column positioning device
23	Brake pedal
24	Accelerator pedal
25	Steering wheel
26	Key switch
27	Locker of battery cover hood
28	Locking bolt of battery side plate
29	Air spring
30	Fuse box
31	Fork stopper

Multi-function display


CPD10/15/18/20/25/30-A CPD10/15/18/20/25/30/35-AC3 CPD10/15/18/20/25/30/35-AC4
 CPD10/15/18/20/25/30/35-AC3F CPD10/15/18/20/25/30/35-AC4F
 CPD25-ALC3 CPD25-ALC3F CPD25-ALC3 CPD25-ALC3F

The multi-function display shows the battery capacity, the service hours, the operating mode, the travel speed and fault code information. Graphic illustrations on the multi-function display on the right button can also check fault code and parameter setting.

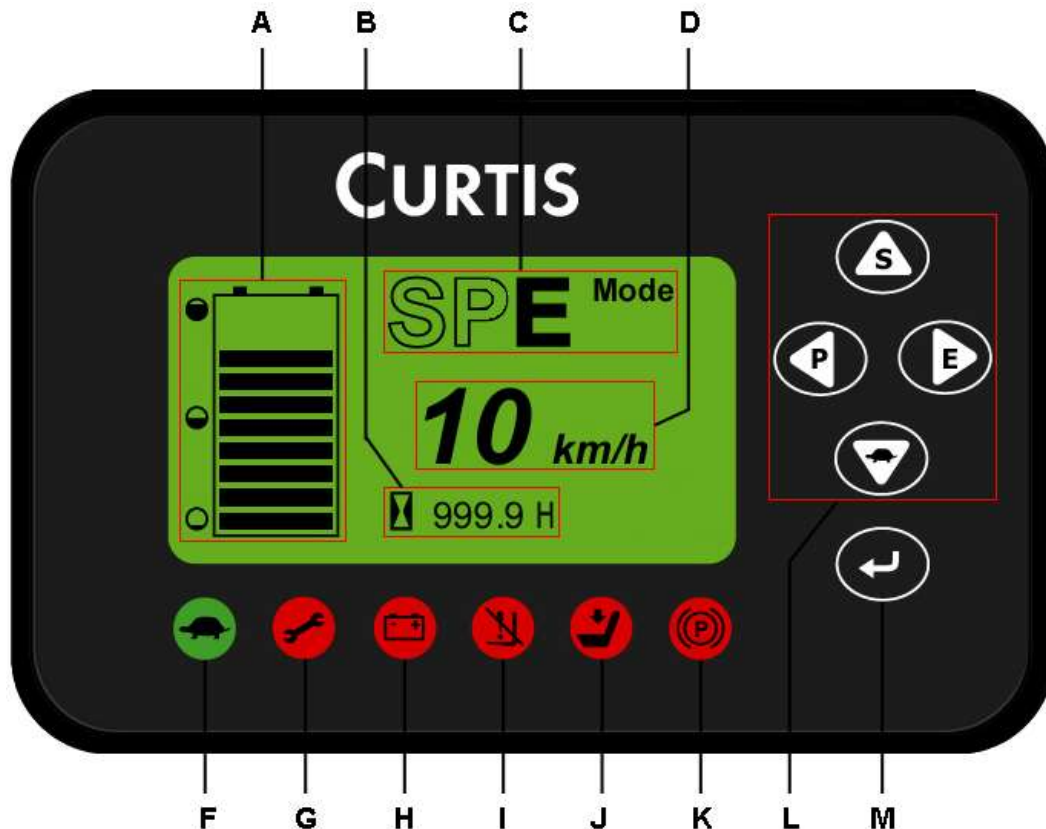


Item	Display
A	Battery capacity display
B	Service hours display
C	Operating mode display
D	Travel speed or fault code display
F	Crawl speed indicator
G	Fault indicator
H	Battery low capacity indicator
I	Lifting low speed indicator
J	Seat switch indicator
K	Parking brake applied indicator
L	Mode settings or direction choosing button
M	Menu button

Main display interface

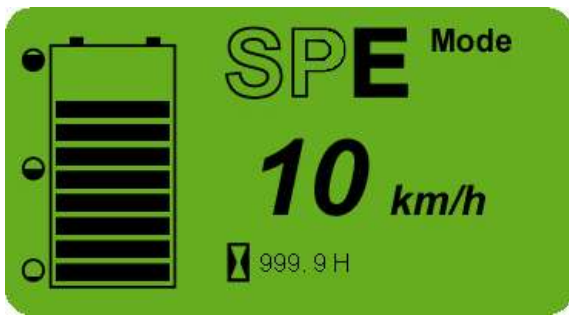

Battery capacity display[A]

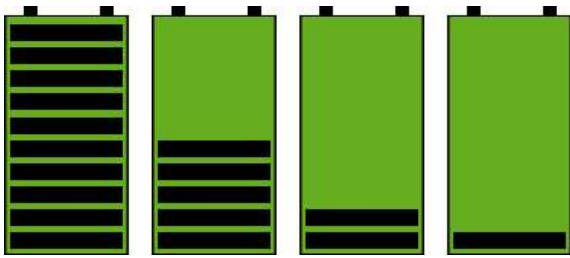

Indicates the available residual capacity.

As the following diagram shows, from the left to the right, the battery decreases from full state to the only one case, which represents that the battery leaves only 20%. Thus the whole battery indicator bar will twinkle, and the state indicator lamp will be bright, now please stop working and charge immediately.



CAUTION

- **Charging in time is very important, otherwise it will affect the lift-span of battery!**

Service hours display[B]



Hourglass icon indicates that timing function.

When you turn off the key switch, the hour meter will works and the minimum unit is 0.1 hour.

Operating mode display[C]




As the diagram shows, the pictures from the left to the right represent the mode of **S** mode → **P** mode → **E** mode → **SPE** mode.

S mode is super mode, thus the truck's acceleration, deceleration rate, max climbing gradient and so on is much higher. It is applied for transporting mass of good in short time and climbing big gradient slop, but it costs more energy, so the mode will not be used in normal state except emergency.

P mode is power mode. All kinds of index are lower than that of super mode. It is applied for the case of long distance transporting and needing higher power or speed.

E mode is economical mode. All the parameters are optimized. Working in this mode can save power so it is applied for a long time work after charging, and it is suggested to work in this mode in normal work-time.

SPE mode is safe mode. Thus the max vehicle speed is limited to about 7km/h. It is applied for working in busy storage and cabined room.

SPE mode: The truck is in Safety Mode. In this mode, maximum traveling speed is limited to 7km/h. it is very good for working in a crowd warehouse or other compact space. In this mode, the slow indicator[F]  will be on.



CAUTION

- **The default mode is mode E. after power cutting every time, the work mode resets to mode E no matter which mode it is before power cutting, but the switch key is still in the mode before turn off.**

Travel speed or fault code display[D]

Travel speed display



Normal work, display the truck travel speed.

Fault code display

TRA: 4,7
HYD: OK

Failure occurs, display the controller's fault code.

Note: "TRA" means the traction controller, "HYD" means the pump controller.

Indicator light



Crawl speed indicator[F](Green)



When the truck in SPE mode, the crawl speed indicator light up.

Fault indicator[G](Red)



The light up when the controller is wrong or operation mistake, and the fault code shows in the main display screen.

Battery low capacity indicator[H](Red)



When there is only one line for the power, the indicator will be on to remind the user to charge the battery.

Lifting low speed indicator[I](Red)



When there is 10% power, the indicator is on, and the mast lifting speed drops, to remind user to charge the battery as soon as possible.

Seat switch indicator[J](Red)



When operator leaves the seat, the light will be on, and the truck will be unable to travel or lift. This function needs the seat to equip with seat

switch (optional).

Parking brake applied indicator[K]







When parking brake applied, the light up.


Button


Mode settings or direction choosing button[L]







Mode settings

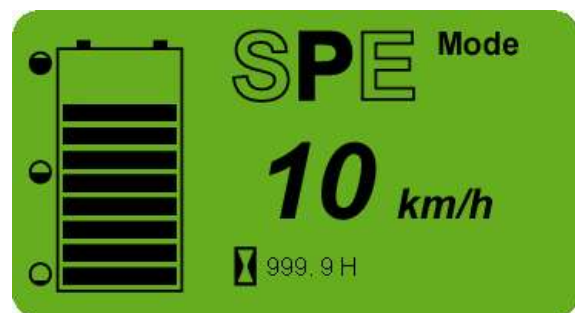In the main display interface, the button , , , , corresponding S mode、P mode、E mode、SPE mode.

For example: In the main display interface, press the button , the screen shows as follows:




Direction choosing

In the menu interface, the button , , , , corresponding up、left、right、down four direction choosing button keys.


Menu button[M]



(1) In the main display interface, press the

button , and then enter the fault code interface. The fault code shows as follow:



(2) In the main display interface, press the button  over 2 seconds, and then enter the main menu .

The main menu includes: operation menu, advanced settings and exit.



OPERATION MENU

The operation menu includes : Software version information, language settings, LCD contrast settings, LCD brightness settings, programmer settings and exit.




ADVANCED SETTINGS

This menu needs password.





Through the example below shows how to use the button settings parameter .


For example: The language from english switch to chinese.


① In the main display interface, press the menu button  over 2 seconds, and then enter the main menu .




② Select the “OPERATION MENU” through up button  or down button  .



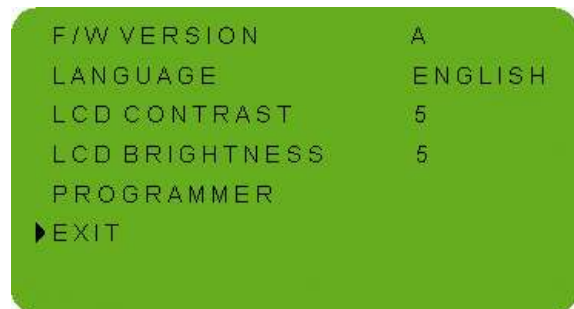

③ Press the menu button , enter the operation menu.



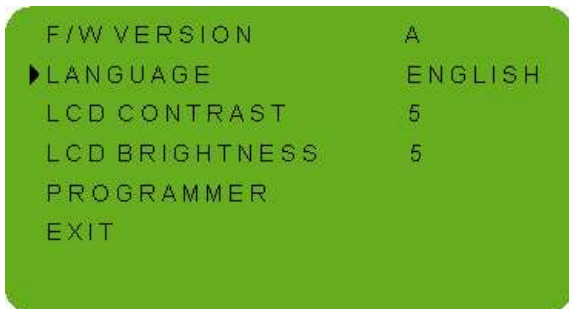


④ Select the “LANGUAGE” through **up button**() or **down button**() .



⑤ Enter the language setting state through **left button**() or **right button**() .



⑥ Through the **up button**() or **down button**() , select the chinese language.

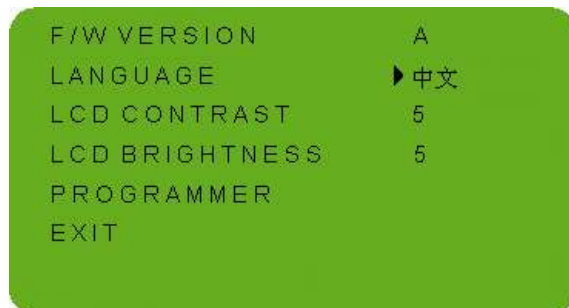


⑦ Refer the steps ⑤ ④ ③ ② ①, return the main display interface.

The language has been set up .

Note: this instrument supports two languages of Chinese and English, it will set to your wanted language and if you want to switch the language, please refer to the above example for operation.

CPD10/15/18/20/25/30/35-AD2
 CPD25-ALD2

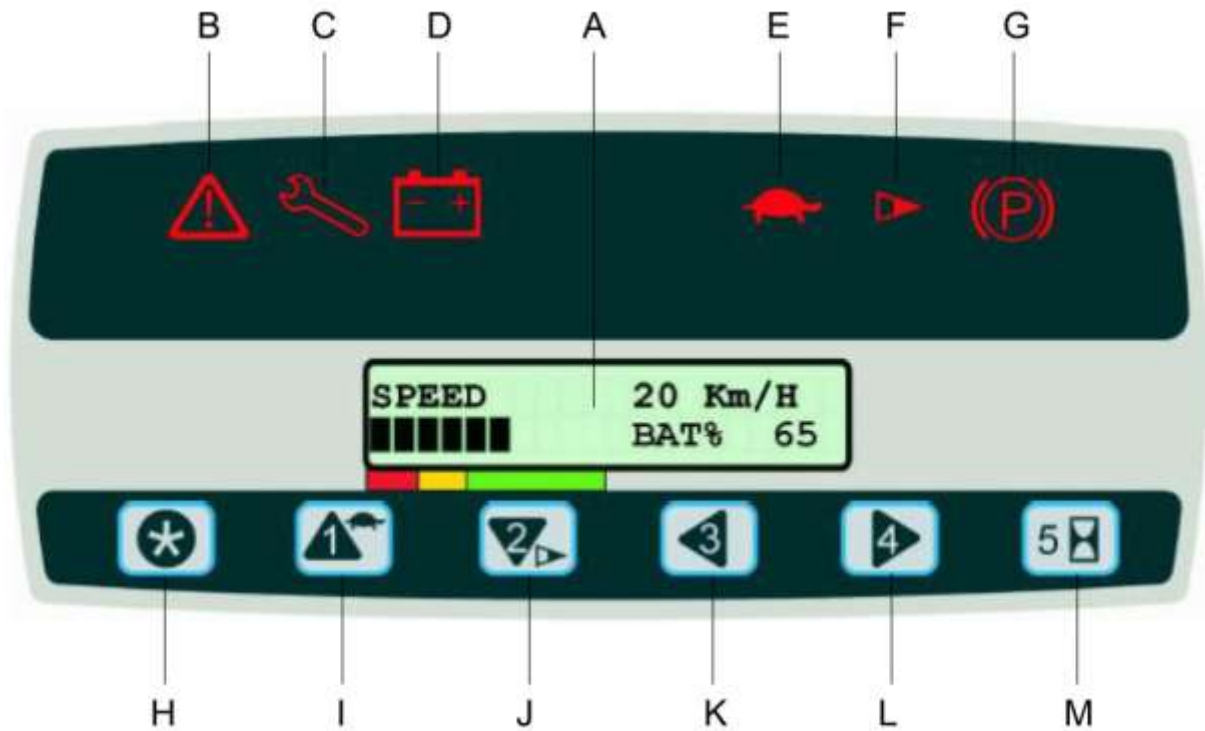

Item	Display
A	Dashboard display LCD
B	Communicate indicator
C	Error indicator
D	Low battery warning
E	Speed limited indicator
F	Accelerate indicator
G	Parking brake indicator
H	Entrance button
I	Speed limited button
J	Accelerator limited button
K	Backup button
L	Backup button
M	Switch button of hour indication

Dashboard display LCD [A]



When turn on the key switch, the system will self-diagnose, the lamp will lights on one by one. After self-diagnose, LCD will display truck speed and battery capacity. You can know your truck's working condition through the LCD dashboard.

Communicate indicator [B]




Only lights on when record program, usually it is no use.

Error indicator [C]



When operation is wrong or the truck is in trouble, error code will display on the dashboard. The error indicator lights on.

Low battery warning [D]

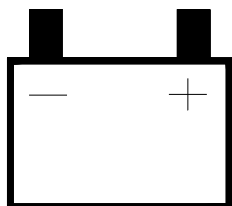


When battery quantity is lower than 20% of maximum capacity, the indicator lights are on, at the same time, buzzer beep. When LED shows no power, please charge battery as quick as possible.

Speed limited indicator [E]




When this lamp lights, it meanings the truck working at low speed mode. The maximum speed of truck decreased. Press button 1, you can switch the high speed and low speed mode.

Accelerate indicator [F]

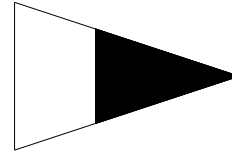


When this lamp lights on, it means the truck working at low acceleration mode. The maximum acceleration decreased. Press button 2, you can switch the high acceleration and low acceleration mode.

Parking brake indicator [G]

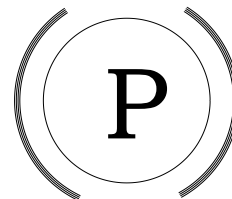


When pulling on the parking brake lever, this lamp lights on.

Entrance button [H]

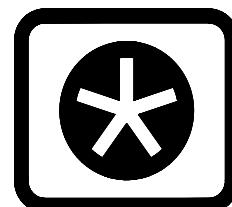

This button is no use for operator.

Speed limited button [I]

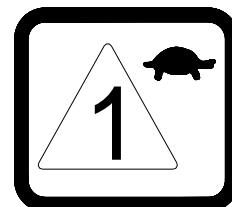

Press this button to switch the high speed and low speed.

Accelerator limited button [J]



Press this button to switch the high acceleration and low acceleration.

Backup button [K]



This button is no use for operator.

Backup button [L]




This button is no use for operator

Switch button of hour indication [M]



Push this button, it will display the total hours of truck, as follow figure:




Push again, it switch to the total traction hour.



Push the button once again, it switch to speed display mode.

Controls

Travel direction switch [13]

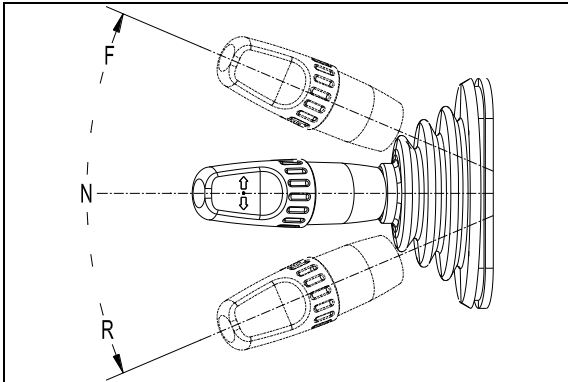

Sets the required travel direction.

The travel direction switch is used for switching between forward and backward moves. When the travel direction switch is pushed forward and accelerator pedal pressed, the forklift trucks moved forward. When the travel direction switch is pushed backward, the forklift trucks moved backward.


CAUTION

- While traveling, if change the travel direction switch, electric braking will operate, speed will lower until stop, then travel to the opposite direction.

WARNING

- Turning the key switch “on” does not make the forklift truck move, if the travel direction switch is not in the neutral position or the accelerator pedal is being pressed. In this case, the travel direction switch should be returned to neutral and move you foot from the accelerator pedal. Then the truck can be operated.

Combined light switch [16]

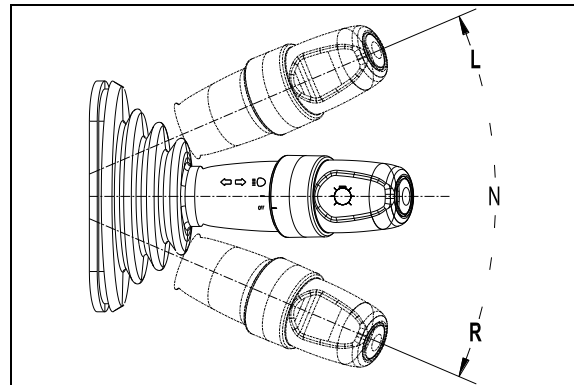

Control the turn signal lights, headlights and front small lights working condition.


This combined light switch is composed of turning light switch and big/small lamp switch. Turning light indicates the traveling direction. When turn on the switch, the lamp flashes. The light switch has two shifts. First shift small lights on; second shift headlights and small lights both up.

Forward	Left turning lamp flashes
Neutral	Lamp goes off
Backward	Right turning lamp flashes

CAUTION

- The turn signal switch does not automatically return to the neutral position. Reset it by your hand.

Lifting lever [17]

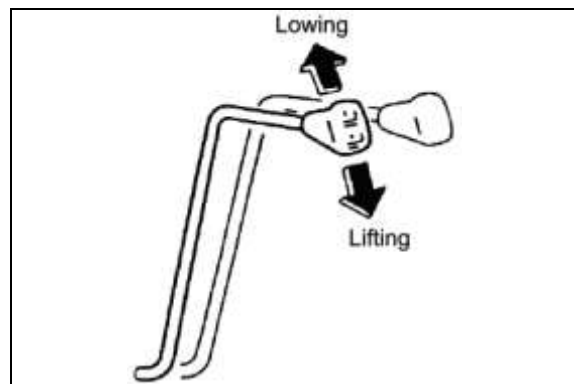


Lifts / lowers the forks.

The forks can be raised or fell by pulling backwards or pushing the lever. Lifting speed

can be controlled by tilt backwards angle of lever and the lowering speed can be controlled by tilt forwards angle of the lever.

Tilting lever [18]

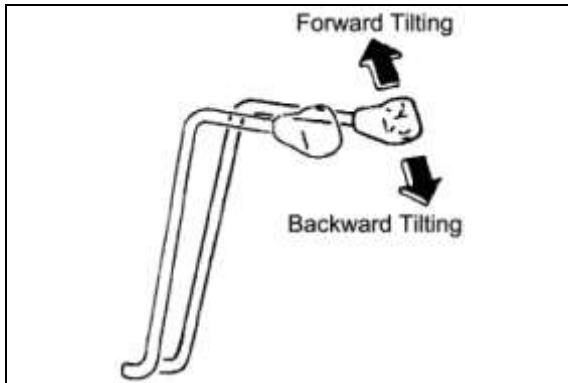

Tilts the forks forward / backward.

The forks can be tilted by operation of this tilt lever. Pulling on this lever backwards will tilt the forks backwards, and pushing it forwards will tilt the forks forwards. The tilt speed can be controlled by tilt angle of the lever.

CAUTION

- **The tilt lock mechanism built in the hydraulic control valve does not allow the mast to tilt forwards while the electricity is being shut down even if the tilt lever is pushed forwards.**

Emergency disconnect switch [19]

Switches power supply on and off.

When happen emergency, presses down the emergency disconnect switch, and then the main power of the truck will be cut off, the truck stops working.

CAUTION

- **Please don't use the emergency disconnect switch to substitute the function of key switch.**

Parking brake lever [20]

Secures the truck when stationary.

Use this parking brake lever to park the lift truck. And the parking brakes are applied on the front two wheels by pulling up on this lever. To release the parking brakes, move the lever forwards.


There is a micro switch at the left side of the parking brake lever, tense the lever makes running invalid.

For the truck of CE: if you leave the seat without tensing the lever, it will warn and remind you to tense the lever.

WARNING

- **If parking on a grade is unavoidable, be sure to block the wheel.**

Steering column positioning device [22]

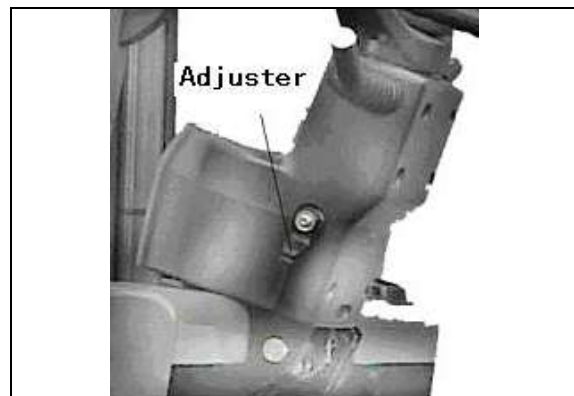

Adjusts and fixes the steering column to the required distance.

The tilting angle of the steering column is adjustable to suit individual operators. Turn the hand lever upward to release the steering column and locked by turning it downward.

Brake pedal [23]

Decelerates the truck.

Press this pedal to slow or stop the truck. At the same time, the brake light comes on.

CAUTION

- **No permitted to press the brake pedal and the accelerator pedal at same time, otherwise, it is harmful**

to the traveling motor.

Accelerator pedal [24]

Provides infinitely variable control travel speed.

As the accelerator pedal is slowly pressed, the drive motor start turning and the forklift truck will start to move. According to the force applied to the pedal, the speed is adjusted with not steps.



CAUTION

- **Loosen the accelerator pedal when truck is working, truck can make soft brake.**



WARNING

- **Before open the key switch to press the accelerator pedal, the more function digital indicator shall show alarm information. Then you must release the accelerator pedal.**

Steering wheel [25]

It's can control the forklift steering.

The steering hand-wheel is operated in the conventional manner, that is, when the wheel is turn right, the truck will turn to the right; when the wheel is turn left, the truck will turn to the left. The steer wheels are located at the rear of the truck. These cause the rear of the truck to swing out when a turn is made.



WARNING

- **This truck is provided with the power steering, so heavy hand-wheel operation is caused when the steering motor comes to a stall. To put the power steering in operation again, restart the steering**

motor without delay.

Key switch [26]

Switches control current on and off. Removing the key prevents the truck from being switched on by unauthorised personnel.

The key switch has two "on/ off" position, you should push the Direction switch lever to neutral and loose the accelerator pedal, then turning the key switch to "on" position clockwise.



CAUTION

- **Turning the key switch "on" does not make the forklift truck move, if the Direction switch lever is not in the neutral position or the accelerator pedal is pushing.**
- **Error code maybe appear, don't worry about it.**
- **The Direction switch lever should be returned to neutral and move you foot from the accelerator pedal. Then the truck can be operated.**
- **Then the error code should be disappeared.**

Locker of battery cover hood [27]

Fixed the battery cover.


Locking bolt of battery side plate [28]

Locking the side plates on both of the battery box.

Air spring of battery cover [29]

When the battery cover hood opened, to support the cover hood. When closed the cover hood, press the red button, at the same time hard to press the cover hood.

Fuse box [30]

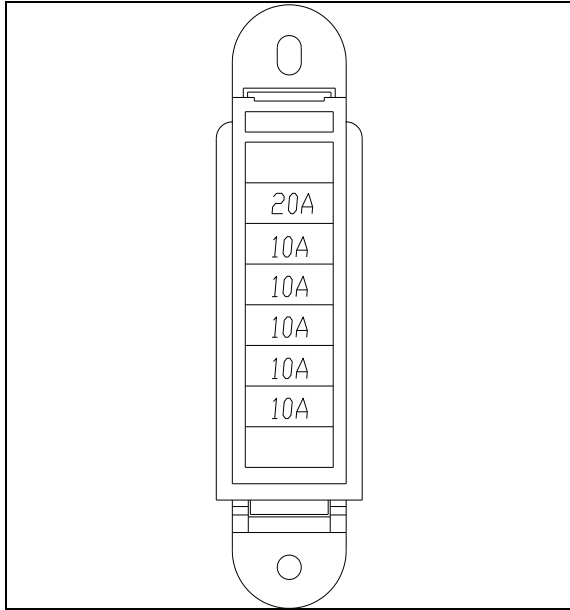

CAUTION

- When replace a new fuse, please choose the same capacity fuse of the old one.

Fork stopper [31]



Fork stoppers are locked the forks in position. To adjust fork spacing, pull up fork stoppers, turn 90° and shift the forks to the desired position. The fork spacing should be adjusting according to loads to be handled.



WARNING

- The forks should be set symmetrically to machine centerline and fork stoppers should always be locked again.
- There are one gap on the below

beam. It is used to attach goods.

- It is forbidden to lock the fork on the gap position, to prevent the fork fall off from the gap.
- In the middle of the above beam, a bolt used to prevent fork works here. Please change the bolt as soon as it is damaged.

Change fork

Take down the old fork: Firstly, locate the fork to the middle, decline it to the ground and make the mast forward, then operate the truck traveling backward, the fork will be taken down.

Change new fork: Firstly, make the fork dead against the truck and forklift's mast to the bottom, then operate the truck traveling forward, aim at the two gaps and beams, and raise the mast. Adjust the position of the fork.

Battery cover hood

The cover hood can be swung up fully to provide easy examining and maintenance of the storage batteries.

You can lift up the cover hood with little effort with an aid of cover hood damper. To lock the cover hood, push down on the front of cover hood until it covered.



CAUTION

- Be careful do not to catch you fingers in the cover hood when closing it.
- Depress the spring insurance before you close the cover hood, then press the head of the cover hood.

Overhead guard

The overhead guard used is strong enough to

meet safety standard, and protects the operator from falling materials. The top gap is used to lift the batteries. It is forbidden for use a truck that does not with safeguard.

L.H. & R.H. battery side plate


The battery is covered hood, one left and one right. When you want to take off the hood, you should take off the locking bolts at first.

Safety step and safety grip

The safely steps are provided on both side of the truck body. The safely grip is provided on the front left pillar of the overhead guard. Use the safely step and safely grip when mounting and dismounting the truck.

Brake fluid reservoir cup

The brake fluid reservoir cup is located at the meter board.

 **CAUTION**

- **The brake fluid is poisonous, be careful do not drop down. When add brake fluid, be careful do not let dirt and other thing drop into reservoir cup.**

Hydraulic oil reservoir cap

The hydraulic oil reservoir cap is located at the right rear end, below the battery hood; open the right side battery hood when adding oil. After fill in clean hydraulic fluid, tighten lock the cap.

Air leakage plug

There is an air leakage plug on the oil tank to let air in the tank goes out. You'd better often check the plug and see whether been jammed.

Head lights and combination lights

Two headlights and combination lights (turn signal, show width lamp) are installed at the front side of the truck. Take care of the lights, and wipe dirt, if any, and replace any damaged

light immediately.

Rear combination lights

The combination lights at the rear side serve as turn signal, show width lamp, brake lamp, and back-up lamp. Pay attention to keep them from being damaged or covered with dust, if any, clean or replace immediately.

Rear big lamp [For CE or Option]


The rear big lamp is set on the safeguard. If it is broken, please replace a new one at once.

Rear big lamp switch [optional]

Rear big lamp switch (push/pull) has only one shift.

x—Means connected

Connector Position	Battery	Far light
0	x	
1	x	x

 **CAUTION**

- **This light does not relate to key switch position, so please don't forget to turn off the rear big lamp when you leave the truck.**

Seat

Designing maximum comfort, this seat can be adjusted as follows.



Adjusting the seat to the driver's weight:

To achieve optimal seat cushioning the driver's seat must be adapted to the driver's weight.

- Sit on the driver's seat. When the correct weight adjustment has been made, the weight adjustment lever should be aimed at the driver's weight. If the weight adjustment lever ① is facing too far to the left or right, the seat must be adjusted to the driver's weight.
- To set the seat to a lesser weight, push the weight adjustment lever ① left.
- To set the seat to a greater weight, push the weight adjustment lever ① right.

To adjust the seat position:

- Pull up the longitudinal adjuster ② and push the driver's seat forwards or backwards to the desired position.
- Engage the longitudinal adjuster ② in position again.

WARNING

- **The longitudinal adjuster must be securely located in the desired position. The driver's seat setting must not be changed during travel.**

To adjust the backrest:

- Sit on the driver's seat.
- Press down the backrest adjustment button ③ and adjust the backrest tilt.
- Release the backrest adjustment button ③ to lock the backrest in position.

Safe belt

Put on the seat belt④ each time before starting the truck. The belt protects against serious injury.

Protect the belt from contamination and clean it regularly.

Correct use the safe belt:

- Sit correctly on the seat.
- Check that seat belt is not twisted.
- Place the seat belt at hip level.
- Attach the seat belt and check that it locks.
- Adjust the seat belt to your body shape without squeezing your hip and without over-slack.

Regular verification of seat belt related to:

- Cut or frayed straps.
- Worn or damaged hardware, including anchor points.
- Buckle or retractor malfunction.
- Loose stitching.






WARNING

- **In no event should the lift truck be used if the seat belt is defective (fixing, locking, cuts, tears, etc.). Repair or replace the seat belt immediately.**
- **Do not alter the belt setting. Always replace the seat belt after an accident.**

How to act in unusual situations

- Fasten seat belt, stay in seat.
- Do not jump !
- Lean forward, hold on tight steering wheel, brace feet.
- Lean your body away from impact.

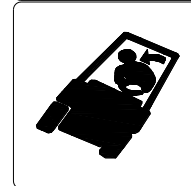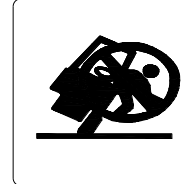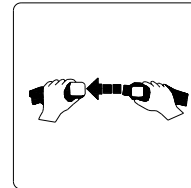

WARNING

- **If the truck is about to tip over, never undo the restraint belt and try to jump out. This will only increase the risk of serious injury or death !**

Seat Aware System(For CE)



Vehicle Forward/Reverse Control

When the vehicle is in static starting state, the driver sits incorrectly, there is no seat pressure switch input, travel selector switch hangs in the forward or reverse gear, there is no corresponding forward or reverse signal output, meanwhile, the alerting signal outputs, buzzer and indicator lights are on, the park brake hangs or the driver sits correctly, then exits the alerting condition; if the driver sits correctly and relieve the park brake, there is seat pressure switch input, travel selector switch hangs in the forward or reverse gear, there is corresponding forward or reverse signal output, the vehicle can travel forward or reverse. The driver leaves the seat (there is no seat pressure switch input) over 1 second, control state is the same with the driver sitting incorrectly.

When the vehicle is traveling forward or reversely, the driver leaves the seat (there is no seat pressure switch input) over 1 second, there is no corresponding forward or reverse signal output, the vehicle forward and reverse power is cut off, meanwhile, the alerting signal outputs, buzzer and indicator lights are on; when the park brake hangs or the driver sits correctly, it exits the alerting condition, the driver sits down again, travel selector switch hangs in the forward or reverse gear, the vehicle forward and reverse power recovers.

Forklift Working Device Control

When the vehicle starting in static condition or no starting in static condition (when it is in no starting static condition, key switch should be in travel gear), the driver sits incorrectly or falling signal switch is open, there is no seat pressure switch input, no working device pressure or falling signal output, working device is locked; if the driver sits correctly, there is seat pressure switch input and falling signal switch is closed, working device pressure and falling signal output, working device can be operated normally. The driver leaves the seat (there is no seat pressure switch input) over 1 second, control state is the same with that the driver sits incorrectly.

When the vehicle is traveling forward or reversely, the driver leaves the seat (there is no seat

pressure switch input) over 1 seconds, there is no working device pressure or falling signal output, working device is locked; when the driver sit down again, there is seat pressure switch input, and falling signal switch is closed ,working device pressure and falling signal output, working device can be operated normally.

Attention: seat aware system including single locked and double locked:


- Single locked: it is said that the system limits the forklift's travel ,when the driver leaves the seat, the traction motor will not work and the vehicle will stop.
- Double locked: it is said that the system limits the forklift's travel and mutli-way valve's work, the masts will not lift or down.

Forklift Parking Brake Control

In any vehicle state, when the driver sits incorrectly, there is no seat pressure switch input, meanwhile, do not pull the parking brake, there is alerting signal output, pull the parking brake or the driver sits correctly, it can exit the alerting condition. The driver leaves the seat (there is no seat pressure switch input) over 1 seconds, control state is the same with that the driver sits incorrectly.

3. Nameplate and Safety Labels

Warnings and notices such as Rated capacities and load centers graph, Warning label and nameplate must be legible at all times. Replace if necessary.

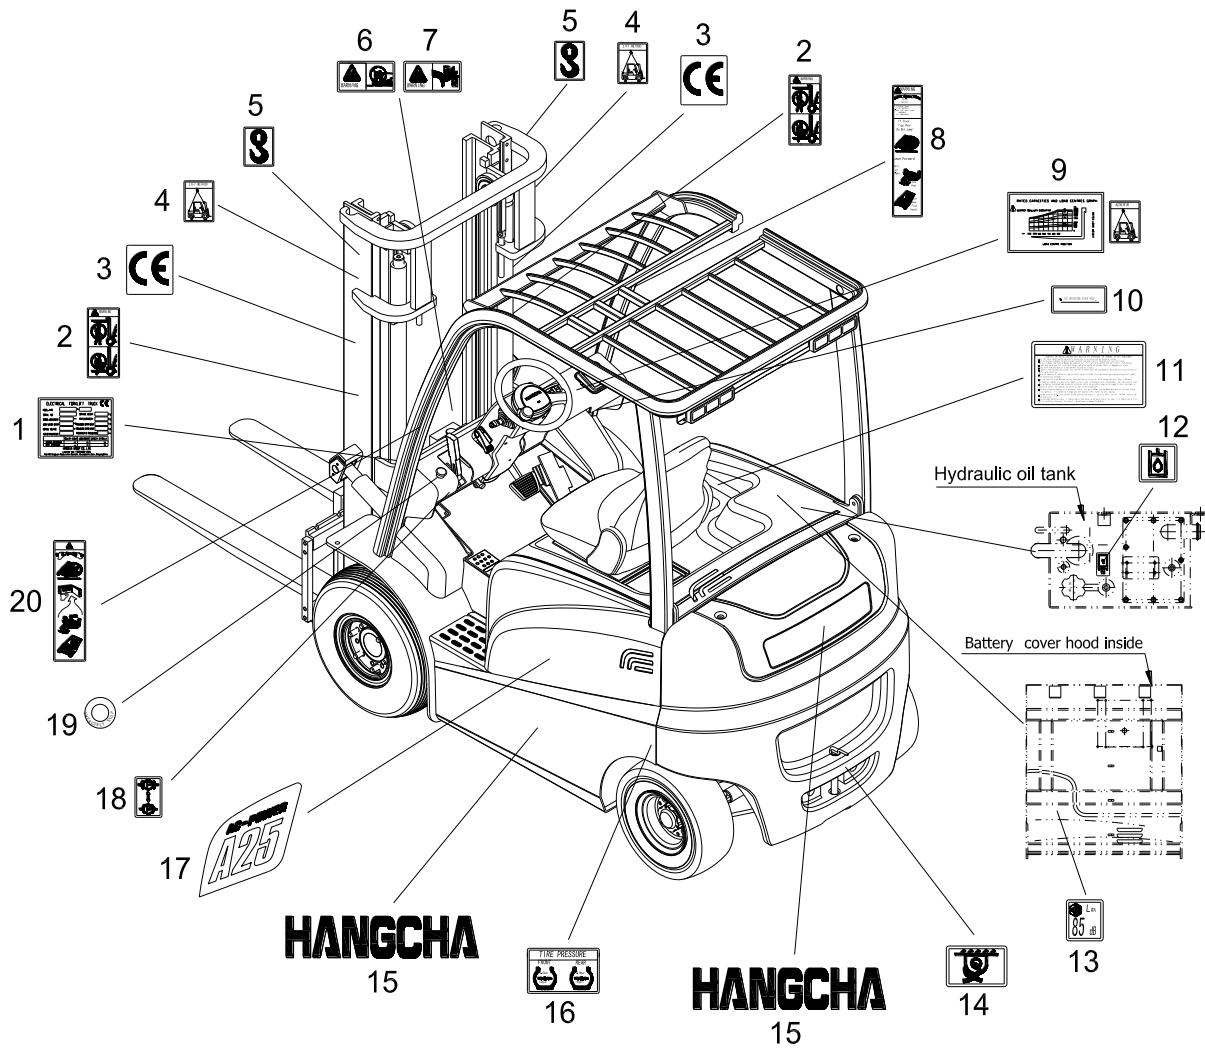

No.	Description
1	Nameplate
2	Warning label: Do not step onto or beneath the load
3	CE label: For CE
4	Lift method
5	Strap points for crane lifting: For CE
6	Warning label: No climbing

No.	Description
7	Warning label: Risk of trapping with moving mast
8	Warning label(stick in the R.H. leg): Procedure when truck in danger of tipover notice
9	Rated capacities and load centers graph
10	Use specified fuses only : For CE
11	Warning label: Please abide by the operation instructions
12	Hydraulic label: Adding hydraulic oil For CE
13	Noise label
14	Tight point label: For CE
15	HANGCHA black decal
16	Tire pressure: For CE
17	Series and tonnage label
18	Hand brake label: For CE
19	Emergency stop
20	Warning label(stick in the L.H. leg): Procedure when truck in danger of tipover notice

4. Technical Specifications

CPD10/15/18/20/25/30-A

No.	Item		CPD10-A	CPD15-A	CPD18-A	CPD20-A	CPD25-A	CPD30-A	
1	Rated capacity	kg	1000	1500	1800	2000	2500	3000	
2	Load center	mm	500	500	500	500	500	500	
3	Lifting height	mm	3000	3000	3000	3000	3000	3000	
4	Free lifting height	mm	135	135	135	140	140	145	
5	Tilting angle(F/B)	(°)	5 / 10	5 / 10	5 / 10	5 / 10	5 / 10	5 / 10	
6	Travel speed (Laden/Unladen)	km/h	12	12	12	14/14	14/14	14/14	
7	Lifting speed (Laden/Unladen)	mm/s	290	290	290	280/440	230/430	250/400	
8	Gradeability (Laden/Unladen)	%	13	13	13	13/14	13/14	13/14	
9	Turning radius(Min.)	mm	1900	1900	1900	2090	2090	2230	
10	Ground clearance(Min.)	mm	100	100	100	120	120	125	
11	Braking distance(Max.)	m	2.5	2.5	2.5	2.5	2.5	2.5	
12	Overall Dimension	Length(to fork face)	mm	2098	2098	2098	2342	2342	2502
		Width	mm	1120	1120	1120	1265	1265	1265
		Height to safeguard	mm	2050	2050	2050	2075	2075	2110
13	Service weight	Include battery box	kg	2940	2940	2940	3700	4180	5050
14	Battery	Standard	V/Ah	48 / 420	48 / 420	48 / 420	48 / 630	48 / 630	80 / 500
15	Motor	Driven motor	kW	5.4 DC	5.4 DC	5.4 DC	7.0 DC	7.0 DC	10.2 DC
		Pump motor	kW	8.2 DC	8.2 DC	8.2 DC	8.6 DC	8.6 DC	10.0 DC
16	Controller	Driven controller		DC	DC	DC	DC	DC	DC
		Pump controller		DC	DC	DC	DC	DC	DC
		Manufacturer		CURTIS	CURTIS	CURTIS	CURTIS	CURTIS	CURTIS
17	Tyre	Frontx2		6.00-9/2	6.00-9/2	6.00-9/2	23x9-10	23x9-10	23x9-10
		Rearx2		5.00-8/2	5.00-8/2	5.00-8/2	18x7-8	18x7-8	18x7-8

CPD10/15/18/20/25/30/35-AC3
CPD10/15/18/20/25/30/35-AC3F

No.	Item		CPD10-AC3 CPD10-AC3F	CPD15-AC3 CPD15-AC3F	CPD18-AC3 CPD18-AC3F	CPD20-AC3 CPD20-AC3F	CPD25-AC3 CPD25-AC3F	CPD30-AC3 CPD30-AC3F	CPD35-AC3 CPD35-AC3F	
1	Rated capacity	kg	1000	1500	1800	2000	2500	3000	3500	
2	Load center	mm	500	500	500	500	500	500	500	
3	Lifting height	mm	3000	3000	3000	3000	3000	3000	3000	
4	Free lifting height	mm	135	135	135	140	140	145	145	
5	Tilting angle(F/B)	(°)	5 / 10	5 / 10	5 / 10	5 / 10	5 / 10	5 / 10	5 / 10	
6	Travel speed (Laden/Unladen)	km/h	12	12	12	14/14	14/14	14/14	12/13	
7	Lifting speed (Laden/Unladen)	mm/s	290	290	270	280/440	230/430	250/400	210/400	
8	Gradeability (Laden/Unladen)	%	13	13	13	13/14	13/14	13/14	13/14	
9	Turning radius(Min.)	mm	1900	1900	1900	2090	2090	2230	2310	
10	Ground clearance(Min.)	mm	100	100	100	120	120	125	125	
11	Braking distance(Max.)	m	2.5	2.5	2.5	2.5	2.5	2.5	2.5	
12	Overall Dimension	Length(to fork face)	mm	2098	2098	2098	2342	2342	2502	2582
		Width	mm	1120	1120	1120	1265	1265	1265	1302
		Height to safeguard	mm	2050	2050	2050	2075	2075	2110	2110
13	Service weight	Include battery box	kg	2940	2940	3090	3700	4180	5050	5450
14	Battery	Standard	V/Ah	48 / 420	48 / 420	48 / 420	48 / 630	48 / 630	80 / 500	80 / 500
15	Motor	Driven motor	kW	8.0 AC	8.0 AC	8.0 AC	11 AC	11 AC	15 AC	15 AC
		Pump motor	kW	8.2 DC	8.2 DC	8.2 DC	8.6 DC	8.6 DC	10 DC	10 DC
16	Tyre	Frontx2		6.00-9	6.00-9	21x8-9	23x9-10	23x9-10	23x9-10	23x10-12
		Rearx2		5.00-8	5.00-8	5.00-8	18x7-8	18x7-8	18x7-8	200/50-10

CPD10/15/18/20/25/30/35-AC4
CPD10/15/18/20/25/30/35-AC4F

No.	Item		CPD10-AC4 CPD10-AC4F	CPD15-AC4 CPD15-AC4F	CPD18-AC4 CPD18-AC4F	CPD20-AC4 CPD20-AC4F	CPD25-AC4 CPD25-AC4F	CPD30-AC4 CPD30-AC4F	CPD35-AC4 CPD35-AC4F	
1	Rated capacity	kg	1000	1500	1800	2000	2500	3000	3500	
2	Load center	mm	500	500	500	500	500	500	500	
3	Lifting height	mm	3000	3000	3000	3000	3000	3000	3000	
4	Free lifting height	mm	135	135	135	140	140	145	145	
5	Tilting angle(F/B)	(°)	5 / 10	5 / 10	5 / 10	5 / 10	5 / 10	5 / 10	5 / 10	
6	Travel speed (Laden/Unladen)	km/h	12	12	12	14/14	14/14	14/14	12/13	
7	Lifting speed (Laden/Unladen)	mm/s	290	290	270	280/440	230/430	250/400	210/400	
8	Gradeability (Laden/Unladen)	%	13	13	13	13/14	13/14	13/14	13/14	
9	Turning radius(Min.)	mm	1900	1900	1900	2090	2090	2230	2310	
10	Ground clearance(Min.)	mm	100	100	100	120	120	125	125	
11	Braking distance(Max.)	m	2.5	2.5	2.5	2.5	2.5	2.5	2.5	
12	Overall Dimension	Length(to fork face)	mm	2098	2098	2098	2342	2342	2502	2582
		Width	mm	1120	1120	1120	1265	1265	1265	1302
		Height to safeguard	mm	2050	2050	2050	2075	2075	2110	2110
13	Service weight	Include battery box	kg	2940	2940	3090	3700	4180	5050	5450
14	Battery	Standard	V/Ah	48 / 420	48 / 420	48 / 420	48 / 630	48 / 630	80 / 500	80 / 500
15	Motor	Driven motor	kW	8.0 AC	8.0 AC	8.0 AC	11 AC	11 AC	15 AC	15 AC
		Pump motor	kW	8.2 AC	8.2 AC	8.2 AC	8.6 AC	8.6 AC	10 AC	10 AC
16	Tyre	Frontx2		6.00-9	6.00-9	21x8-9	23x9-10	23x9-10	23x9-10	23x10-12
		Rearx2		5.00-8	5.00-8	5.00-8	18x7-8	18x7-8	18x7-8	200/50-10

CPD10/15/18/20/25/30/35-AD2


No.	Item		CPD10-AD2	CPD15-AD2	CPD18-AD2	CPD20-AD2	CPD25-AD2	CPD30-AD2	CPD35-AD2	
1	Rated capacity	kg	1000	1500	1800	2000	2500	3000	3500	
2	Load center	mm	500	500	500	500	500	500	500	
3	Lifting height	mm	3000	3000	3000	3000	3000	3000	3000	
4	Free lifting height	mm				140	140	145	145	
5	Tilting angle(F/B)	(°)				5 / 10	5 / 10	5 / 10	5 / 10	
6	Travel speed (Laden/Unladed)	km/h				14/14	14/14	14/14	12/13	
7	Lifting speed (Laden/Unladed)	mm/s				280/440	230/430	250/400	210/400	
8	Gradeability (Laden/Unladed)	%				13/14	13/14	13/14	13/14	
9	Turning radius(Min.)	mm				2090	2090	2230	2310	
10	Ground clearance(Min.)	mm				120	120	125	125	
11	Braking distance(Max.)	m				2.5	2.5	2.5	2.5	
12	Overall Dimension	Length(to fork face)	mm				2342	2342	2502	2582
		Width	mm				1265	1265	1265	1302
		Height to safeguard	mm				2075	2075	2110	2110
13	Service weight	Include battery box	kg				3700	4180	5050	5450
14	Battery	Standard	V/Ah				48 / 630	48 / 630	80 / 500	80 / 500
15	Motor	Driven motor	kW				11 AC	11 AC	15 AC	15 AC
		Pump motor	kW				8.6 AC	8.6 AC	10 AC	10 AC
16	Controller	Driven controller					AC	AC	AC	AC
		Pump controller					AC	AC	AC	AC
		Manufacturer					CURTIS	CURTIS	CURTIS	CURTIS
17	Tyre	Frontx2					23x9-10	23x9-10	23x9-10	23x10-12
		Rearx2					18x7-8	18x7-8	18x7-8	200/50-10

CPD25-ALC3、CPD25-ALC4、CPD25-ALD2、CPD25-ALC3F、CPD25-ALC4F

No.	Item		CPD25-ALC3 CPD25-ALC3F CPD25-ALC4 CPD25-ALC4F CPD25-ALD2	
1	Rated capacity	kg		3000
2	Load center	mm		500
3	Lifting height	mm		3000
4	Free lifting height	mm		140
5	Tilting angle(F/B)	(°)		5 / 10
6	Travel speed (Laden/Unladen)	km/h		14.5/14.5
7	Lifting speed (Laden/Unladen)	mm/s		250/400
8	Gradeability (Laden/Unladen)	%		15/16
9	Turning radius(Min.)	mm		2230
10	Ground clearance(Min.)	mm		125
11	Braking distance(Max.)	m		2.5
12	Overall Dimension	Length(to fork face)	mm	2490
		Width	mm	1265
		Height to safeguard	mm	2110
13	Service weight	Include battery box	kg	4580
14	Battery	Standard	V/Ah	80/500
15	Motor	Driven motor	kW	15.0 AC
		Pump motor	kW	10 .0AC
16	Tyre	Frontx2		23x9-10 /2
		Rearx2		18x7-8 /2

5. Safety Instructions

1. Only trained and authorized operator shall be permitted to operate the truck.

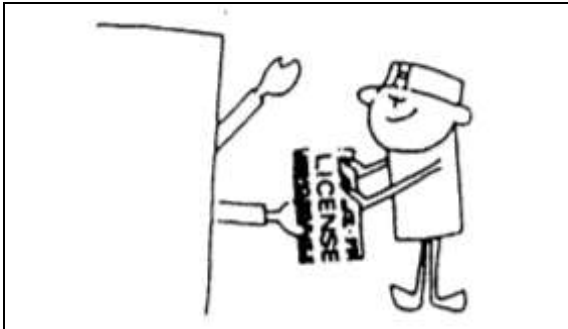


2. Inspect the truck at periodic intervals for oil or water leak, deformation, lousiness, etc. If neglected, short life of components will be caused and in the worst case a fatal accident would occur.

- Make sure having replaced good parts during periodic check.
- Wipe off oil, grease or water from the floor board and foot and hand controls, if any.
- Strictly prohibit smoking and spark nearby the storage battery when checking it.
- If maintenance on high position, such as mast, front and rear lamp, please be careful to prevent fall down or be clamped.
- Be careful do not be scalded when inspect the motor, controller and etc.

3. whatsoever in trouble, you must stop the forklift, hang a mark of "danger" or "trouble" and take off the key, at the same time inform the manager. Only after the trouble is removed, you may use the forklift.

- If trouble occurs when lifting cargo, to Climb or descend, or the storage battery electrolyte, the hydraulic fluid, the brake fluid has the revelation, please organizes the personnel to repair immediately.

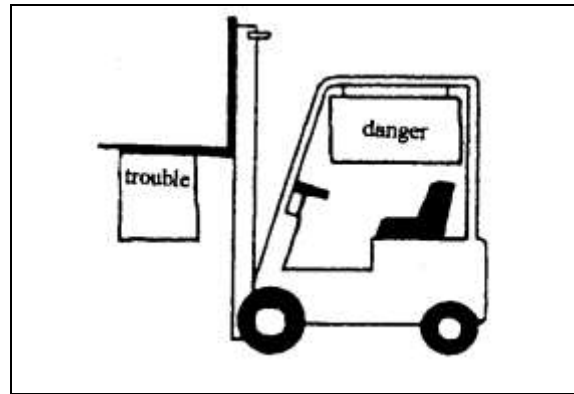

4. Operator must wear helmet, safety shoes and work clothes.


5. Because there will bring exploding gas in the bosom of the battery, prohibit any flame nearby it absolutely.

- Do not let any tools close the two terminal of the battery to avoid spark or short circuit.

6. The movement road of forklift should be solid and smooth coagulation road or similar to the road suitable for vehicle. Recheck the state of working ground.

- The considered climatic conditions when the forklift designs are: Temperature - 20°C-50°C; the wind speed does not surpass 5m/s; the air relative humidity is not bigger than 90% (temperature 20°C).
- The forklift is not suitable in the flammable explosive working conditions.
- Altitude: No more than 2000 meters.

7. Never mount or dismount the moving truck. Use the safety step(s) and safety grip facing the truck when mounting or dismounting the truck.

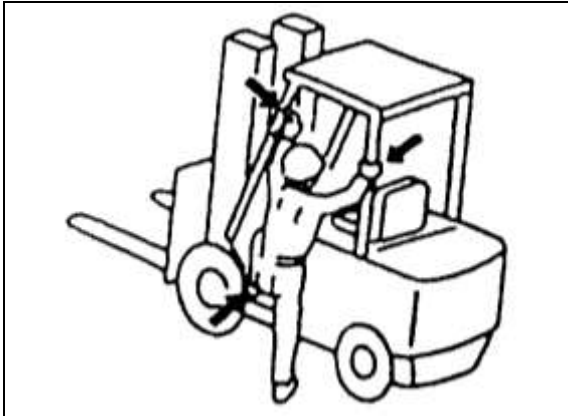

8. Never attempt to work the controls unless properly seated.

- Before starting, adjust the seat so you can get easy access to all hand and foot control.

9. Before starting up, make sure that:

- Please fasten seat bolts.
- The parking brake lever is applied securely.
- The forward-reverse lever is in neutral.
- Before starting, make sure no one is under, on and close to the truck.
- Don't step the accelerate pedal or control the lifting lever or tilting lever before turning on power.

10. Operate the controls smoothly. Avoid sudden stops or turns.

- It is dangerous to make a sharp brake. Otherwise the truck has the possibility of overturn.

11. Pay attention to the route of the truck; be sure to make a wide sight.

12. Never allow other person(s) to ride on the forks, pallets or on the truck.

13. Taking account of the shape and material of loads to be handled, use a proper attachment and tools.

- Avoid hoisting the load, with wire rope hung on the forks or attachment, since the wire rope may slide off. If needed, a

qualified personnel for slinging operation should perform, making use of a hook or crane arm attachment.

- Take care not to protrude the forks out of the load. The protruded fork tips may damage or turn over the adjacent load.

14. Know the rated capacity of your lift truck and its attachment, if any, and never exceed it.

- Do not use a man as an additional counterweight. It's quite dangerous.



15. Keep your mind on your work.

16. Keep your head, hands, arms, feet and legs within the confines of the operator's compartment. Never stretch out for any reason.



17. The pallet and skid used should be strong enough to endure the load. Never use damaged or deformed ones.

18. We afford all type of attachment, such as rotating roll clamp, bale clamp, side shifter, and crane jib etc. You should refit the truck under ours license if you want. It is forbidden to refit it by yourself.

19. Safeguard protect you do not be hurt by the goods fallen. Load bracket protect you load goods smoothly. It is forbidden to use truck without safeguard or load bracket.


20. It is forbidden to walk down the fork or the attachment.

- It is forbidden to walk up the fork or stand on the fork.



21. It is forbidden to put your hands, arms or head stretch between the mast and safeguard. Once clamped, the life has danger.

- It is forbidden to put your hands in inner and outer mast.

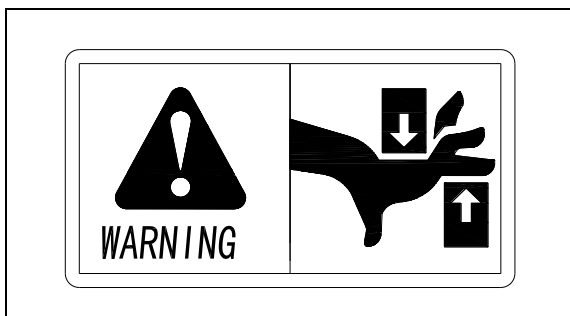

22. The goods is liable to drop turning or passing rough road when it departs the center. And the forklift may turn over more probably.

23. Don't stack loads on forks in such a way that the top of loads exceeds the load backrest height. If unavoidable, make sure the load is fastened. When handling bulky loads that

restrict your vision operate the truck in reverse or have a guide. When lead by a guide, make sure you understand hand, flag, whistle or other signals. When handling long loads such as pipe, lumber etc or in the case of the Large-sized model, or operate with long attachment, be extremely careful of load end swing at corners or in narrow aisles. Be alert for others.

24. Use minimum forward and reverse tilt when stacking and un-stacking loads. Never tilt forward unless load is over stack or at low lift height.

- When stacking loads on a high place, once make the mast vertical at a height of 15 to 20 cm above the ground and then lift the load farther. Never attempt to tilt the mast beyond vertical when the load is raised high.
- To un-stack loads from a high place, insert forks into the pallet and drive backwards, then lower the load. Tilt the mast backwards after lowering. Never attempt to tilt the mast with the load raised high.

25. It is dangerous to travel with forks higher than appropriate position regardless of whether loaded or not. Keep the good traveling posture. (When traveling, the forks should be 15 to 30 cm above the ground or floor and the mast tilted backward)


- Do not operate the side shift mechanism, if equipped, when the forks are raised and loaded, since this will cause the truck to be unbalanced.

26. Watch for branches, cables, doorways, or overhangs. Pay caution when working in congested areas.

- Slow down and sound horn at cross aisles

and other locations where vision is restricted.

- When make a turn, be sure the speed of the truck is lower than the 1/3 max. of allowable speed.

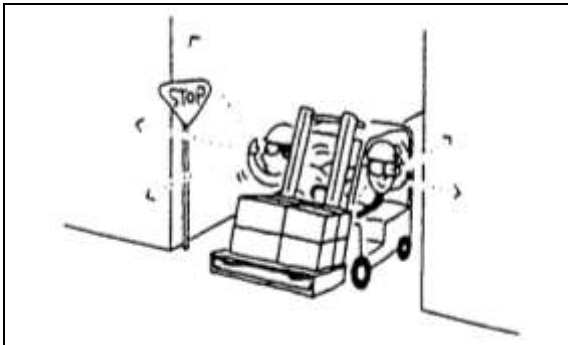


27. Affirm keeping some distance from roadside and flat roof.

28. Before driving over a dock-board or bridge-plate, be sure that it is properly secured and strong enough to sustain the weigh.


29. When operating loaded truck, have the rear end of your machine pointed downhill.

- When operating unloaded truck, have the rear end of your machine pointed upgrade.
- Do not make a turn on the grade, in order to avoid overturn.

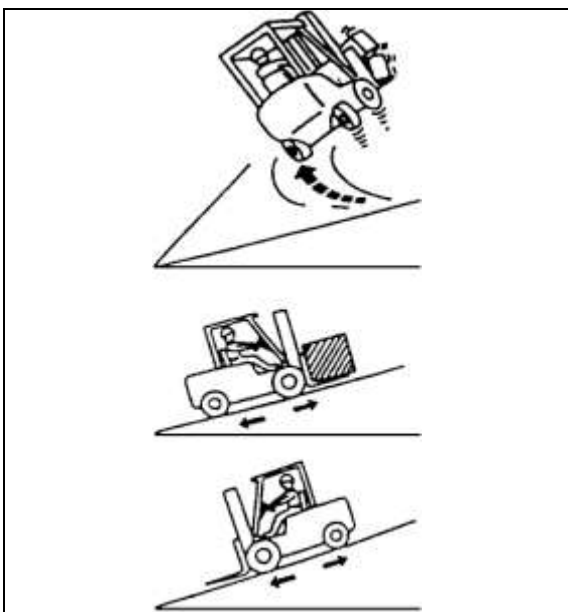

30. the goods is liable to drop turning or passing rough road when it departs the

center. And the forklift may turn over more probably.

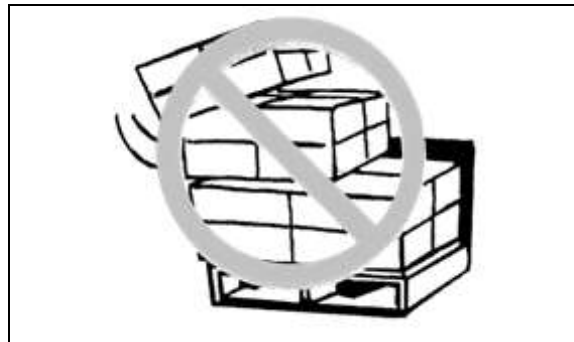

31. Never lift loads with the truck inclined. Avoid loading work on a grade.

32. Never permit anyone to stand or walk under upraised forks or other attachments if machine is so equipped. If unavoidable, use a safety stand or block to prevent a possibility of fork attachments falling down or moving unexpectedly.

33. Inspect the surface over which you will run. Look for holes, drop-offs, obstacles, and look for rough spots. Look for anything that might cause you to lose control, bog down or upset.

- Clear away trash and debris. Pick up anything that might puncture a tire or let the load lose balance.
- Slow down for wet and slippery roads. Stay away from the edge of the road. If unavoidable, pay more attention.
- Do not operate the truck when the weather is execrable, such as windy, thunder storm, snow and etc. Especially when wind speed is higher than 5m/s, don't operate the truck outside.

34. An accumulator is required for controller. Forbid to touch within B+ and B- to prevent from wounding by electricity. Before checking or cleaning, please connect loads (contactor circuit or horn for example) between B+ and B-

first to discharge for capacitor of controller.

35. Pulling the hand brake when parking on flat. If necessarily parking on ramp, you should place the wedges under wheels.

- Descending the fork to the ground and keeping a little forward tilting, shut off key switch and take off key.
- Pull out the battery plug.
- The parking place must be far away from fireworks.

36. You can tow the forklift to the safe place with towing pin when the forklift can't run.

- Don't tow the truck which steering system or brake system has been damaged.

37. There is operating method and warning label on the truck. Please operate the truck obey the rules on the label and this manual. Often inspect the nameplate, when damaged or lost please replace it.

38. Fire extinguisher must be prepared at working place. Users can select fire extinguisher along with truck, and it usually is fixed on rear supported leg of safety shelf, it is easy to pick.

- Driver and manager should be familiar with the position and operation of fire extinguisher.

39. Please use stock when conveying little goods, it is forbidden to use fork directly.

40. The work road surface for forklift should be stability and unknit, cement, blacktop or beton. If there are snow, ice, water or other eyewinker, bar. Eliminate all, then work. Otherwise the truck will be out of control and lead the safety accident.

41. Move the truck to the place which respects traffic when it anchors. If the reason is brake or turn system, move it by a suitable

truck (Reference the part of truck move); Other reasons, use a suitable truck to traipse, tie the cord outside of truck. Please abide by the traffic regulations when traipse the truck on calzada.

42. After take-down the hood, water tank cover board, overhead, backrest of mast, unallowed to operate the truck or load cargo.

43. There are enough light at truck work ground. At night, open the head lamp to collocate enough lamp-house.

44. Only in the event that the truck manufacturer is no longer in business and there is no successor in the interest to the business, the user may arrange for a modification or alteration to a powered industrial truck provided, however, that the user shall:

- Arrange for the modification or alteration to be designed, tested and implemented by an engineer(s) expert in industrial trucks and their safety;
- Maintain a permanent record of the design, test(s) and implementation of the modification or alteration;
- Approve and make appropriate changes to the capacity plate(s), decals, tags and instruction handbook;
- Affix a permanent and readily visible label to the truck stating the manner in which the truck has been modified or altered together with the date of the modification or alteration, and the name and address of the organisation that accomplished the tasks.

45. When the view is obstructed, use the rear-view mirror, adjust it to the right angle to facilitate observation of rear vision.

46. Except where provided in 44, no modifications or alterations to a powered industrial truck, which could affect, for example, capacity, stability or safety requirements of the truck, shall be made without the prior written approval of the original truck manufacturer, its authorized representative, or a successor thereof. This includes changes affecting, for example, braking, steering, visibility and the addition of removable attachments. When the manufacturer or his successor approves a modification or alteration, the manufacturer or successor shall also make and approve appropriate changes to the capacity plate, decals, tags and operation and maintenance handbooks.

47. If fork arms/locking pins joint imperfectly, unexpected drop may occur.

48. Only in the event that the truck manufacturer is no longer in business and there is no successor in the interest to the business, may the user arrange for a modification or alteration to a powered industrial truck, provided, however, that the user.

- a) Arranges for the modification or alteration to be designed, tested and implemented by an engineer(s) expert in industrial trucks and their safety,
- b) Maintains a permanent record of the design, test(s) and implementation of the modification or alteration,
- c) Approves and makes appropriate changes to the capacity plate(s), decals, tags and instruction handbook, and
- d) Affixes a permanent and readily visible label to the truck stating the manner in which the truck has been modified or


altered, together with the date of the modification or alteration and the name and address of the organization that accomplished those tasks.

6. Forklift Transport, Lifting & Towing

Transport

- The Fork Lift Truck is designed for material handling only, It is inappropriate for long-distance transportation. If needed, the Fork Lift Truck must be transported by ship, train or lorry, of 5T loading. Use a lifting pallet to hoist the truck.
- Use the steel wire ropes to tie the holes in the two side of the outside mast's beam and the rear of truck's body, and then use the lifting device to hoist the truck.

Lifting

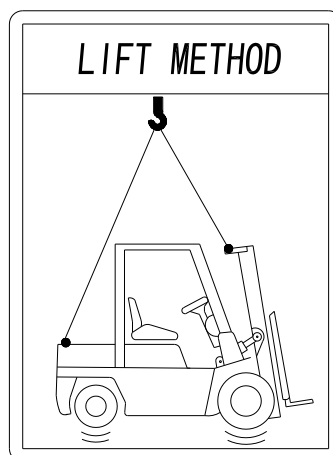


Use the steel wire ropes to tie the holes in the two side of the outside mast's beam and the hook of the counter balance, and then use the lifting device to hoist the truck. The steel wire rope attach to the counterweight should through the safeguard gap, and make the safeguard not be distorted.



WARNING

- **When hoist the truck, don't coil the overhead guard with the steel wire.**
- **The steel wire ropes and the lifting device must be very firm to support the truck because the truck is very heavy.**
- **Don't lift the truck by hoist the overhead guard.**
- **When lifting the truck, don't take yourself below the truck.**

Towing

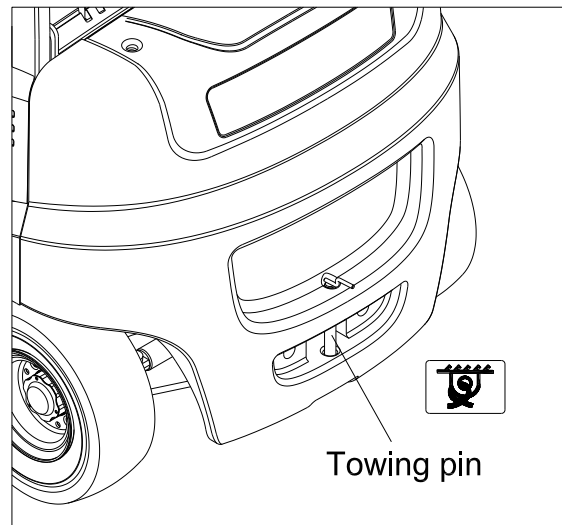

- The towing rod on the bottom of the counter balance is used to pull and drag the truck.
- Turn off key and pull out power switch.
- Loosen the brake lever.
- Set switch lever to neutral position.




WARNING

- **Don't tie the steel wire ropes on the unfixed position.**
- **Don't carry a load to steel wire ropes suddenly.**
- **The truck would be damaged if you tow it with the electric lock working.**

7. The Structure and Stability of Truck


Prevent the forklift to turn over! It is very important for operator to know the truck's structure and relationship between load and stability.


 CAUTION	Structure
--	------------------

The basic structure of the truck is mast (include mast and forks) and body (include tire).


The lift truck keeps the balance of weight between the truck body and the load on the forks with the center of the front wheels as a fulcrum when the rated capacity load is placed in position.


Due care should be paid to the gravity center of loads and forklift to maintain the stability of the truck.

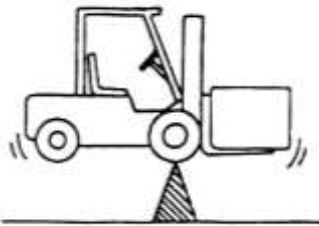






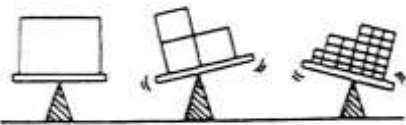


 CAUTION	Load center
--	--------------------

There is difference in gravity because of the loads' shape, such as box, board and large roller. It is very important to distinguish the difference of the gravity center of loads for evaluating the truck's stability.

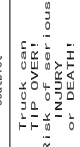


 WARNING	<p>If the truck will turn over, do not attempt to get out of the truck because the speed of overturn is much faster than your speed. You should hold the steering wheel handle, stretch your feet, and this practice will let you in the seats. Operator fastens the safety belt please.</p>
--	--

 WARNING	 Fasten Seatbelt	 Truck can TIP OVER! Risk of serious INJURY or DEATH!	 If Truck Tips Over Do Not Jump!	 Lean Forward Hold on Tight	 Brace Feet	 Lean Away From Impact
--	---	---	--	---	--	---

 CAUTION	The max. load and load center
--	--------------------------------------

The load center distance is defined that: the distance between the load center and the fork carriage or the front of the fork carriage. The max. load means the maximum load the truck can charge at the normal load center distance. The relation between the max. load and load center distance shows on the capacity chart. You should reduce the weight of load if the load center distance inclines to the fork carriage.

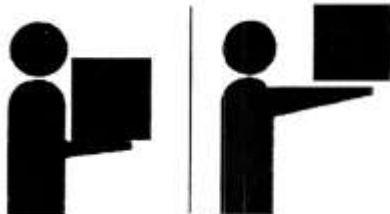

CAUTION Gravity center and stability


The combined gravity center that is composed of the forklift center and the load gravity center determine the stability of lift trucks.

When unloaded, the barycenter does not change; when loaded, the barycenter is determined by the truck and the load's center.

The barycenter is also determined by the tilting and lifting of the mast.

The combined center is determined by these factors:


- Load's size, weight and shape
- The lifting height
- The tilting angle
- The acceleration
- The radius of turning
- The road and grade's angle
- The attachments

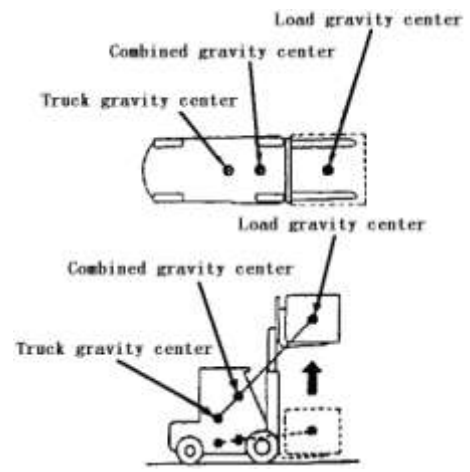

CAUTION The stable region of the load center

In order to make the truck stable, the combined center must be in the triangle which is made up of two points that the two front wheels attach ground and the midpoint of the back axle.


If the combined center is in the front driving axle, the two front wheels become two fulcrums, the truck will overturn. If the combined center departs the triangle, the trucks shall overturn in the corresponding direction.

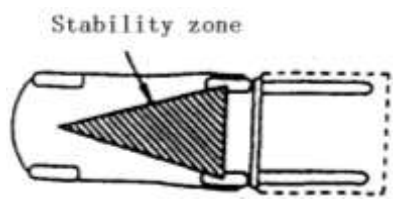

CAUTION Capacity chart

The chart given shows the relation between the load center and the weight of loads.

Before loading, make sure that the load and the load center distance in the range of capacity chart. If the load's shape is complex, put the most weightily part on the middle of the forks, and close to the fork carriage.

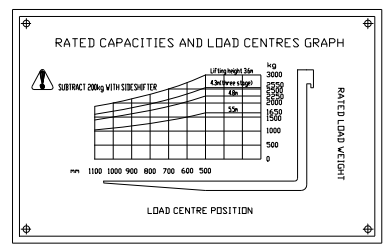

**CAUTION****Velocity and acceleration**

One object will keep quiescence until force works on it. Also, a moving object will keep moving until force works on it. This is just inertia.

According to inertia, when truck starts moving, one force works backwards, and when truck stops moving, one force works forwards. So, it's dangerous to brake suddenly, because it causes one large force works forwards, and it's easy to cause truck overturn or load slide off.

When the forklift makes a turn, will exert a centrifugal force outward from the curve center. This strength pushes forklift outwards and causes it to turn over. About stability region is very small, so decelerate when turning. If the cargo transported at the high position, it's easier to turn over.

8. Running-in of the new truck

We recommended operating the machine under light load conditions for the first stage of operation to get the most from it. Especially the requirements given below should be observed while the machine is in a stage of 100 hours of operation.

- Must prevent the new battery from over discharging when early used. Usually should recharge when discharging down to 20%.
- Perform specified preventive maintenance services carefully and completely.
- Avoid sudden stop, starts or turns.
- Oil changes and lubrication are recommended to do earlier than specified.
- Limited load is 70%~80% of the rated load.

9. Daily Maintenance

The earnest complete maintenance, can keep the forklift to be at the good status. And the safety of the truck is related with your job and your life.



WARNING

- Except checking lights and operating capability, you should shut off the key switch and pull out the plug before checking electric system.
- Prohibit operate forklift with trouble.
- Little trouble brings big accident.

1. Inspect oil leakage: include hydraulic oil, electrolyte and brake fluid

Inspect connector of the oil pipe and storage battery to see whether there is any leakage. Use your hand or eyes to inspect, Forbid to use a flame.

2. Inspect tire

Turn the tire valve cap counter clock-wise and move it. Using a tire pressure gauge, measure the inflation pressure, and adjusting it to the specified pressure, if needed. After making sure there is no air leakage from the tire valve, reinstall the cap. Check that each tire does not get damaged at the tread surface or side face. Make sure the wheel felloe is not bended.



WARNING


- Since the tires of forklift truck need have a high inflation pressure to carry heavy loads, even a small bending of rims or a little damage at the tread surface could cause an accident.
- When using an air compressor, at

first, adjust the air pressure of the compressor. Otherwise it will cause a serious accident, since the maximum pressure of compressor higher than the pressure tire can bear.

Tire Pressure

Only for the pneumatic-tire(GB/T2982-2001)

Model	Front wheel	Rear wheel
1.0t~1.8t	0.79 MPa	1.0 MPa
2.0t~3.5t	0.9 MPa	0.8 MPa

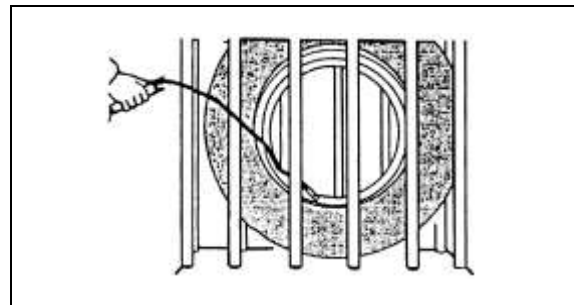

WARNING

- All bolts and nuts should be screw tight to the stipulation torque after the tire and the wheel felloe was assembled, then charge is allowed. Types have expansion energy after changing, so the tire pressure does not surpass the rating.
- Please put the tire in a protection frame or tie it with a iron chain when charging to prevent accident happening.

Replace tire

When the tire is damaged, you should replace it in time. Use a jack to make the tire just beyond ground, then put a wood block under the chassis. Loosen nut , replace a new tire.

Tighten the nut crossly and symmetrically.

3. Checking the wheel attachments.

- Parking the truck securely.
- Tighten the wheel nuts crosswise with a torque wrench.

Bolt tightening torque:

Model	Front wheel nut	Rear wheel nut
1.0t~1.8t	157-176 N.m	76-107 N.m
2.0t~3.5t	441-588 N.m	157-176 N.m



4. Check brake pedal

- Step the brake pedal, check it for slowness or block .
- The proper brake distance is 2.5m when free load .
- Adjust the height of pedal to 115~125mm .
- Adjust brake booster push rod clearance to 1-3mm .
- The brake lamp should be lighted when the brake pedal steps on 10-20mm .

5. Check the parking brake lever

The force of hand brake lever is adjusted by the bolt on the top of lever.

The force increases clock-wise screwing, and decreases counter lock-wise screw.



CAUTION

- To step the brake pedal is helpful to tighten or loose the hand brake lever.

6. Check accelerate pedal

The acceleration changes as the stroke changes.

7. Brake fluid level check

Open the brake lubricated cap cover. Check the fluid level in the range allowed. If lack, please add, and check if there is air mix into the pipe.




CAUTION

- Please use brake fluid with one type, do not mix.
- Don't spatter the brake oil onto the surface of paint otherwise the paint will be damaged.
- When adding fluid, due should be taken to prevent dirt or water from entering the reservoir.

8. Check hydraulic oil

Loose the cap of hydraulic oil inside of right frame, pull out dipstick and check it if the oil level is between the scales. Add oil when lack.

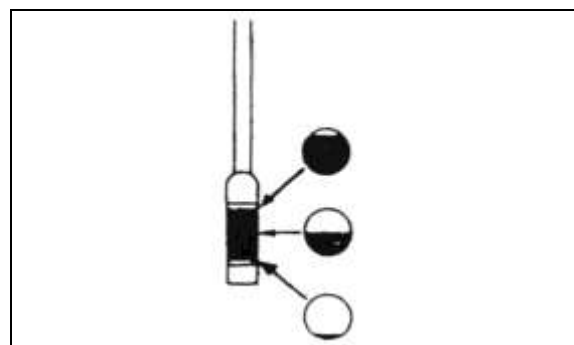

9. Replace hydraulic oil

Replace hydraulic oil once half year on schedule.


- Stop the truck on smooth ground.
- Turn steering wheel right to the bottom, and enable the fuel drain plug to have the enough space.
- Tilt mast backwards to the bottom, and fall the forks to the ground.
- Pull on the hand brake.
- Loose the cap of hydraulic oil, pull out dipstick.
- Set a plate under the chassis, then loose the fuel drain plug, and put the old oil.
- Dispose the old oil according to local environmental protection laws.
- Twist the fuel drain plug, join the new hydraulic fluid, and inspect whether have a leakage.
- Start the truck, lifting for 3-5 times, and tilting for 3-5 times.
- Add hydraulic oil to required scale.

10. Drivers seat adjustment

Make sure the driver's seat is properly located. If not properly, shift the adjusting lever to the right and move the driver's seat to a position which provides easy access to all foot and hand controls. After adjustment, shake the driver's seat a little to be sure that it is securely locked. Adjust the weight.

11. Check battery

- Check the battery whether be installed firmly.
- Check proportion of electrolyte. Refer to "Battery" section.
- Check the terminal for loose or damage. Otherwise it will be adjust or replace.

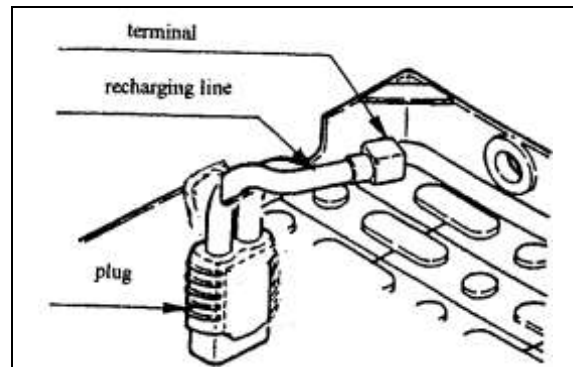

Pull in the plug and close the hood

Turn on the key switch

12. Instrument check (include battery capacity and error diagnose)

Refer to instrument section.

13. Lifting lever, tilting lever, attachment lever

Check the lifting lever, tilting lever and attachment lever for looseness. Return position well.

14. Mast

Check the mast and the forks to insure that:

- The fork does not have crack and distortion. Forks were installed firmly and correctly.
- Check the oil cylinder, oil pipes for leakage.
- Check the rotation of idler wheel
- Check the mast for crack or distortion
- Lifting lever, tilting lever, attachment lever
- Check the mast whether works normally, whether have unusual sounds.

15. Mast lubrication

You should grease lubrication to the orbit of mast on schedule base on requirement.

Adjust the lubricate schedule according to your working condition. Add times when busy.

To coordinate forklift's operation, grease lubrication to the guide pulley and in outer upright mounting.



16. Lift chain tension check

- Raise the fork about 10-15 cm above the

ground vertically.

- Push the middle of the chain with the thumb. Make sure the tension for the right and left chains are equal.
- Adjust the chain tension: loosen the lock nut and adjust the chain by nut, then locked nut .

For instance, pay attention to abnormal noise.

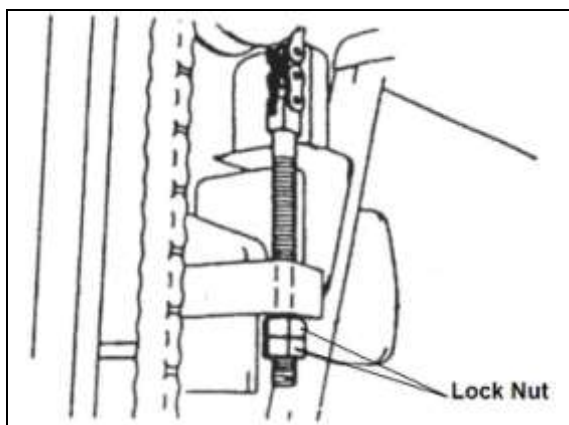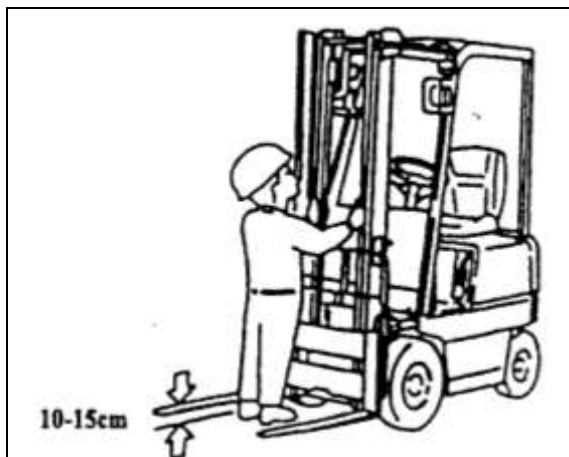

17. Check steering system

Turn the wheel right and left separately to check steering system.

18. Turn signal, horn and other lamp check

Make sure that the turn signal operates properly by pull/push turn signal switch.

Make sure that the sound of horn is properly by press the horn button

Check the other lamp and back-up buzzer.

19. Battery maintenance

Refer to battery section.

20. Other


10. Driving and Operation

WARNING

- **Before operating the truck, check all controls and warning devices for proper operation. If any damage or fault is found, don't operate truck until corrected.**

Driving

- Open the cap, and insert the storage battery plug, then close the cap.

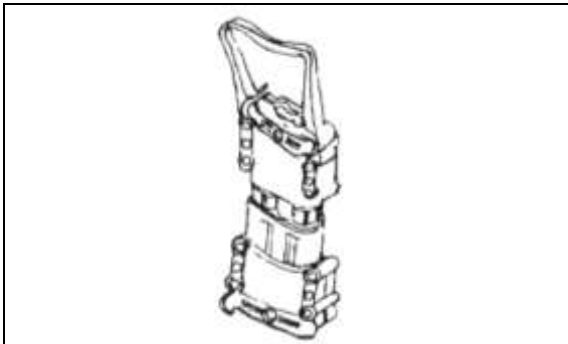

- Set the direction switch to neutral position .
- Turn on key switch .
- Hold the steering wheel with left hand and turn on the key switch with right hand.
- Tilt back the mast
- Control the lifting lever to set the bottom of the fork 150-200mm above the ground. Control the tilting lever to fully tilt back the mast.
- Control direction lever.
- Forward: Push the direction lever forward.
- Backward : Pull the direction lever backward.
- Loosen the hand brake lever
- Step the brake pedal and push the hand brake lever to the front position.
- Hold the steering wheel with your left hand and attach your right hand.

Traveling

Step the accelerate pedal slowly, the truck will travel forward or backward.

Decrease speed

Loosen the accelerate pedal slowly, the truck will decelerate.

CAUTION

Decelerate the truck in the situations following:

- **Turning;**
- **Close the goods or pallet;**
- **Close the deposit area;**
- **Enter a narrow passage;**
- **The condition of road surface is bad.**

WARNING

- **Don't step the accelerate pedal and brake pedal at the same time.**

Turning

Unlike general passenger-cars, the turning wheels are located at the rear of the truck. This cause the counterbalance swing out when turning.

Slow down the truck and turn the steering wheel toward the side which you are turning. The steering wheel should be turned a bit earlier than as with the front wheel steering car.

CAUTION

- **Drive the truck slowly and control the steering wheel carefully, assure there is enough space to steer.**

Stopping or parking


- Slow down and press the brake pedal to

stop the truck.

- Place the shift lever in neutral.
- Pull up the parking brake lever.
- Down the forks on the ground, tilt mast forwards fully.
- Place the key switch in "OFF" to shut off the battery. Remove the key and keep it.

! **CAUTION**


- **Don't** dismount from the moving truck, never jump from the truck.
- **Don't** parking the truck on the working road.

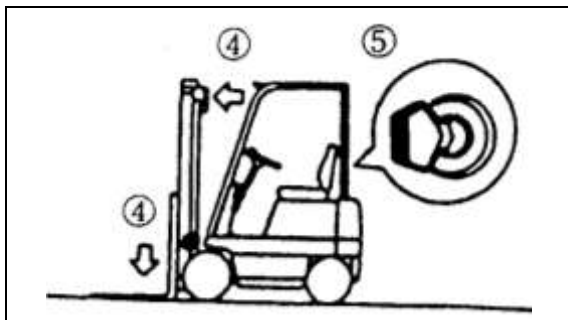

Loading

- The forks should be adjusted properly to maintain the balance of load.
- Place the truck right in front of the load to be handled.
- The pallet should be evenly positioned across both forks.
- Insert forks into the pallet as far as possible.
- To raise loads from the ground:
 - Firstly, lift the forks 5 to 10 cm off the ground or floor and make sure loads lay stably.
 - Then tilt the mast backwards fully and lift forks up to 15 to 20 cm off ground then start running.
- When handling bulky loads which restrict your vision, operate the truck in reverse

except when climbing grades.

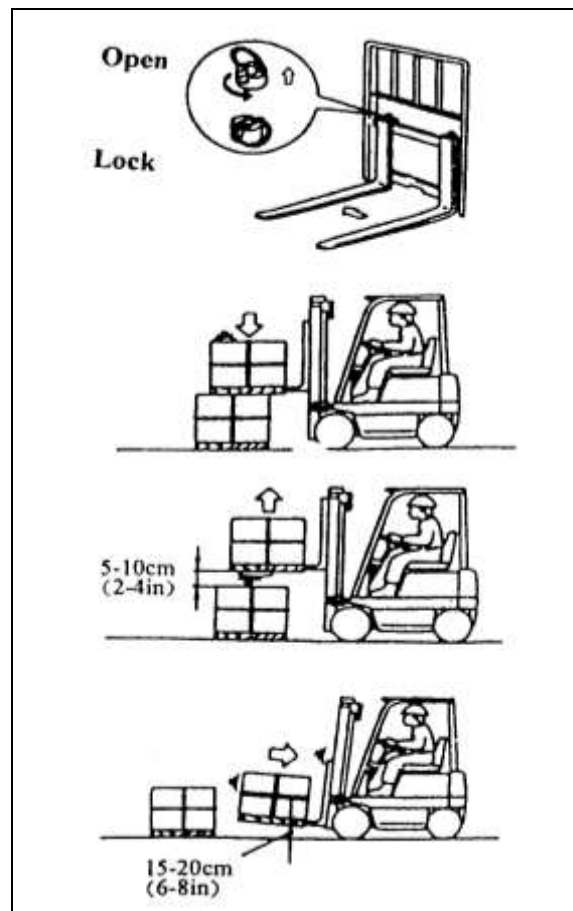

Stacking load

- When approaching the deposit area slow down your truck.
- Stop the truck right 30 cm far away from the position where your load is to be deposited.
- Check the condition of the deposit area.
- Tilt the mast forward until forks become to horizontal. Raise forks until they are a little higher than the deposit position.
- Move forward to place the load directly over the desired area and stop the truck.
- Make sure your load is just over the desired area. Slowly lower the load into position. Make sure the load is securely stacked.
- Do necessary lift-tilt operations and then back away to make the forks leave loads.

- After making sure the forks leave the load, lower the forks to the basic position (15 to 20 cm off the ground).
- Tilt the mast backwards.



CAUTION

Decelerate the truck in the situations following:

- **Turning;**
- **Close the goods or pallet;**
- **Close the deposit area;**
- **Enter a narrow passage;**
- **The condition of road surface is bad.**



WARNING

- **Never tilt the mast with loads upraised 2m or more.**
- **Don't leave or dismount from the truck when the load is raised high.**

Un-stacking load

- When approaching the area where the load is to be retrieved, slow down your truck.
- Stop the truck 30 cm far from the load.
- Check the condition of the load.
- Tilt the mast forward until forks become horizontal. Elevate forks up to the position of the pallet.
- Make sure forks are positioned properly to the pallet. Move forward slowly to insert forks into the pallet as far as possible.



CAUTION

- **If the forks are hard to be fully inserted, use the following procedure: Move forward and insert 3/4 of the forks. Raise the forks 5 to**

10 cm and move backward 10 to 20 cm with the pallet on the forks, and then fall the pallet to the stack.

- **Move forward again to insert the forks fully.**

- Raise the forks 5 to 10 cm off the stack
- Check all around the truck to insure that the path of travel is unobstructed and back away slowly.
- Lower forks to a height of 15 to 20 cm above the ground. Tilt the mast backward fully and move to the desired area.

Check after operation

Clean and check the truck after operation:

- Damage or leakage.
- Add grease if necessarily.
- Check the tire if it is damaged or inset with foreign body.
- Check the wheel hub nut if it is loose.
- Check the height of electrolyte surface.
- If you haven't lift the fork to the max. height in the day, you should lift it to the max. height 2~3 times.



CAUTION

- **If you find any trouble, must repair it in time.**
- **Prohibit operate the forklift before repairing it completely.**

11. Deposit

Daily Depositing

- Park your truck at the area appointed, and block the wheels to prevent accidental roll.
- Make sure the shift lever on neutral position.
- Pull up the hand brake lever.
- Shut off key switch and operate the lift and tilt lever several times so that the inner pressure in the hydraulic tube will decrease.
- Cramp out the electrical outlet.
- Take out the key and deposit it in a safe position.

Deposit the truck for a long time

On the basic of the “daily depositing” you should do these checks and maintenance additional:

- Take out plug to prevent discharge and place in shade.
- Brush antirust oil on those parts which is exposed such as piston rod and axle easy-rusted.
- Cover breather hole and so on which humidity easy to enter.
- Cover the whole truck with mantle
- All lubrication points add the oil (grease).
- Fill up the truck body and counter weight with stow-wood to reduce bearing of the two rear wheels.
- Operate the forklift once a week, and be required to lift the forks to its max. height many times .
- Check the proportion and the level of electrolyte once a month.
- Charge the battery equally once a month.



WARNING

- **The stow-wood must be single and hard enough to support the truck.**
- **Don't use a stow-wood higher than 300mm (11.81 inch) .**
- **Lift the truck to the height of placing on the stow-wood.**
- **Place two same size stow-woods under the left and right sides of the truck.**
- **After supporting the truck with stow-wood, swings the truck forward, backward, left and right, check its safety.**

Working after long deposit

- Get rid of antirust oil.
- Discharge the gear oil from driving axle, decelerator box, and clean up the internal of them. Add new oil.
- Charge the battery then install it to truck, and do not forget to connect the down-lead.
- Check carefully before starting, include start, advance, and back off, turning, lift, fall, tilt and so on.

12. Battery

Attention for using battery:

1. No firing

The gases produced during charging can cause explosions. This gas mixture is highly explosive and must not be ignited.

Explosive gas, smoking, flame and sparkle easily give off in the battery, each can cause battery explosion.



2. Protection against electric shock

WARNING

- Battery has high voltage and energy.
- Do not bring short circuit.
- Do not approach tools to the two poles of the battery, which can cause the sparkle.

3. Correct wire connection

Not allowing instead anode of cathode, otherwise, resulting in sparkle or burning or explosion.

4. Do not over-discharge

If you use the energy of battery till the forklift can't move, you will shorten its working hours. When the display of battery shows low capacity, please charge it quickly.

5. Inspection for electrolyte

Forbidden to use the truck when the electrolyte is shortage.

Inspection for electrolyte level every week.

When electrolyte level is low, you must add distilled water to the level appointed.

WARNING


- The shortage of the electrolyte will cause the storage battery overheated, even cause the system part of storage battery and electric combustion.
- Vitriol include in the electrolyte can create burns, see doctor for emergency treatment quickly if touch it un-carefully.
- Splashing to the skin or eyes: wash with water 15~20 minutes;
- Splashing to the clothes: take it off immediately.
- Careless drinking: Instead of plenty of water and milk.
- Wearing glasses, rubber overshoes and rubber glove.

Remaining clean battery

Keep dryness and cleanness on the surface of battery .the poles for connection are also dry and clean. Operator must screw down the vent-cover of battery.

WARNING

- Do not use dry cloth or fiber cloth to clean the battery, avoiding static to cause the explosion.
- Pull out battery plug.
- Cleaning with wet cloth.
- Wearing glasses, rubber overshoes and rubber glove.

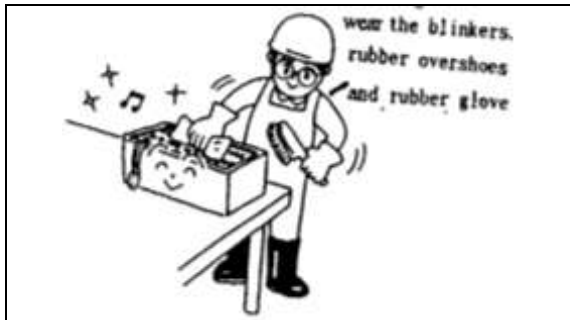

Measure in summer

In summer, water in the electrolyte is easy to evaporate, therefore, electrolyte must often be inspected if electrolyte is low, you must add distilled water to the level appointed.



WARNING


- **Filling with distilled water beyond the regulated range, Spilt electrolyte will cause corrosion and electricity leakage.**

Measure in winter

- Keep effective and good surrounding for charging.
- To prevent discharging, when it is cold, pull out the battery pin.
- Take measures, such as, covering battery for warmth.
- Charge in time after work.

Attentions for charging

- Please charge in the well-ventilated and appointed site.
- Mark 'no smoking' when charging.
- Inspect wire and electrical outlet.
- Before charging, please examine wire and electrical outlet whether been damaged.
- Check connections whether there is loosen, fasten if any.
- When wire or electrical outlet was damaged, please do not charge.

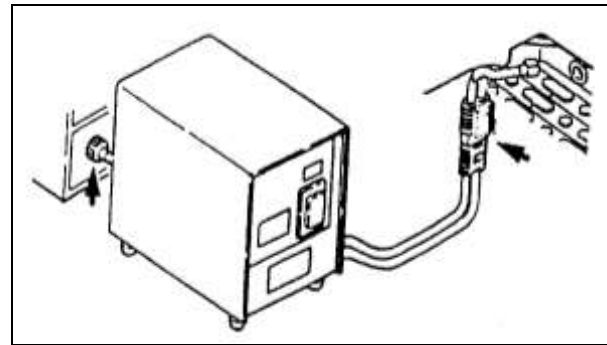

- Open forklift cover and battery lid when charging, in order to release the explosive gas .
- In the progress of charging, electrical source switch and battery pin are not to pull out, otherwise will destroy pin and electrical units. The normal procedure is that: press down the stopping button firstly, and then pick out the pin..

Charger

- The battery group is equipped with JCD-35A-24 type automatic high frequency computer to charge. The input power supply is AC single-phase with 220V, input current is not lower than 15A. The output voltage is DC36V and its max. charge current is 35A. The charging process is automatic, the detail of using method please refer to the charger operate manual.
- Connect with earth wire when the charge is used.
- To replace fuse, make sure that the input and output circuits are disconnected.
- Only professional person is allowed to disassemble the cover to check and repair.
- Do not rebuild or disassemble charger.
- In high temperature season, pay attention to prevent the charge from destroy caused by high temperature. Stop the

charge in short time when it is necessary.

- If a non-automatic charger is used, the charge voltage, current and charge time should be adjusted, and check the rate of battery electrolyte timely, so as to make sure that the charge of battery group is in good condition. The adjust parameters please refer to “battery charging” in the follow.
- Do not continuously charge.
- Continuously charge several batteries will cause charger overheat even be damaged. You can use the charger again after it has been rested for an hour.
- Select the charger according to battery’s voltage and capacity (refer to parameter table).

Battery charging

There are two charge mode can be adopted, including intelligent charging and constant current charging. For the first charging, adopt the constant current charging.

All the batteries of the new truck are not added electrolyte.

Electrolyte confect

Parameter Name	Type	D-420	D-500 D-630B
	Specific gravity of acid		1.265g/cm ³
Water and vitriol	Volume ratio	3.1:1	2.6:1
	Quality Ratio	1.7:1	1.65:1
Vitriol Ratio		1.835g/cm ³	
Vitriol standard		Suitable for GB4554-84 or special for battery	

Specification for distilled water:

Ingredient	Index
Appearance	No color crystal

Dry residue	%	≤0.005
Resistively(25 ⁰ C)	Ω·cm	≥7×10 ⁴
Fe	%	≤0.0004
Cl	%	≤0.0005
Mn	%	≤0.00002
Organic compound (calculating oxygen)	%	≤0.0002
Magnesium oxide	oxide+calcium %	≤0.005
Ammonium	%	≤0.0008
Nitrate or nitrite	%	≤0.0005

Confect course

- Wear the blinkers, rubber overshoes and rubber glove.
- Please pay attention to add the acid to water slowly, churning up at the same time, make it mix equality.



CAUTION

- **Don't pour the water to the acid, in order to avoid the temperature of liquid surface turning high suddenly to cause boiling and splashing out to hurt someone.**

- When the electrolyte is cooled to 30⁰C, pour it into battery. It is proper to pour the electrolyte 15-20mm above the protection piece (without a dobber) or 1mm distance between dobber and cover (with a dobber).
- Only when the temperature of the electrolyte is below 35⁰C (after about 3-5 hours), can be first charged.



CAUTION

- **The time that is from pouring the electrolyte into the battery to starting first charging can't be**

exceeded 12 hours.

- The specific charging cable should be connected to charging machine.



CAUTION

- **Be sure to notice that the polarity sign on the plug must keep comfortably to the out specific charging end node.**
- **When the charging cable is connected to the storage batteries, please pay attention to keeping comfortably on the polarity sign. Otherwise maybe you will damage your battery.**

- Inspect
The voltage value that the power needed is the number of the serial battery three times.
Inspect the charging machine.
Inspect every battery's polarity.

Truck type	Battery	Battery voltage (V)
1.0t~1.8t	D-420	48
2.0t~2.5t	D-630B	48
3.0t~3.5t	D-500	80

- Charging ways: (time, current as the form) .
 - a. 1st phase: most of the single battery's terminal voltage steps up to 2.4 V;
 - b. 2nd phase: the electrode give off a large number of bubbles, the voltage and the specific gravity steadies 4 hours and the charging value gets to 4.5-5 times than rated capacity.

Truck type	Battery type	Charging voltage (V)	Charging current(A)	
			1 st phase	2 nd phase
1.0t~1.8t	D-420	72	40	20
2.0 t~2.5t	D-630B	72	63	32
3.0 t~3.5t	D-500	120	50	25
Charging time (h)			35-45	35-45

- c. Adjusting the specific density and height for the electrolyte

If the specific gravity is smaller, it will be adjusted as follow: then take out some electrode from the battery, pour the compounded sulfuric acid that its specific gravity is 1.400g/cm³.

If the specific gravity is larger, it will be adjusted as follow: then take out some electrode from the battery, pour some distilled water, but you must keep the electrode height accord with demand

- d. After adjusting, you should keep charging on 1 hour; make the density of electrode even upper and under. At this time we have finished the first charging.

- e. Close the pouring plug and clean the battery surface acid, then you can use it.



CAUTION

- **During the charging, the temperature of electrolyte should not be exceeded 45°C . Otherwise you should low the temperature. If the temperature do not lowing, you should stop recharging, till the temperature drop down.**

Daily charging

- The battery that has been made the first charging and used regular, then charged again, is named daily charging.
- Its way is almost same as the first charging.
- The recharging value is 1.2 times than the last electric discharging. But the electric-change for new battery's fore five times should be 1.5 times than the last electric discharging.
- During any charge, the temperature of electrode should not be exceeded 45°C, otherwise it should be taken measures such as reducing artificially charging current or lowing the temperature. If the temperature doesn't drop, you should stop charging, till the temperature dropping down.

Truck type	Battery type	Charging voltage (V)	Charging current(A)	
			1 st phase	2 nd phase
1.0t~1.8t	D-420	72	55	25
2.0t~2.5t	D-630B	72	88	44
3.0t~3.5t	D-500	120	70	35
Charging time (h)			4-6	6-10

Adopt intelligent charging for the daily charging. The first five charging should using Equilibrium Charge according to the intelligent charger operate manual.

Equilibrium Charge

- During using of the battery, it often occur disequilibrium among the voltage, the density and the capacity.
- Compared to most of the batteries , often finds that single battery's proportion of voltage and electrolyte rises slowly during the course of charge and during the

course of discharge, its battery's proportion of voltage and electrolyte declines faster than most of other batteries.

- Make equilibrium charge in the following case:
 - a. Discharge voltage often drop down ending voltage;
 - b. Discharge current is often larger;
 - c. Not charge in time after discharge
 - d. The electrolyte is mixed with impurity with a little harm.
 - e. It often be charged deficient or has not been used for a long time;
 - f. After taking out the battery group for checking or cleaning settling.

The method of Equilibrium Charge:

- Firstly, charge the battery normally, and then rest for 1 hour after the end of charge.
- Charge it again with the current belongs to the second normally charge until the electrolyte gives off a large number of bubbles, then stop charging for 1 hour.
- Repeat it several times as mentioned above until the voltage and the density keep invariable and the battery gives off a large number of bubbles immediately when charge again.

Complementarity Charge

- If one day's work cannot be fulfilled with one charge, carry out opportunity charge during breaks.
- When the temperature of circumstance is low, carry out opportunity charge.

Charge for long-term storage

- Carry out equilibrium charge before storing.

- Carry out equilibrium charge once every 15 to 30 days during the storage period.
- The special orders storage battery carries on the charge according to "Accumulator Instruction for use".


Battery replacement

! CAUTION


- Be sure that the voltage, the capability, the size and the weight of the new battery are according with the forklift truck before replacing the battery.
- Forbid to use battery with different voltage or capacity or weight except being promised by factory.

Replacement step

- Stop the forklift truck on the plain ground, pull up the hand brake lever.
- Open the hood cover.
- Disconnect the battery plug.

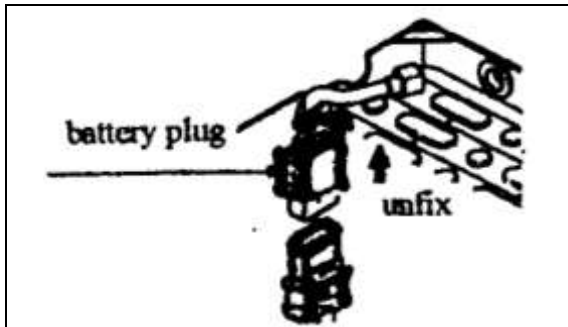


- Remove the lock pin.
- Use the proper tools to pull up the battery.

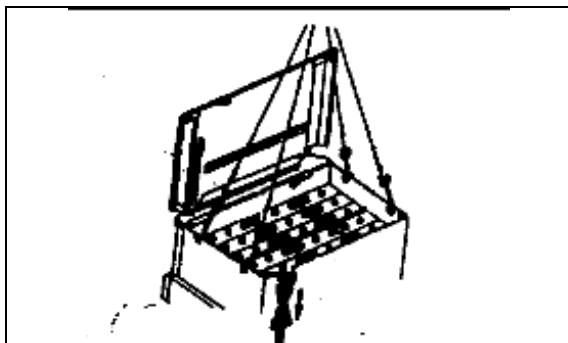

If you choose the forklift whose battery case

can be move out from the side, you can use the fork to prop out the battery case tray..

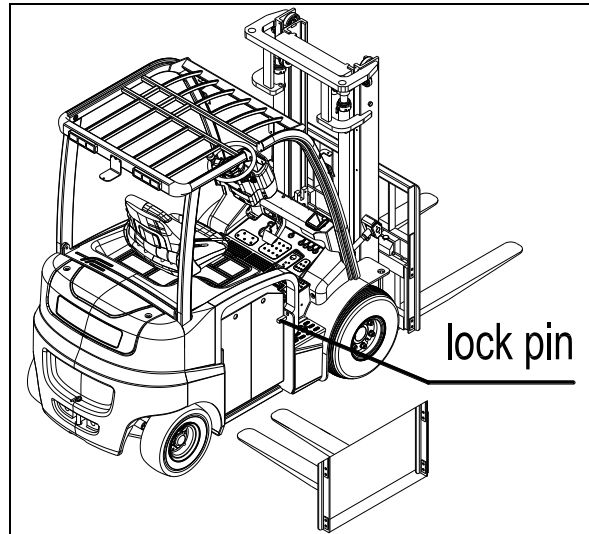

Battery idposal

Batteries may only be disposed of in accordance with national environmental protection regulations or disposal laws. The manufacturer's disposal instructions must be followed.

The weight and dimension of Battery

Weight	Model	1.0t~1.8t
Min. Weight		700 kg
Max. Weight		900 kg
Dimension		980 mmx465 mmx780 mm

Weight	Model	2.0t~2.5t
Min. Weight		930 kg
Max. Weight		1200 kg
Dimension		1028 mmx570 mmx780 mm

Weight	Model	3.0t~3.5t 2.5t Long Wheelbase
Min. Weight		1200 kg
Max. Weight		1500 kg

Dimension	1028 mmx710 mmx780 mm
-----------	-----------------------

! CAUTION

- The box must be pulled up with using 4 holes of the pothook at the same time. It is not allowed to pull up with only two holes. Otherwise, the asymmetric power will cause the battery damaged.
- The steering wheel and other equipment should not be bumped, avoid being damaged when pulling up the battery box.
- when you lift the battery side-on, you need to keep it stable and lift it slowly, to avoid hitting against the forklift which will break the battery.

- After exchange the full electricity of battery, plug into the lock pin, shut to the hood cover, and plug into the pin of the battery hard.

The waste electrolyte of the replaced battery should be dealt according to environment and protection law rather than reject at will.

The proportion and level of electrolyte

! CAUTION

- If the level of the electrolyte is low, using the battery will cause the battery over-heat and shorten the battery's life.



1. Inspect electrolyte

The battery without a dobber

It is proper to pour the electrolyte 15-20mm above the electrode plate.

The battery with a dobber

Depending on the dobber of the winded cover, and read the level position of the electrolyte.

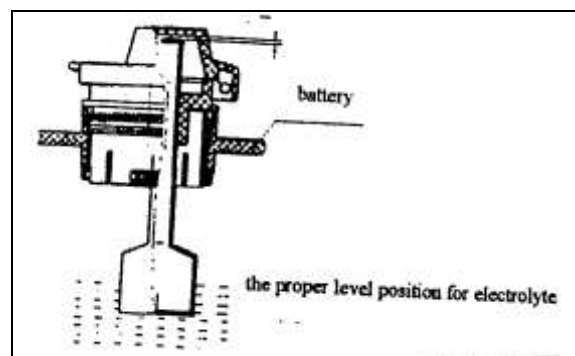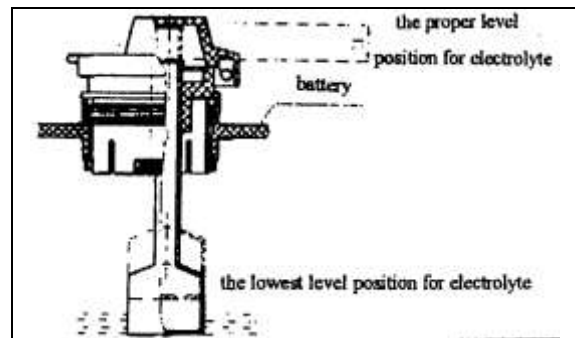



2. Replenish the distilled water

Wear the blinkers, rubber overshoes and rubber glove.

- Using the measuring cylinder to take out the distilled water with a certain quantity.
- Open the battery cover for every battery cell.
- Imbibe distilled water with injector and then supply it into the battery.

The battery with a dobber

When the red dobber rises, the white line is appeared, please stop to replenish the distilled water.

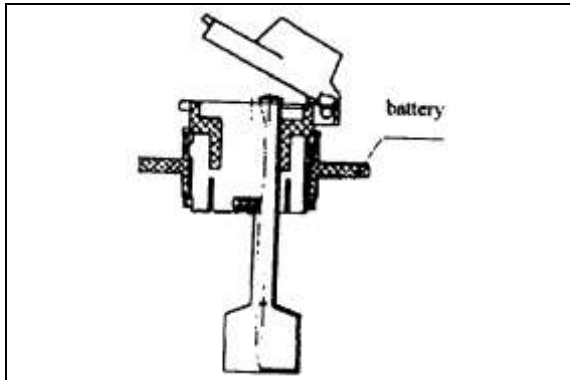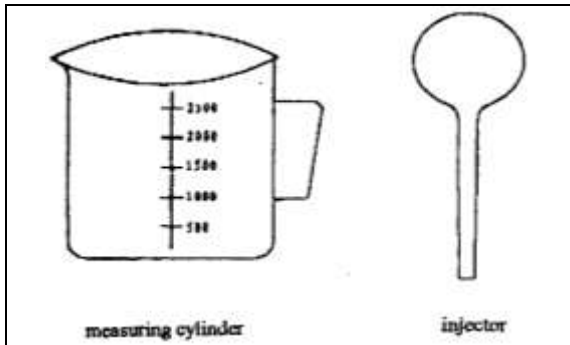

The battery without a dobber

When the electrolyte is above 15-20mm of the electrode plate, stop replenishing the distilled water.

- After replenishing the distilled water, close the pouring plug and battery cover.
- Using the damp cloth to clean the surface of every battery cell.

CAUTION

- It is not permitted to overrun the appointed tiptop level when replenishing the distilled water. Adding it too much will result in leakage of electrolyte, and it will damage the truck when charging and discharging..
- Draw it out with injector if adding it too much.


3. Read the specific gravity

- The specific gravity of the electrolyte should change follow the temperature.
 - a. Use thermometer to measure the temperature of electrolyte.

b. Put the straw of densimeter into electrolyte uprightly, extrude rubber tube with hand and the electrolyte will be sucked into the glasses tube and then the floater of the densimeter will float.


c. Numerate the reading of the densimeter.

Notice: The dobber of densimeter must rise uprightly without depending on the glass pipe.

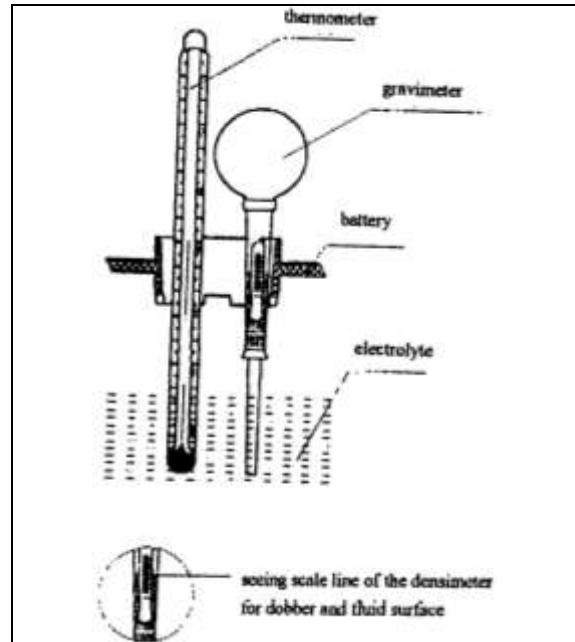

- Specific gravity measure

Using the densimeter to measure the specific gravity.

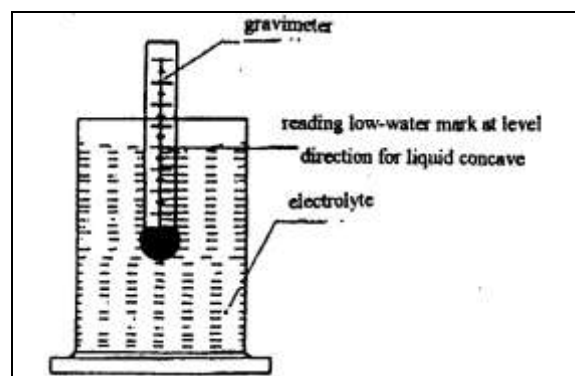

- Conversion of the specific gravity

The specific gravity at the standard temperature of 30°C should be converted as follow:

$$D_{30} = D_t + 0.0007(t - 30)$$

Where : D_{30} —the specific gravity at the standard temperature of 30°C


D_t —the specific gravity at the temperature of $t^{\circ}\text{C}$.

t — the temperature of the distilled water during convert.

The specific gravity that was refered in this book is measured all at the temperature of 30°C .

13. Maintenance summarization

- The fork lift truck needs inspection and maintenance periodically so as to make it in good working condition.
- Inspection and maintenance are usually ignored; you'd better find the problems and solve it in time.
- Use the orthodoxy spare part of HANGCHA GROUP CO., LTD.
- Don't use different oil when changing or adding oil.
- Forbid to repair the fork lift truck if you haven't been trained.
- Don't rave about oil and electrolyte used at will, and carry on handling according to the local environmental protection laws and regulations.
- Maintenance on schedule.
- After you make maintenance, you'd better make a record.

 **CAUTION**

- **No smoking.**
- **You should shut off key switch and pull off the plug before service(except some trouble shooting).**
- **Clean the electric part with compress air, do not with water.**
- **Do not place your hands, feet or any part of body into the gap between the mast and instrument.**

The weight of the counterweight:

Tonnage	1.0 t /1.5 t	1.8 t	2.0 t 2.5t Long Wheelbase	2.5 t	3.0 t	3.5 t
Weight	570±15 kg	780±20 kg	700 kg	1020 kg	1170 kg	1540 kg

2.5t Long Wheelbase

Preventive maintenance schedule

○ — Check, revise, adjust × — Replace
 D—Daily; W—Weekly; M—Monthly; T—Trimonthly; S—Semiannually

Battery

Item	Service required	Tools	D (8 h)	W (40 h)	M (166 h)	T (500 h)	S (1000 h)
Battery	Electrolyte level	Eyeballing		○	○	○	○
	Electrolyte proportion	Densimeter		○	○	○	○
	Battery quantity		○	○	○	○	○
	Terminal looseness		○	○	○	○	○
	Looseness of connecting wire		○	○	○	○	○
	Cleanness of the battery surface		○	○	○	○	○
	If there are tools on the battery.		○	○	○	○	○
	The tightness and smoothness of air cap			○			
	Far away from firing		○	○	○	○	○

Controller

Item	Service required	Tools	D (8 h)	W (40 h)	M (166 h)	T (500 h)	S (1000 h)
Controller	Check connector for worn					○	○
	Check contactor for running					○	○
	Check micromove switch for running					○	○
	Check the connection among motor, battery and power unit.					○	○
	Check the controller error diagnose system						First time 2 years

Motor

Item	Service required	Tools	D (8 h)	W (40 h)	M (166 h)	T (500 h)	S (1000 h)
Motor	Clean the foreign body on the motor				○	○	○
	Clean or replace the bearing						○
	Check the carbon brush and commutator for worn, whether spring is normal				○	○	○
	Whether the connection is correct and firm.				○	○	○
	Brush carbon powder on shift plate and shift device.					○	○

Driving system

Item	Service required	Tools	D (8 h)	W (40 h)	M (166 h)	T (500 h)	S (1000 h)
Heck wheel hub bolts for tighten torque	Check for noise		○	○	○	○	○
	Check for oil leaks		○	○	○	○	○
	Change oil						×
	Check wheel hub bearing for looseness, noise			○	○	○	○
	Clean and replace grease					×	×
	Leakage check		○	○	○	○	○
	Check wheel hub bolts for tighten torque				○	○	○

Wheels (Front, Rear Wheels)

Item	Service required	Tools	D (8 h)	W (40 h)	M (166 h)	T (500 h)	S (1000 h)
Tyre	Check for charge pressure	Barometer	○	○	○	○	○
	Check for abrasion, cracks or damage		○	○	○	○	○
	Check for spikes, stones or foreign matter				○	○	○
	Check the wheel hub for damage		○	○	○	○	○
	Check the split body wheel hub-bolts for looseness	Test hammer	○	○	○	○	○

Steering System

Item	Service required	Tools	D (8 h)	W (40 h)	M (166 h)	T (500 h)	S (1000 h)
Steering wheel	Check for clearance		○	○	○	○	○
	Check for radial looseness		○	○	○	○	○
	Check for axial looseness		○	○	○	○	○
	Check for operation		○	○	○	○	○
Steering Gear box and valve	Check mounting bolts for looseness			○	○	○	
Steering axle	Check king pins for looseness or damage				○	○	○
	Check for deflection, deformation ,cracks or damage				○	○	○
	Check for fixing condition	Test hammer			○	○	○
Steering cylinder	Check for operation		○	○	○	○	○
	Check for oil leaks		○	○	○	○	○
	Check for looseness when fixing or hinging				○	○	○

Brake system

Item	Service required	Tools	D (8 h)	W (40 h)	M (166 h)	T (500 h)	S (1000 h)
Brake pedal	Check for free travel	Scale	○	○	○	○	○
	Check for pedal travel		○	○	○	○	○
	Check for operation		○	○	○	○	○
	Check for air mixed in brake piping		○	○	○	○	○
Parking brake	Check for lever is securely locked and has sufficient lever stroke		○	○	○	○	○
	Check for operation		○	○	○	○	○
Rod, Cable, etc	Check for operation				○	○	○
	Check connections for looseness				○	○	○
	Check decelerator connector lug for abrasion					○	○
Hoses and Pipes	Check for damage, leakage or collapse				○	○	○
	Check connection or clamping parts for looseness				○	○	○
Brake master cylinder and wheel cylinder	Check for leakage		○	○	○	○	○
	Check for fluid level, Change brake fluid		○	○	○		×
	Check master cylinder and wheel cylinder for operation					○	○
	Check master cylinder and wheel cylinders for fluid leaks or damage					○	○
	Check master cylinder piston cup, and check valve for wear or damage change						×

Hydraulic system

Item	Service required	Tools	D (8 h)	W (40 h)	M (166 h)	T (500 h)	S (1000 h)
Hydraulic reservoir	Check for oil level, Change oil		○	○	○	○	×
	Clean suction strainer						○
	Clean foreign matter						○
Control lever	Check levers for looseness		○	○	○	○	○
	Check for operation		○	○	○	○	○
Control valve	Check for oil leak		○	○	○	○	○
	Check relief valve and tilt lock valve for operation				○	○	○
	Measure relief pressure	Oil press gauge					○
Hose, Piping Hose Reel & Swivel Joint	Check for oil leak, looseness, collapse, deformation and damage				○	○	○
	Replace hoses.						× 1-2 years
Hydraulic Pump	Check hydraulic pump for oil leak or noise		○	○	○	○	○
	Check pump drive gear for wear				○	○	○

Lifting system

Item	Service required	Tools	D (8 h)	W (40 h)	M (166 h)	T (500 h)	S (1000 h)
Chains & Sheave	Check chain for tension, damage or rust		○	○	○	○	○
	Add lubrication for chains				○	○	○
	Check connection of chain anchor pin and chain for looseness				○	○	○
	Check sheaves for deformation or damage				○	○	○
	Check sheave bearings for looseness				○	○	○
Attachment	Perform general inspection				○	○	○
Lifting cylinder and tilting cylinder	Check piston rod, rod screw and connection for looseness deformation or damage	Test hammer	○	○	○	○	○
	Check cylinders for operation		○	○	○	○	○
	Check for oil leak		○	○	○	○	○
	Check pins and cylinder bushings for wear or damage				○	○	○
Fork	Check forks for damage, deformation or wear				○	○	○
	Check for stopper pins for damage or wear					○	○
	Check fork base and hook welding for defective cracks or wear				○	○	○
Mast & Lift Bracket	Check weld between cross members with outer and inner masts for defective, cracks or damage				○	○	○
	Check tilt cylinder bracket and mast for defective weld, cracks or damage				○	○	○
	Check outer and inner masts for defective weld, cracks or damage				○	○	○
	Check for defective weld, cracks or damage of lift bracket				○	○	○
	Check roller bearings for looseness				○	○	○
	Check mast support bushings for wear or damage						○
	Check mast support cap bolts for looseness	Test hammer			○ (for 1st time)		○
	Check lift cylinder tall bolts, piston rod head bolts, U-bolts, and piston head guide bolts for looseness	Test hammer			○ (for 1st time)		○
	Check rollers, roller pins and welded parts for cracks or damage				○	○	○

Others

Item	Service required	Tools	D (8 h)	W (40 h)	M (166 h)	T (500 h)	S (1000 h)
Overhead Guard & Load Backrest	Check for tight installation	Test hammer	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Check for deformation, cracks or damage		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Turn signal	Check for proper operation and tight installation		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Horn	Check for proper operation and tight installation		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Light & Lamps	Check for proper operation and tight installation		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Buck-up Buzzer	Check for proper operation and tight installation		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Meters	Check meters for proper operation		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
wire	Wire damage or looseness			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Looseness of Electric circuit Joint				<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

Replace the key safe parts termly

- Some parts should be checked periodically to detect the damage, for improving the safety, users should replace the parts periodically which are listed in the table as follows.
- If the parts are abnormal before the replacing time is coming, it should be replaced immediately.

Key safe part's description	Term of using (year)
Brake hose or tube	1~2
Hydraulic hose for lifting system	1~2
Lifting chain	2~4
High-pressure hose , hose for hydraulic system	2
Brake oil cup	2~4
Brake master cylinder, brake slave cylinder cover and dust sleeve	1
Inner hermetic, rubber matter	2
Rubber pad of the steering axle	4

Table for bolts tightening torque

Unit: N·m

Bolt's diameter	Grade			
	4.6	5.6	6.6	8.8
6	4~5	5~7	6~8	9~12
8	10~12	12~15	14~18	22~29
10	20~25	25~31	29~39	44~58
12	35~44	44~54	49~64	76~107
14	54~69	69~88	83~98	121~162
16	88~108	108~137	127~157	189~252
18	118~147	147~186	176~216	260~347
20	167~206	206~265	245~314	369~492
22	225~284	284~343	343~431	502~669
24	294~370	370~441	441~539	638~850
27	441~519	539~686	637~784	933~1244

Note:

- Use entirely 8.8 grade bolt in the important joint position.
- Bolt's grade can be found in the head of the bolt, if it can't be found, the grade is 8.8.

Table for oil used in the truck

Name	Trademark, code name	Capability	Remark
Hydraulic oil	Normally: L- HM32 Cold environment :L-HV32	35 L	
Gear oil	GL-585W/90	4.5 L	1.0t~1.8t
		6 L	2.0t~3.5t
Brake Fluid	(Choice) HZY3 or DOT3	1.5 L	
Industrial Vaseline	2#		Electrode of storage battery
Lubrication grease	Automobile general lithium base lubricant		

14. The use, Install and Safety Rules of attachment

HANGCHA will choose attachment that according with International standard ISO2328 《Forklift pothook fork and install size of carriage》, such as clamp, rotator, paper roll clamp, carrying ram, side-shifter ect.

Attachment use

- Know well the content of nameplate on attachment, read the instruction manual before
- Usage.(Especially the manual from attachment company)Before operate the attachment, the people should be trained and obtain the qualification.
- It should be understand the basic capability and operate methods of attachment. Especially the admit load, lift height, size of cargo and adapt range of attachment.
- Operate the multi-functional attachment, such as with side-shifter, clamp or rotator, it is not allowed that two action at one time. Operate one functional then do another one.
- Prohibit the cargo at a high position when truck move with attachment. If the size of cargo is too big, prohibit the truck move on. Transport the cargo, make sure that the distance of bottom of cargo and ground is less than 300mm and mast incline back.
- The weight of cargo couldn't exceed the limited value of combination carrying capacity of forklift and attachment. It is not allowed that partial load at high position. It is a short time work for attachment with side-shifter. Partial load is around 100mm (Above 5 ton (including 5 ton),the side-shifter movable within 300mm.
- In the range of the projection forth 2m of the lower of attachment and cargo, prohibit stand to avoid the suddenness except the driver position under overhead.
- It is not allowed that an emergency brake in moving. Run slowly with load.
- Prohibit outside force when attachment working.
- It couldn't be use at malfeasance situation and overstep normal work range.
- When the attachment failure, prohibit use without check.

Check and maintenance:

- Check the clearance of carriage beam and below catch of attachment if accord the attachment manual.
- Check the rise catch is right on the flute of fork carriage.
- Use the auto currency lithic-grease per 500 hours to bearing surface.
- If the tighten firmware become flexible.
- Check the tie-in of hydraulic pressure loop, if tube attaint. Prohibit use after repair.
- Check the drive of attachment timing or turn the component if fray or block, change betimes.
- Check each element if in normal under load attachment is work in gear. If not, check the hydraulic pressure loop, find out the broken part, change air poof or whole loop part.

Attachment assy



WARNING

- **Untempered technology licence of our company, any refit at safety and capability to attachment is strict prohibit.**
- **Fact rating load capacity should be the least of rating load capacity, the load capacity of attachment, colligate load capacity of truck. Generally speaking, the colligate load capacity of truck is the least. Attachment load capacity just a count value of attachment pressure.**
- **Assy go to in reason, credibility, safety to avoid the attachment glide around carriage in using.**
- **After hang attachment, embed the rise catch block to the gap of top beam, let the offset of centre line of attachment and carriage is less than 50mm. Otherwise, it will be affect the landscape orientation stability of forklift.**
- **To these attachment with rotating function, such as paper roll clamp, bale clamp, muti-purpose clamp, drum clamp, it needs to weld chock block in the joint of carriage beam and attachment to prevent move from side to side in the operation.**
- **Assy the attachment of below catch orientation, it need to adjust the clearance between below catch and beam of carriage.**

15. Battery automatic filling water system(Optional)

Makeup of the automatic filling watering system:

- Automatic Watering Plug
- End Plug
- Floater
- T-piece & L-piece
- Flow Indicator (with filter)
- 6mm, 8mm ,10mm watering pipe
- Male & Female couplings (Kv10 and KV6, etc.)
- Water Tank




Application specification and installation

During the period of development and long-term practical usage, the leak tightness of automatic watering system has received complete recognition.


But when you use it, you need to keep the automatic watering system clean and there can't be any filth on the surface.

How to properly install the automatic watering system: Our automatic watering system is easy to operate, no need to finish watering the electrolyte in the storage battery by hand, time saving and labor saving, besides, it can extend the service life.

How to correctly install the water tank, choose proper floaters, how to confirm the specification & quantity of the installed accessories according to different types of battery, including correct application rules for automatic watering plug, watering pipe, T/L-pieces and male/female couplings as well as the cleaning of the flow indicator. We will give you a brief introduction for the above items as follows:

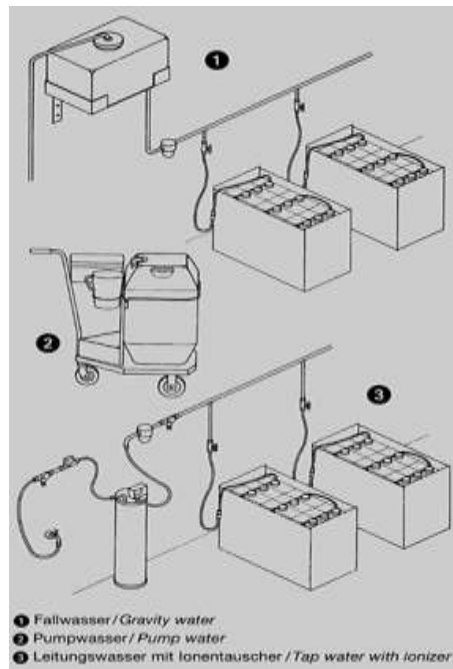

Battery spec.	Watering head	T-piece (6-10-6)	Flow indicator (filter)	6mm Watering pipe	10mm Watering pipe	end plug	Male/female K10	Water tank specification
	T-piece							
24 V	12 pcs	1 pcs	1 pcs	3m	5m	2pcs	1pcs	30L 1pcs
48 V	24 pcs	1 pcs	1 pcs	5m	5m	2pcs	1pcs	30L 1pcs
80 V	40 pcs	1 pcs	1 pcs	10m	5m	2pcs	1pcs	60L 1pcs

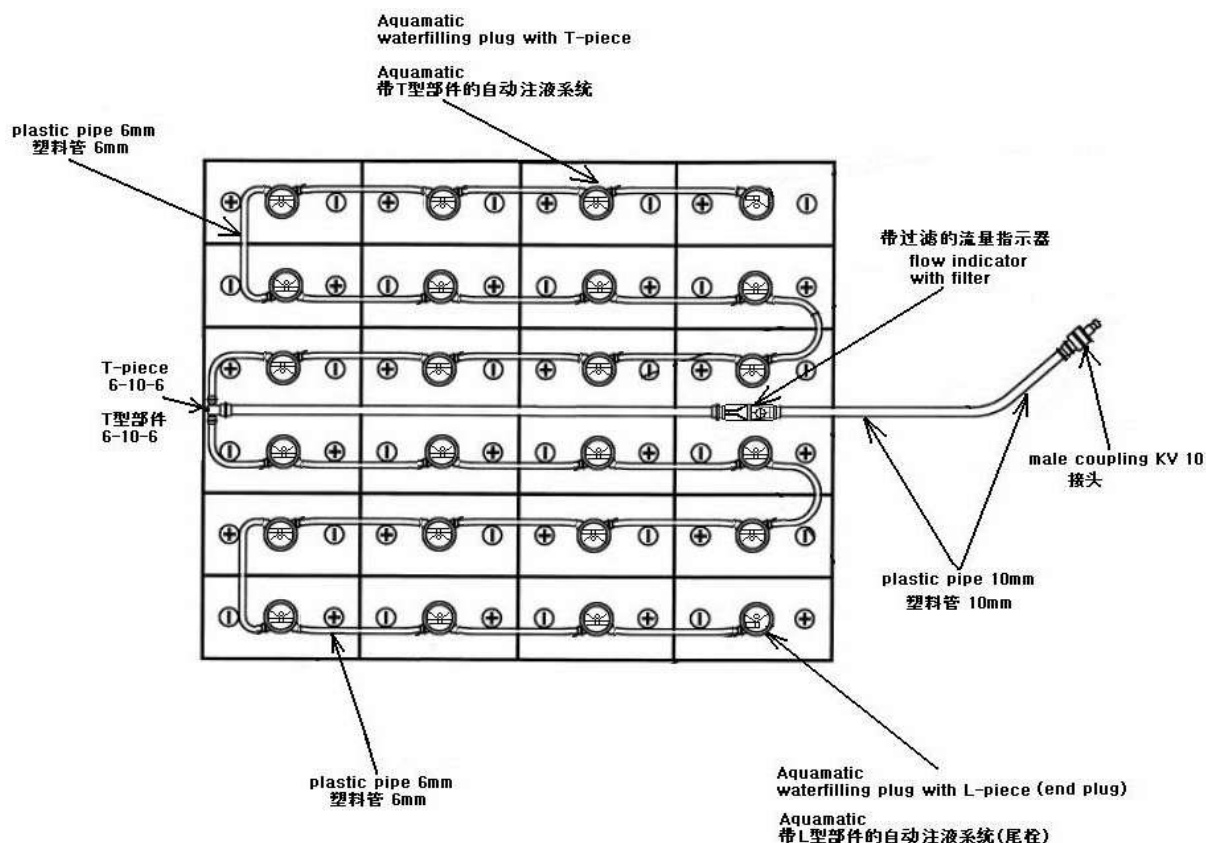


Automatic Watering System of Forklift Storage Battery-48V battery group

Floater

How to choose proper floaters correctly:

According to different storage battery, we have five kinds of floaters for you to choose. In order to achieve our expected standard and completely reflect the effectiveness of the automatic watering system, the most important thing is to choose proper floaters. At present our company can offer a rule for the client to make judgment and choose the type of floater. (see diagram)

The diagram the installation way of the floaters:

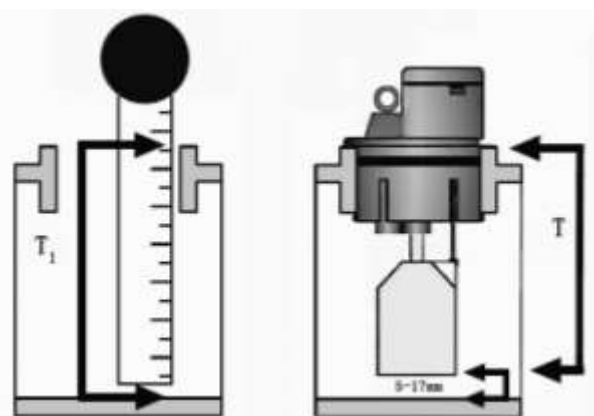

$T = T_1 - (5 \sim 17\text{mm})$

T approaching	47	50.5	58	61	72
Float	13	16.5	24	27	38

Watering pipe

Our company offers watering pipes of different types and the clients can choose what they need according to the specification of the battery. The watering pipe must be perfectly sealed with T-piece and L-piece.


Notes during the filling process:

- In order to ensure a safe watering process, we hereby recommend you to use flow indicator (with filter), the flow indicator with filter can not only timely indicate whether it finishes watering, but also avoid unclean impurities entering the battery to result interruption.
- The watering pressure should be within the range of 0.2-0.6, no less than 200mbar.
- You'd better conduct watering within the specified periods, because frequent filling will lead to overflowing for too much water, which will do great damage to the storage battery.

Note: Filling after finishing charging is the best ideal state, besides, do not filling before charging.

Cleaning

- During the period of development and long-term practical application, the leak tightness of automatic watering system has been completely approved.
- When you use it, you must pay much attention to keep the automatic watering system clean. No filth remaining on the surface.
- The users should regularly clean the watering plug for the plug is a kind of plastic good. Clean the surface directly with tap water and no need to use other detergent.

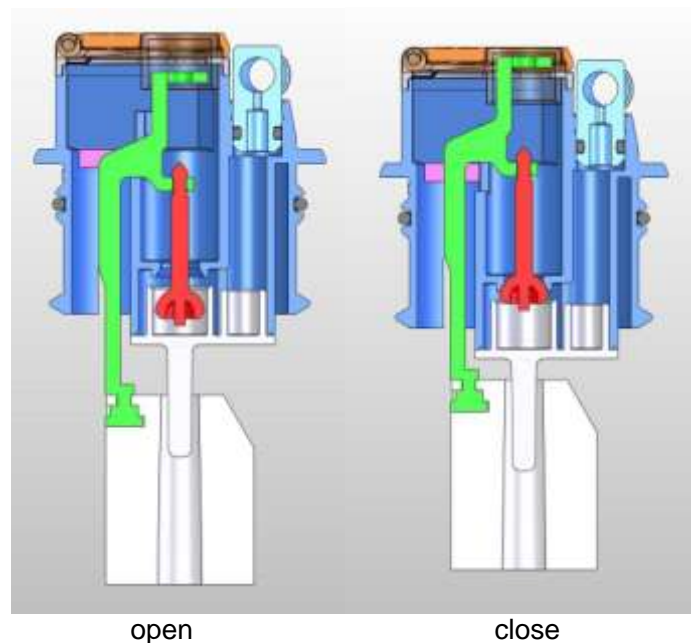

Structure Diagram of the Watering Plug

Characteristics of the automatic filling watering system

- No need to water by hand, labor saving.
- No malfunction factor leading to damage the battery.
- Easy & safe operation.
- Ensure a precise electrolyte level in every battery cell.
- Prevent leakage when watering.
- Effectively avoid the acid liquid to erode the storage battery and the electrolytic bath.
- Extend the service life of the battery.
- Environment protection.
- Save energy.

Function Introduction:

- Function of the automatic watering system: the floater of the automatic watering plug can reach correct water level, when the level rises in the cell, the pressure closes the valves and prevents further water entering the cell. When the system finishes watering, the flow indicator will stop running and you can see the water-level indicator clearly through the top of the watering system.
- Besides, the material of floater can avoid damage and ineffectiveness.
- As for the structure of automatic watering system, there is a terraced step, when the electrolyte gas rises to the watering plug, the terraced part can prevent the leakage of the electrolyte gas as well as quickly cool the electrolyte gas to make them go back to the storage battery in time.

16. Related Safety Instruction and Standard(For CE)

For trucks exporting to Europe or option.

The model by CE certification which according to the following instruction and standard:

- DIRECTIVE 2006/42/EC OF THE EUROPEAN PAMENT AND OF THE COUNCIL, DIRECTIVE 2000/14/EC OF THE EUROPEAN PAMENT AND OF THE COUNCIL, EN1726-1:1998(Engineering Industry truck safety standardize), EN12053:2001, EN1175-1:1998, EN13059:2002 coordinate standard.
- Main safety factor will be according with DIRECTIVE 2006/42/EC OF THE EUROPEAN PAMENT AND OF THE COUNCIL and EN1726-1:1998、 EN1175-1:1998 standard.
- The design and manufacture of electrical element comply with the low voltage standard 2006/95/EC.
- Noise will be according with EN12053:2001 and 2000/14/EC.
Sound pressure level on the operator's position is lower than 75dB(A), measurement uncertainty is 1.5dB(A).
Vibration parameters are measured according to standards of ISO5349-2:2001, EN13059:2002, ISO2631-1:1997, and the result meets the requirement of 2002/44/EC.
Whole body vibration is lower than 1.1m/s^2 .
- Electromagnetism compatibility is measured according to standard of EN12895:2000, and meets the requirement of 2004/108/EC.

HANGCHA GROUP CO. , LTD.

- Address For: OVERSEAS USERS
- Address: 88 Donghuan Road, Lin'an Economic Development Zone,Zhejiang,China
- Fax: 0086-571-88926789 0086-571-88132890 ■ ZIP:311305
- Web: <http://www.hcforlift.com> ■ E-mail: sales@hcforlift.com